



IMPRESSA J9.3 –
Quick Reference Guide

IMPRESSA J9.3 – Quick Reference Guide



These short instructions do not replace the 'IMPRESSA J9.3 Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine

You can initiate the rinse operation manually at any time.



Precondition: 'Please select product:' is displayed.


- ▶ Place a receptacle under the coffee spout.
- P** ▶ Press the P button.
'Maintenance status (1/6)'
- ▶ Press the 'Rinse the coffee system' button.
'Machine is rinsing.', water flows out of the coffee spout.
The rinse stops automatically and 'Please select product:' appears on the display.

Rinsing the cappuccino frother

After each milk preparation, the IMPRESSA prompts you to rinse the milk system.



Precondition: 'Rinse the milk system' is displayed.

- ▶ Place a receptacle under the cappuccino frother.
-  ▶ Press the Rotary Switch.
'Milk system is being rinsed.', water flows out of the cappuccino frother.
The rinse stops automatically and 'Please select product:' appears on the display.

Cleaning the cappuccino frother

To ensure that the cappuccino frother always works properly, you should clean it **daily** when you have been preparing milk. Your IMPRESSA will **not** prompt you to clean the cappuccino frother.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

i JURA milk system cleaner is available from stockists.

Precondition: 'Please select product:' is displayed.

- P**
- ▶ Press the P button.
'Maintenance status (1/6)'
 - ▶ Press the 'Clean the milk system' button.
'Cleaning agent for milk system'
 - ▶ Pour 250 ml of fresh water into a receptacle and add one capful of milk system cleaner.
 - ▶ Immerse the milk pipe in the receptacle.
 - ▶ Turn the setting wheel of the cappuccino frother to the Milk Foam ☺ or Milk ☒ position.
 - ▶ Place another receptacle under the cappuccino frother.
 - ▶ Press the 'Next' button.
'Milk system is being cleaned.', water flows out of the cappuccino frother.
'Water for cleaning milk system'
 - ▶ Rinse the receptacle thoroughly, fill it with 250 ml of fresh water and immerse the milk pipe in the water.
 - ▶ Empty the other receptacle and place it under the cappuccino frother again.
 - ⚠ ▶ Press the Maintenance button.
 - ▶ Press the 'Next' button.
'Milk system is being cleaned.', the cappuccino frother and the pipe are rinsed with fresh water.
'Please select product:' appears on the display.



Dismantling and rinsing the cappuccino frother




- ▶ Carefully pull the cappuccino frother down and off.
- ▶ Dismantle the cappuccino frother into its individual parts.
- ▶ Rinse all parts of the cappuccino frother thoroughly under running water.
- ▶ Reassemble the cappuccino frother.
- i** Ensure that all individual parts are correctly and firmly connected to ensure correct operation of the cappuccino frother.
- ▶ Firmly attach it to the connector.

Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using the CLARIS Blue filter cartridge. If the water hardness is 10° dH or more, we recommend using the filter cartridge.

- i** If you do not know the hardness of your water, you must find this out first.
- i** Perform the 'inserting the filter' operation without any interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: 'Please select product:' is displayed.

- P** ▶ Press the P button.
'Maintenance status (1/6)'
-  ▶ Turn the Rotary Switch until the programme item 'Maintenance settings (3/6)' is displayed.
 - ▶ Press the 'Filter' button.
'Filter'
 - ▶ Press the 'Active' button.
 - ▶ Press the 'Save' button.
'Saved' appears briefly on the display.
'Insert filter'.
- ▶ Remove the filter cartridge extension from the Welcome Pack.
- ▶ Fit the filter extension on top of a CLARIS Blue filter cartridge.
- ▶ Remove and empty the water tank.




- ▶ Open the filter holder and insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.

i After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle (at least 500 ml) under the cappuccino frother.
- ▶ Press the 'Next' button.
'Filter is being rinsed.', water flows out of the cappuccino frother.



- i** You can interrupt rinsing of the filter at any time by pressing any button. Press the Rotary Switch  to continue rinsing of the filter.
- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 500 ml. The machine heats up. **'Please select product:'** appears on the display. The filter is now activated.

Changing the filter

- i** After 50 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.
- i** After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.
- i** If the CLARIS Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.

Precondition: **'Change filter'** is displayed.

P ▶ Press the P button.

'Maintenance status (1/6)'

- ▶ Press the **'Change the filter'** button.
- 'Change the filter'**

i If you do not want to start changing the filter just yet, press the **'L'** button. The prompt **'Change filter'** remains active.

- ▶ Press the **'Next'** button.

'Change filter'

- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLARIS Blue filter cartridge and filter extension.
- ▶ Fit the filter extension on top of a **new** filter cartridge.
- ▶ Insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.





- ▶ Place a receptacle (at least 500 ml) under the cappuccino frother.
- ▶ Turn the setting wheel of the cappuccino frother to the Steam position ↕.
- ▶ Press the 'Next' button.
'Filter is being rinsed.', water flows out of the cappuccino frother.

- i** You can interrupt rinsing of the filter at any time by pressing any button. Press the Rotary Switch ⚙ to continue rinsing of the filter.
- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 500 ml. The machine heats up. 'Please select product' appears on the display.

Cleaning the machine

After 200 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

CAUTION If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from stockists.

Precondition: 'Clean machine' is displayed.

- P** ▶ Press the P button.
'Maintenance status (1/6)'
▶ Press the 'Clean' button.
'Clean'

- i** If you do not want to start cleaning just yet, press the 'L' button. The prompt 'Clean machine' remains active.
▶ Press the 'Next' button.
'Empty coffee grounds container'



- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Please press the Rotary Switch.’
- ▶ Place one receptacle under the coffee spout and another under the cappuccino frother.
- ⌚ ▶ Press the Rotary Switch.
‘Machine is being cleaned.’, water flows out of the coffee spout.
The operation is interrupted, **‘Add cleaning tablet’**.
- ▶ Open the cover of the filler funnel for ground coffee.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
‘Please press the Rotary Switch.’
- ⌚ ▶ Press the Rotary Switch.
‘Machine is being cleaned.’, water flows repeatedly out of the coffee spout and the cappuccino frother.
The operation is interrupted, **‘Empty coffee grounds container’**.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Cleaning is now complete. The IMPRESSA is once more ready for use.

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- ⚠ CAUTION** If the descaling agent comes into contact with the skin or eyes, this can cause irritation.
- ▶ Avoid contact with the skin or eyes.
 - ▶ Rinse off descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

- CAUTION** If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.
- ▶ Use only original JURA maintenance products.

- CAUTION** If the descaling operation is interrupted, there may be damage to the machine.
- ▶ Allow the descaling programme to run to the end.

CAUTION If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.

- ▶ Clean up any splashes immediately.

- i** The descaling programme lasts approximately 45 minutes.
- i** JURA descaling tablets are available from stockists.
- i** If you use a CLARIS Blue filter cartridge and this is activated, you will not be prompted to descale.

Precondition: ‘Decalcify machine’ is displayed.

- P** ▶ Press the P button.

‘Maintenance status (1/6)’

- ▶ Press the ‘Descalc’ button.

‘Descalc’

- i** If you do not want to start descaling just yet, press the ‘L’ button. The prompt ‘Decalcify machine’ remains active.

- ▶ Press the ‘Next’ button.

‘Empty drip tray’

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

‘Pour descaling agent into water tank’.

- ▶ Remove and empty the water tank.

- ▶ Completely dissolve the contents of one blister (three JURA descaling tablets) in a receptacle holding 500 ml of water. This may take several minutes.

- ▶ Pour the solution into the empty water tank and insert it into the machine.

‘Please press the Rotary Switch.’

- ▶ Remove the cappuccino frother.


- ▶ Place a receptacle (at least 500 ml) under the connector of the cappuccino frother.



- ▶ Press the Rotary Switch.

‘Machine is being descaled.’, water flows repeatedly out of the connector of the cappuccino frother.

The operation stops automatically, ‘Empty drip tray’.

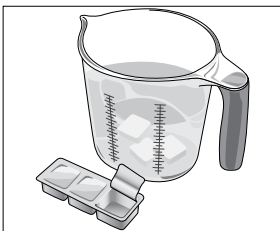

- ▶ Empty the receptacle under the connector of the cappuccino frother.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

'Fill water tank'

- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

'Please press the Rotary Switch.'

- ▶ Refit the cappuccino frother.
- ▶ Place a receptacle under the cappuccino frother and another under the coffee spout.



- ▶ Press the Rotary Switch.

'Machine is being descaled.', water flows out of the cappuccino frother and the coffee spout.

'Machine is heating.', **'Machine is rinsing.'**, water flows out of the coffee spout.

The operation stops automatically, **'Empty drip tray'**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Descaling is now complete. The IMPRESSA is once more ready for use.

- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

