

## Cleaning the cappuccino system



If you use milk products, you should clean the cappuccino system daily.

- Fill a container with 2.5 dl of water
- Add 1 capful (max. 15 ml) of Auto-Cappuccino Cleaner
- Dip milk suction tube into this mixture
- Position container (approx. 0.5 litre) under the Professional Cappuccino Frother
- Press the steam key ☺☺

As soon as the container is empty:

- Fill a container with fresh tap water
- Dip milk suction tube into the container
- Press the steam key ☺☺

The machine is ready for use as soon as the tap water has run through

## Cleaning the Professional Cappuccino Frother



In addition to using the cappuccino cleaning system, you should also remove the Professional Cappuccino Frother regularly and rinse it under running water.

- Remove the Professional Cappuccino Frother from the IMPRESSA S9/S7 avantgarde
- Dismantle the frother
- Rinse all parts of the frother under running water
- Reassemble the frother and reattach to machine
- Please make sure that the aperture of the air supply (= red circle) is rinsed very carefully and is free of impureness. Please don't clean the frother with sharp tools!

**IMPRESSA**  
*if you love coffee*


Art. 66815 – S9 GB – 10/2006



**IMPRESSA S9 / S7 avantgarde**  
Short operating instructions

## First use



- Switch on main switch (I)
- Press operating button 
- Fill water tank
- Fill bean container





Display text: **SPRACHE DEUTSCH**

- Open the programming door
- Turn Rotary Switch until desired language appears
- Press Rotary Switch to confirm selection




Display text: **FILL SYSTEM / PRESS STEAM**

- Place container under Professional Cappuccino Frother
  - Press one of the steam keys  
- System fills automatically



Display text: **PRESS RINSE**


- Place container under coffee spout
  - Press maintenance key 
- The pipes are rinsed with fresh water

The machine is ready for use

## Insert filter (first use)



- Open the programming door
  - Press Rotary Switch until you hear an acoustic signal
- Display text: **FILTER NO**
- Press Rotary Switch to start the maintenance menu
  - Turn Rotary Switch until **FILTER YES** appears on the display
  - Press Rotary Switch to confirm setting

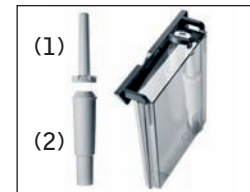



- Remove water tank and empty it
- Display text: **INSERT FILTER / PRESS STEAM**
- Open cartridge holder
  - Fix extension (1) in position on top of CLARIS plus filter cartridge (2) (see Welcome Pack)
  - Use gentle pressure to insert filter cartridge in water tank
  - Close cartridge holder (it clicks audibly into place)



- Fill the water tank and reinsert



- Position container (approx. 0.5 litre) under Professional Cappuccino Frother
  - Press one of the steam keys  
- Filter rinse stops automatically

The machine is ready for use

## Cleaning (duration: approx. 15 minutes)



Display text: **CLEAN MACHINE**

- Press maintenance key 

Displaytext: **EMPTY TRAY / GROUNDS**

- Empty drip tray and coffee grounds container and reinsert



- Place container (approx. 0.5 litre) under coffee spout


Display text: **PRESS RINSE**

- Press maintenance key 

Wait until an acoustic signal is heard



Display text: **ADD TABLET / PRESS RINSE**

- Open funnel cover for pre-ground coffee powder
- Drop in an original JURA cleaning tablet and close cover
- Press maintenance key 

Wait until an acoustic signal is heard



Display text: **EMPTY TRAY / GROUNDS**

- Empty drip tray and coffee grounds container and reinsert

The machine is ready for use


## Changing the filter

After 50 litres of water, the filter is no longer effective.  
A reminder to change the filter appears on the display.





Display text: **CHANGE FILTER**

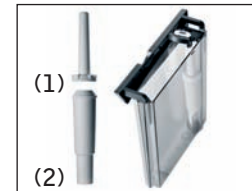- Press maintenance key 



- Remove water tank and empty it
- Open cartridge holder
- Remove the used CLARIS plus filter cartridge from water tank
- Fix extension (1) in position on top of CLARIS plus filter cartridge (2)
- Use gentle pressure to insert filter cartridge in water tank
- Close cartridge holder (it clicks audibly into place)
- Fill the water tank and reinsert



- Position container (approx. 0.5 litre) under Professional Cappuccino Frother
  - Press one of the steam keys  
- Filter rinse stops automatically

The machine is ready for use

## Decalcifying (duration: approx. 50 minutes)



Display text: **DE-SCALE MACHINE**

- Press maintenance key 

Display text: **EMPTY TRAY / GROUNDS**



- Empty drip tray and coffee grounds container and reinsert

Display text: **AGENT IN TANK / PRESS STEAM**





- Remove water tank and empty it
- Completely dissolve contents of one blister (3 tablets) in 0.6 litre of water
- Pour solution into water tank
- Reinsert water tank




- Remove the Professional Cappuccino Frother
  - Place container under the connecting part
  - Press one of the steam keys  
- Wait until an acoustic signal is heard



Display text: **OPEN TAP**

- Place container under hot water spout
  - Open the hot water key 
- Wait until an acoustic signal is heard
- Close the hot water key 
- Wait until an acoustic signal is heard

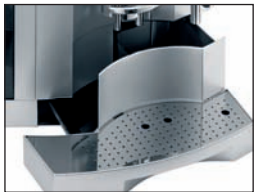



Display text: **EMPTY TRAY / GROUNDS**

- Empty drip tray and coffee grounds container and reinsert

## Decalcifying (continuation)





Display text: **FILL / RINSE WATER TANK**

- Rinse water tank well, fill with fresh, cold tap water and reinsert
  - Place container under the connecting part
  - Press one of the steam keys  
- Wait until an acoustic signal is heard



Displaytext: **OPEN TAP**

- Place container under hot water spout
  - Open the hot water key 
- Wait until an acoustic signal is heard
- Close the hot water key 
- Wait until an acoustic signal is heard



Display text: **EMPTY TRAY / GROUNDS**

- Empty drip tray and coffee grounds container and reinsert

The machine is ready for use