




## IMPRESSA Z7 – Quick Reference Guide

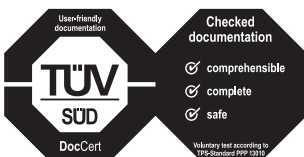

The 'IMPRESSA Z7 Instructions for Use' together with these short instructions 'IMPRESSA Z7 – Quick Reference Guide' has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.

## IMPRESSA Z7 – Quick Reference Guide



These short instructions do not replace the 'IMPRESSA Z7 Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

### Rinsing the machine



You can initiate the rinse operation manually at any time.

**Precondition:** **COFFEE READY** is displayed.


- ▶ Place a receptacle under the coffee spout.
- ▶ Press **and hold** the Rotary Switch until **MAINTENANCE** appears.
- ▶ Press the Rotary Switch to enter the programme item. **CAPPUCCINO CLEAN**
- ▶ Turn the Rotary Switch until **MACHINE RINSING** is displayed.
- ▶ Press the Rotary Switch to initiate the rinse operation. **RINSING**  
Rinsing stops automatically and **COFFEE READY** appears on the display.

### Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using the CLARIS Blue filter cartridge.

- ▶ Perform the 'inserting the filter' operation without any interruptions. This will ensure that your IMPRESSA always produces its best.

**Precondition:** **COFFEE READY** is displayed.

- ▶ Press **and hold** the Rotary Switch until **MAINTENANCE** appears on the display.
- ▶ Turn the Rotary Switch until **FILTER** is displayed.
- ▶ Press the Rotary Switch to enter the programme item. **FILTER NO**
- ▶ Turn the Rotary Switch until **FILTER YES** is displayed.
- ▶ Press the Rotary Switch to confirm the setting. **CONFIRMED** appears briefly on the display. **INSERT FILTER / PRESS BUTTON**, the Maintenance button  lights up.

- ▶ Remove the filter cartridge extension from the Welcome Pack.
- ▶ Fit the filter extension on top of a CLARIS Blue filter cartridge.
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.



**i** After two months, the filter will cease to work. You can check the elapsed time by referring to the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle (at least 500 ml) under the cappuccino frother.



⚠ ▶ Press the Maintenance button.  
**FILTER RINS.** Water flows out of the cappuccino frother.

**i** You can interrupt rinsing of the filter at any time by pressing any button. Press the Maintenance button ⚠ to continue rinsing of the filter.

**i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 500 ml. **COFFEE READY** appears on the display. The filter is activated.

## Changing the filter

**i** After 50 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.

**i** After two months, the filter will cease to work. You can check the elapsed time by referring to the date plate on the filter holder in the water tank.

**i** If the CLARIS Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.

**Precondition:** COFFEE READY / FILTER CHANGE is displayed and the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

CHANGE TIME 20 MIN / START YES


**i** If you do not want to start changing the filter just yet, turn the Rotary Switch until CHANGE/START NO is displayed. Press the Rotary Switch to exit the maintenance programme. The prompt to change the filter remains active.

-  ▶ Press the Maintenance button.

CHANGE FILTER / PRESS BUTTON


- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLARIS Blue filter cartridge and extension piece.
- ▶ Fit the filter extension on top of a new filter cartridge.
- ▶ Insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.



- ▶ Place a receptacle (at least 500 ml) under the cappuccino frother.
- ▶ Turn the setting wheel of the cappuccino frother to the steam position .

-  ▶ Press the Maintenance button.

FILTER RINS., water flows out of the frother.

**i** You can interrupt rinsing of the filter at any time by pressing any button. Press the Maintenance button  to continue rinsing of the filter.

**i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.




Rinsing of the filter stops automatically after approximately 500 ml. The IMPRESSA heats up and is once more ready for use.

## Rinsing the cappuccino frother



After each milk preparation, the IMPRESSA prompts you to run a cappuccino rinse.

**Precondition:** **COFFEE READY / CAPPU RINSE** is displayed and the Maintenance button  lights up.

- ▶ Place a receptacle under the cappuccino frother.
-  ▶ Press the Maintenance button.  
**CAPPUCCINO RINSING**, the cappuccino frother is rinsed.  
**COFFEE READY**

## Cleaning the cappuccino frother

To ensure that the cappuccino frother always works properly, you should clean it **daily** when you have been preparing milk. Your IMPRESSA will **not** prompt you to clean the cappuccino frother.






### CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.


 JURA Cappuccino Cleaner is available from stockists.

**Precondition:** **COFFEE READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **MAINTENANCE** appears.
-  ▶ Press the Rotary Switch to enter the programme item.  
**CAPPUCCINO CLEAN**
-  ▶ Press the Rotary Switch.  
**CLEANER FOR CAPPUCCINO / PRESS BUTTON**
  - ▶ Pour 250 ml of fresh water into a receptacle and add one capful (max. 15 ml) of Cappuccino Cleaner.
  - ▶ Immerse the milk pipe in the receptacle.
  - ▶ Turn the setting wheel of the cappuccino frother to the milk foam  or milk  position.



### Dismantling and rinsing the cappuccino frother

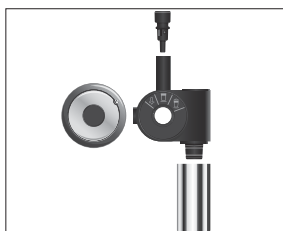

### Cleaning the machine

#### CAUTION

After 220 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from stockists.

**Precondition:** **COFFEE READY** / **CLEAN** is displayed and the Maintenance button **⚡** lights up.

- ▶ Place another receptacle under the cappuccino frother.
- ⚡** ▶ Press the Maintenance button.  
**CAFFUCCINO CLEANING**, the cappuccino frother and the pipe are cleaned.  
**WATER FOR CAFFUCCINO** / **PRESS BUTTON**
- ▶ Rinse the receptacle thoroughly, fill it with 250 ml of fresh water and immerse the milk pipe in the water.
- ▶ Empty the other receptacle and place it under the cappuccino frother again.
- ⚡** ▶ Press the Maintenance button.  
**CAFFUCCINO CLEANING**, the cappuccino frother and the pipe are rinsed with fresh water.  
**COFFEE READY** appears on the display.

- ▶ Carefully pull the cappuccino frother down and off.

- ▶ Dismantle the frother completely.
- ▶ Rinse all frother parts thoroughly under running water.
- ▶ Reassemble the cappuccino frother.

- i** Ensure that all individual parts are correctly and firmly connected to ensure correct operation of the cappuccino frother.

- ▶ Firmly attach it to the connector.

- ⚠ ▶ Press the Maintenance button.

CLEANING TIME 20 MIN / START YES

- i If you do not want to start cleaning just yet, turn the Rotary Switch until CLEANING / START NO is displayed. Press the Rotary Switch to exit the maintenance programme. The prompt to clean the machine remains active.

- ⚠ ▶ Press the Maintenance button.

TRAY / EMPTY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

PRESS BUTTON, the Maintenance button ⚠ lights up.

- ▶ Place one receptacle under the coffee spout and another under the cappuccino frother.

- ⚠ ▶ Press the Maintenance button.

MACHINE IS CLEANING, water flows out of the coffee spout.

The operation is interrupted, ADD TABLET.

- ▶ Open the cover of the bean container.

- ▶ Open the cover of the filler funnel for preground coffee.

- ▶ Insert a JURA cleaning tablet into the filler funnel.

- ▶ Close the cover of the filler funnel and the cover of the bean container.

PRESS BUTTON, the Maintenance button ⚠ lights up.


- ⚠ ▶ Press the Maintenance button.

MACHINE IS CLEANING, water flows repeatedly out of the coffee spout and the cappuccino frother.

The operation is interrupted, TRAY / GROUNDS EMPTY.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Cleaning is now complete. The IMPRESSA is once more ready for use.

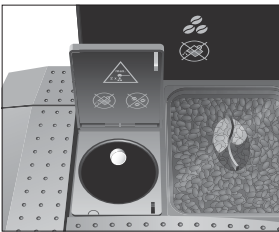

## Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

**⚠ CAUTION** If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse off descaling agent with clean water. Should you get any descaling agent in your eye, seek medical attention.

**CAUTION** If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

**CAUTION** If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.

**CAUTION** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.

- ▶ Clean up any splashes immediately.

**i** The descaling programme lasts approximately 45 minutes.

**i** JURA descaling tablets are available from stockists.

**i** If you use a CLARIS Blue filter cartridge and this is activated, you will not be prompted to descale.

**Precondition:** **COFFEE READY / DESCALE** is displayed and the Maintenance button **⚡** lights up.

- ⚡** ▶ Press the Maintenance button.

**DECALCIFYING TIME 45 MIN / START YES**

**i** If you do not want to start descaling just yet, turn the Rotary Switch until **DECALCIFYING / START NO** is displayed. Press the Rotary Switch to exit the maintenance programme. The prompt to descale the machine remains active.


- ⚡** ▶ Press the Maintenance button.

**TRAY / GROUNDS EMPTY**

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

**SOLVENT IN TANK**



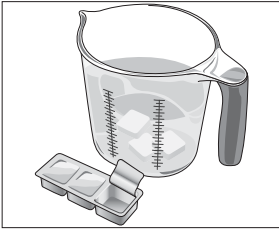

- ▶ Remove and empty the water tank.
- ▶ Completely dissolve the contents of one blister (three JURA descaling tablets) in a receptacle holding 600 ml of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.  
**SOLVENT IN TANK / PRESS BUTTON**, the Maintenance button ☸ lights up.
- ▶ Remove the cappuccino frother.
- ▶ Place one receptacle under the hot-water spout and another under the connector of the cappuccino frother.
- ☸ ▶ Press the Maintenance button.  
**MACHINE IS DECALCIFYING**  
Water flows out of the hot-water spout and the connector of the cappuccino frother. The Maintenance button flashes during the descaling operation.  
The operation stops automatically, **TRAY / GROUNDS EMPTY**
- ▶ Empty the receptacles under the hot-water spout and the connector of the cappuccino frother.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
**WATER TANK FILL**
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.  
**PRESS BUTTON**, the Maintenance button ☸ lights up.
- ▶ Refit the cappuccino frother.
- ▶ Place one receptacle under the hot-water and coffee spout and another under the cappuccino frother.
- ☸ ▶ Press the Maintenance button.  
**MACHINE IS DECALCIFYING**, water flows out of the cappuccino frother and the hot-water spout.  
**UNIT IS HEATING, RINSING**, water flows out of the coffee spout.  
The operation stops automatically, **TRAY / GROUNDS EMPTY**

IMPRESSA Z7 – Quick Reference Guide

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Descaling is now complete. The IMPRESSA heats up and is once more ready for use.

- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.