

# GIGA X3c Professional



## Descaling the machine

Approximate duration 50 min.

Equipment required:

Descaling tablets

Tub of 36 (Art. 70751)

Pack of 3 (Art. 61848)




These short instructions do not replace the 'GIGA X3c Professional Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.



Precondition: »Decalcify machine.«  
(or »Please select product:«)






»Maintenance status (1/5)«

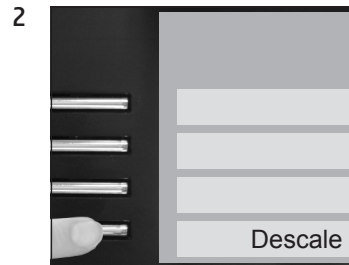

»Empty drip tray.«

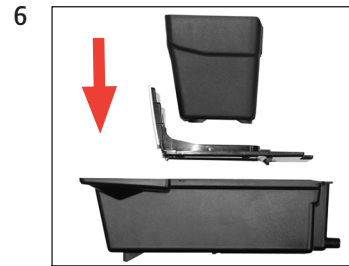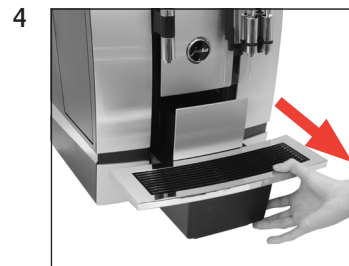




»Pour descaling agent into water tank.«

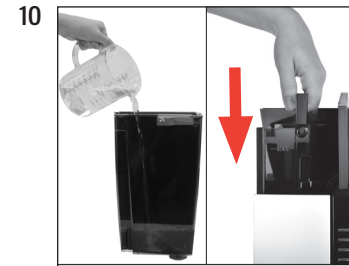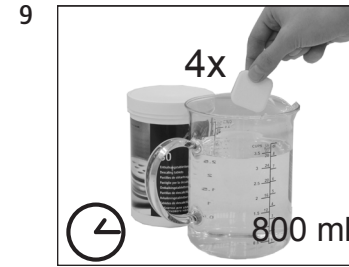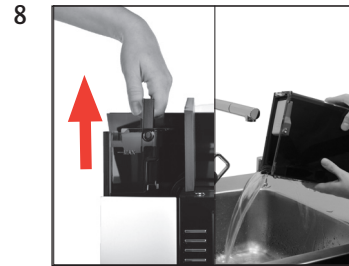


»Press the Rotary Switch.«




»Machine is being descaled.«  
»Empty drip tray.«

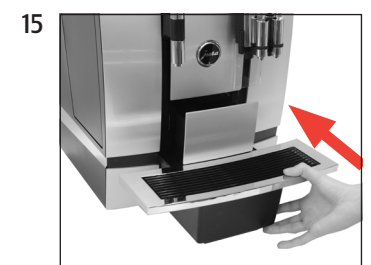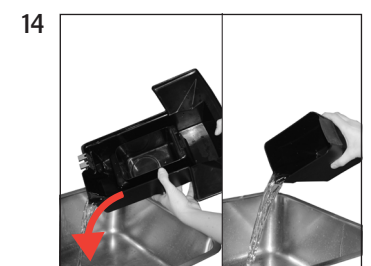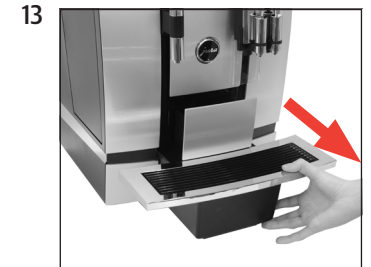

»Fill water tank.«


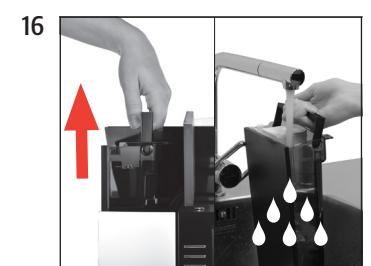


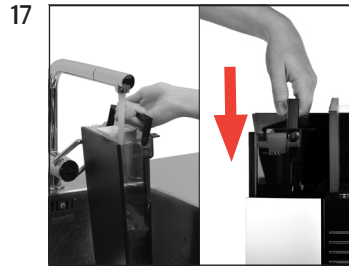

»Press the Rotary Switch.«



»Machine is being descaled.«  
»Empty drip tray.«

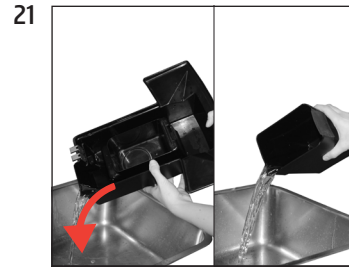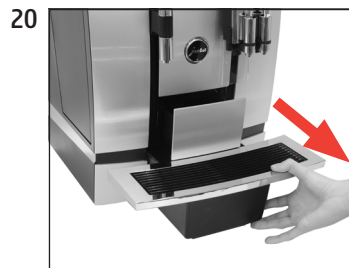

»Descale« / »Descaling complete.«

»Please select product:«