jura



IMPRESSA XF50 Short operating instructions

# Control elements



### Control elements

- 1. Rotary Switch
- 2. Illuminated ring
- 3. ON/OFF key
- 4. Programming key
- 5. Draw-off key 1 cup
- 6. Draw-off key 2 cups
- 7. Maintenance key
- 8. Steam pre-selection key
- 9. Display dialog system
- 10. Water tank with carrying handle
- 11. Filler funnel for pre-ground coffee
- 12. Bean tank cover
- 13. Aroma preservation cover
- 14. Steam/hot water draw-off valve
- 15. Replaceable Easy-Auto-Cappuccino Frother mounted in illustration
- 16. Replaceable hot water nozzle
- 17. Height-adjustable coffee spout
- 18. Coffee grounds container
- 19. Drip grate
- 20. Drip tray
- 21. Power Switch
- 22. Metal shelf

### First use



- Press power switch (I) (on rear)
- Fill bean tank
- Press ON / OFF key 🖒



### Display text: SPRACHE - DEUTSCH

- Turn the Rotary Switch until the required language is displayed
- Confirm selected language by pressing the Rotary Switch
- Lift out water tank
- Fill water tank and place back into the machine



### Display text: OPEN TAP

 
- Place receptacle under hot water nozzle
- Turn tap to position ↓
- Turn it back to the initial position when display prompts you to do so



### Display text: FRESS - MAINT.

- Place receptacle under height-adjustable coffee spout
- Press maintenance key ♦♦♦ when display prompts you to do so

## Insert filter (first use)



- Remove water tank and empty it
- Flip up cartridge (1) holder
- Insert filter cartridge (2) into water tank, applying slight pressure
- Close cartridge holder (1) (engages audibly)
- Fill water tank and insert



■ Hold programming key P down until the display shows FILTER



- Confirm setting by pressing the Rotary Switch
- Turn Rotary Switch until the display shows YES
- Confirm setting by pressing the Rotary Switch



- Place a receptacle (ca. 1 litre) under the hot water nozzle
- Turn tap to position 🐰
- Turn it back to the initial position when display prompts you to do so

# Cleaning (duration: approx. 15 minutes)



Display text: READY - CLEAN

- Press maintenance key ♦ down until the display shows EMPTY

   TRAY
- Empty drip and grounds tray and place back into the machine



- Place a receptacle (ca. 1 litre) under the the coffee spout
- Press maintenance key ♣️



- Drop a original JURA cleaning tablet into the filler funnel for ground coffee when display prompts you to do so
- Close lid
- Press maintenance key



- Empty drip and grounds tray and place back into machine when display prompts you to do so
- Wipe out filler funnel for ground coffee with a dry cloth after the cleaning program has finished.

## Changing the filter



Display text: READY - FILTER

NOTE:

■ After having used 50 litres of water or after two months at the latest, the filter cartridge will be used up.



- Switch machine off using the ON / OFF key 🖒
- Press maintenance key ♣♠ until the display shows:

  CHG FILTER OPEN TAP



- Remove and empty water tank
- Flip up cartridge holder (1)
- Remove old CLARIS plus filter cartridge from the tank
- Place new filter cartridge (2) into water tank, applying slight pressure
- Close cartridge holder (1) (engages audibly)



- Fill water tank and place back into machine
- Place a receptacle (ca. 1 litre) under the hot water nozzle
- Turn tap to position ↓
- Turn it back to the initial position when display prompts you to do so

# Decalcifying (duration: approx. 40 minutes)



Display text: READY - CALCIFIED

■ Switch machine off using the ON / OFF key 🖰



- Hold maintenance key ♣♠ down until the display shows EMPTY - TRAY
- Empty drip and grounds tray and place back into machine
- Remove Easy-Auto-Cappuccino Frother or hot water nozzle



- Remove water tank and empty it
- Completely dissolve contents of a blister (3 tablets) in 0.6 litres of water
- Pour solution into the empty water tank
- Place water tank back into machine



- Place a receptacle (ca. 1 litre) under the spout
- Turn tap to position 🕌
- Turn it back to the initial position when display prompts you to do so

## Decalcifying (continuation)



- Empty drip and grounds tray and place back into machine when display prompts you to do so
- Rinse water tank well, fill with cold, fresh tap water and place it back into the machine



- Place receptacle under spout
- Turn tap to position ↓
- Turn it back to the initial position when display prompts you to do so



- Empty drip and grounds tray and place back into machine when display prompts you to do so
- Fit Easy-Auto-Cappuccino Frother or hot water nozzle



- Shift receptacle under height-adjustable coffee spout
- Press maintenance key

# Rinsing the Easy-Auto-Cappuccino Frother



To ensure perfect function, the Easy-Auto-Cappuccino Frother should be rinsed regularly.

- Dismantle the Easy-Auto-Cappuccino Frother into its individual parts
- Thoroughly rinse all parts of the nozzle under running water
- Reassemble the Easy-Auto-Cappuccino Frother

# Cleaning the Easy-Auto-Cappuccino Frother



To ensure perfect function, the Easy-Auto-Cappuccino Frother should be cleaned regularly

- Place a receptacle under the Easy-Auto-Cappuccino Frother
- Fill a second receptacle with 2.5 dl of fresh water and add a capful of Auto-Cappuccino Cleaner
- Dip the milk pipe into the second receptacle with the Auto-Cappuccino Cleaner
- Draw steam until the receptacle with the Auto-Cappuccino
   Cleaner is empty



- Fill the receptacle with 2.5 dl of fresh water
- Dip the milk pipe into the receptacle with the fresh water
- Draw steam until the receptacle with the fresh water is empty
- Cleaning of the Easy-Auto-Cappuccino Frother is complete

