




IMPRESSA
if you love coffee

Art. 65594 – Xs95/Xs90 GB – 03/06

IMPRESSA Xs95 / Xs90
Short operating instructions

Control elements

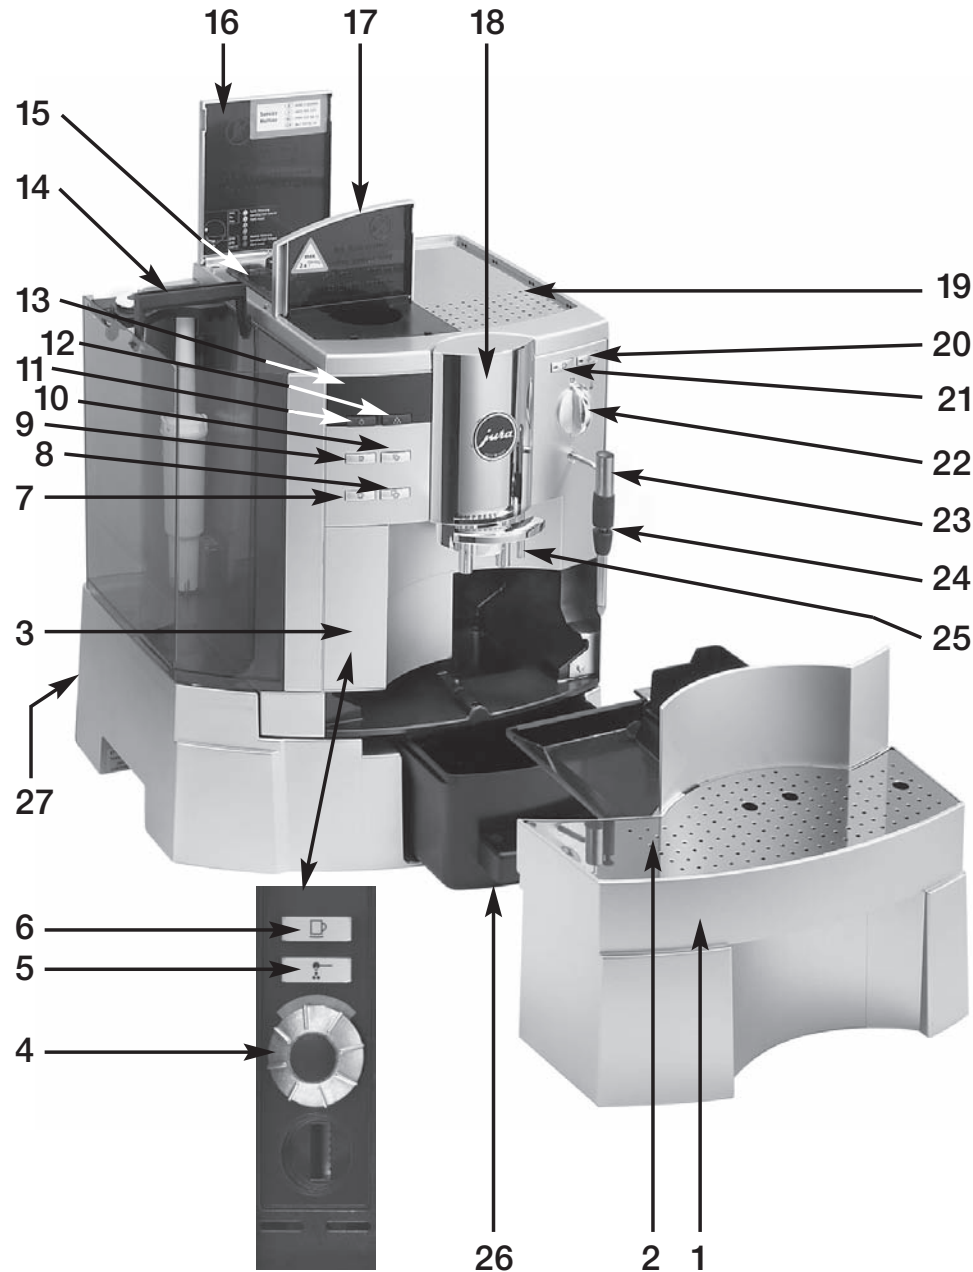


Control elements

1. Drip tray
2. Drip grate
3. Programming door
4. Rotary Switch
5. Selection key for pre-ground coffee
6. Coffee à la Carte key
7. 1 Coffee key
8. 2 Coffees key
9. 1 Espresso key
10. 2 Espressos key
11. ON/OFF key
12. Rinse key
13. Display dialog system
14. Water tank with handle
15. Aroma preservation cover
16. Bean tank cover
17. Lid for pre-ground coffee filler funnel
18. Height-adjustable coffee spout
19. Heatable cup shelf
20. Constant Steam key
21. Steam Portion key
22. Hot Water switch
23. Pivoting steam spout
24. 2-stage frothing jet
25. Height-adjustable hot water spout
26. Coffee grounds bin
27. Power switch

First use



- Switch on main switch (I)
- Press operating button 
- Fill water tank
- Fill bean tank




Display text: SPRACHE DEUTSCH

- Open the programming door
- Turn Rotary Switch until desired language appears
- Press Rotary Switch to confirm selection




Display text: FILL SYSTEM / PRESS STEAM

- Place container under 2-stage frothing jet
 - Press one of the steam keys 
- System fills automatically



Display text: PRESS RINSE

- Place container under coffee spout
 - Press maintenance key 
- The pipes are rinsed with fresh water

The machine is ready for use

Insert filter (first use)



- Open the programming door
- Press Rotary Switch until you hear an acoustic signal
Display text: FILTER NO
- Press Rotary Switch to start the maintenance menu




- Turn Rotary Switch until FILTER YES appears on the display

- Press Rotary Switch to confirm setting

- Remove water tank and empty it

Display text: INSERT FILTER / PRESS STEAM

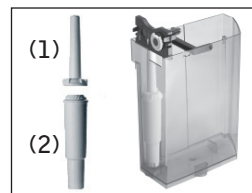


- Open cartridge holder

- Fix extension (1) in position on top of CLARIS plus filter cartridge (2)

- Use gentle pressure to insert filter cartridge in water tank
- Close cartridge holder (it clicks audibly into place)

- Fill the water tank and reinsert

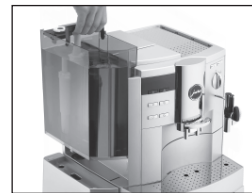

- Position container (approx. 0.5 litre) under 2-stage frothing jet

- Press one of the steam keys 

Filter rinse stops automatically

The machine is ready for use


Cleaning (duration: approx. 15 minutes)



Display text: CLEAN MACHINE

- Press maintenance key

Displaytext: EMPTY TRAY / GROUNDS

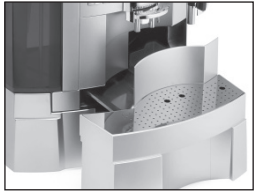

- Empty drip tray and coffee grounds container and reinsert



- Place container (approx. 0.5 litre) under coffee spout

Display text: PRESS RINSE

- Press maintenance key


Wait until an acoustic signal is heard



Display text: ADD TABLET / PRESS RINSE

- Open funnel cover for pre-ground coffee powder
- Drop in an original JURA cleaning tablet and close cover
- Press maintenance key

Wait until an acoustic signal is heard

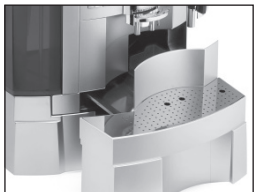

Display text: EMPTY TRAY / GROUNDS

- Empty drip tray and coffee grounds container and reinsert

The machine is ready for use

Changing the filter


After 50 litres of water, the filter is no longer effective.

A reminder to change the filter appears on the display.




Display text: CHANGE FILTER

- Press maintenance key

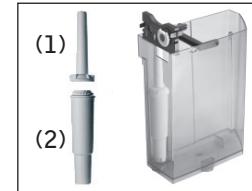

- Remove water tank and empty it
- Open cartridge holder
- Remove the used CLARIS plus filter cartridge from water tank
- Fix extension (1) in position on top of CLARIS plus filter cartridge (2)
- Use gentle pressure to insert filter cartridge in water tank
- Close cartridge holder (it clicks audibly into place)

- Fill the water tank and reinsert

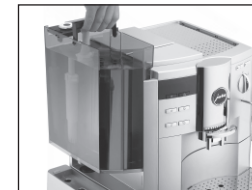

- Position container (approx. 0.5 litre) under 2-stage frothing jet
 - Press one of the steam keys
- Filter rinse stops automatically



The machine is ready for use

Decalcifying (duration: approx. 50 minutes)



Display text: DE-SCALE MACHINE

- Press maintenance key

Display text: EMPTY TRAY / GROUNDS

- Empty drip tray and coffee grounds container and reinsert

Display text: AGENT IN TANK / PRESS STEAM



- Remove water tank and empty it
- Completely dissolve contents of one blister (3 tablets) in 0.6 litre of water
- Pour solution into water tank
- Reinsert water tank



- Remove the 2-stage frothing jet or Professional Cappuccino Frother
- Place container under frother
- Press one of the steam keys
- Wait until an acoustic signal is heard




Display text: OPEN TAP

- Place container under hot water spout



- Open the hot water key
- Wait until an acoustic signal is heard
- Close the hot water key
- Wait until an acoustic signal is heard

Decalcifying (continuation)

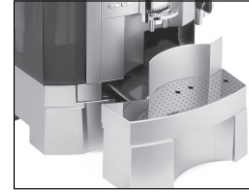

Display text: EMPTY TRAY / GROUNDS

- Empty drip tray and coffee grounds container and reinsert



Display text: FILL / RINSE WATER TANK

- Rinse water tank well, fill with fresh, cold tap water and reinsert
- Place container under pivoting steam spout
- Press one of the steam keys
- Wait until an acoustic signal is heard




Displaytext: OPEN TAP

- Place container under hot water spout



- Open the hot water key
- Wait until an acoustic signal is heard
- Close the hot water key
- Wait until an acoustic signal is heard

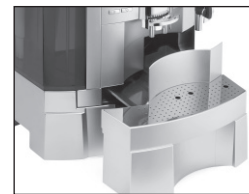

Display text: EMPTY TRAY / GROUNDS

- Empty drip tray and coffee grounds container and reinsert


The machine is ready for use

Cleaning the cappuccino system




If you use milk products, you should clean the cappuccino system daily.

- Fill a container with 2.5 dl of water
- Add 1 capful (max. 15 ml) of Auto-Cappuccino cleaner
- Dip milk suction tube into this mixture
- Position container (approx. 0.5 litre) under the Professional Cappuccino Frother

- Press the steam key 

As soon as the container is empty:

- Fill a container with fresh tap water
- Dip milk suction tube into the container
- Press the steam key 

The machine is ready for use as soon as the tap water has run through



Notes

Cleaning the Professional Cappuccino Frother



In addition to using the cappuccino cleaning system, you should also remove the Professional Cappuccino Frother regularly and rinse it under running water.

- Remove the Professional Cappuccino Frother
- Dismantle the frother
- Rinse all parts of the frother under running water
- Reassemble the frother and reattach to machine
- Please make sure that the aperture of the air supply (= gray circle) is rinsed very carefully and is free of impureness. Please don't clean the frother with sharp tools!

