



- de Wichtige Information zur Bedienungsanleitung Ihres neuen Kaffeespezialitäten-Vollautomaten:** Die beiliegende Bedienungsanleitung für die IMPRESSA XJ5 Professional gilt uneingeschränkt für Ihre IMPRESSA XJ6 Professional.
- Ihre IMPRESSA XJ6 ist kompatibel mit **JURA Connect**: Zusammen mit dem **Smart Connect** hilft Ihnen die **JURA Connect App**, alle Meldungen und Zählerstände der XJ6 auf Ihrem Smartphone/Tablet im Überblick zu behalten und beispielsweise per E-Mail zu versenden.
- en Important information about the instructions for use for your new automatic speciality coffee machine:** The enclosed instructions for use for the IMPRESSA XJ5 Professional also apply to the IMPRESSA XJ6 Professional.
- Your IMPRESSA XJ6 is compatible with **JURA Connect**: Together with the **Smart Connect**, the **JURA Connect App** helps you keep track of all messages and readings from the XJ6 on your smartphone/tablet and send them by e-mail, for example.
- fr Information importante concernant le mode d'emploi de votre nouvelle machine automatique à spécialités de café:** Le mode d'emploi ci-joint pour l'IMPRESSA XJ5 Professional est également valable pour votre IMPRESSA XJ6 Professional.
- Votre IMPRESSA XJ6 est compatible avec **JURA Connect** : utilisée avec le **Smart Connect**, l'**appli JURA Connect** vous permet de conserver une vue d'ensemble de tous les messages et relevés de compteurs sur votre smartphone ou tablette et, par exemple, de les envoyer par e-mail.
- it Informazioni importanti relative alle istruzioni per l'uso della Sua nuova macchina automatica per specialità di caffè:** Le allegate istruzioni per l'uso per l'IMPRESSA XJ5 Professional sono valide anche per la Sua IMPRESSA XJ6 Professional.
- La Sua IMPRESSA XJ6 è compatibile con **JURA Connect**: in combinazione con **Smart Connect**, la **JURA Connect App** è un ausilio che fornisce il riepilogo di tutti i messaggi e gli stati dei contatori della XJ6 sullo smartphone/tablet e ne consente ad esempio l'invio per e-mail.
- nl Belangrijke informatie over de gebruiksaanwijzing van uw nieuwe volautomaat voor kof-fiespecialiteiten:** De meegeleverde gebruiksaanwijzing voor de IMPRESSA XJ5 Professional geldt ook voor uw IMPRESSA XJ6 Professional.
- Uw IMPRESSA XJ6 is compatibel met **JURA Connect**: in combinatie met **Smart Connect** biedt de **JURA Connect App** u de mogelijkheid om alle meldingen en tellerstanden van de XJ6 overzichtelijk op uw smartphone of tablet te bekijken en bijvoorbeeld per e-mail te versturen.

es Información importante para el modo de empleo de su nueva máquina automática para especialidades de café: Las instrucciones de servicio adjuntas para la IMPRESSA XJ5 Profesional también son válidas para la IMPRESSA XJ6 Professional.

Su IMPRESSA XJ6 es compatible con **JURA Connect:** En combinación con **Smart Connect, JURA Connect App** le ayuda a mantener el control de todos los mensajes y valores del contador de la XJ6 en su smartphone/tablet y le permite mandarlos por correo electrónico, por ejemplo.

pt Informações importantes sobre o manual de instruções da sua nova máquina de café:

O manual de instruções fornecido para a IMPRESSA XJ5 Professional é válido também para a sua IMPRESSA XJ6 Professional.

A sua IMPRESSA XJ6 é compatível com a **JURA Connect:** juntamente com o **Smart Connect**, a **JURA Connect App**, ajuda-o a guardar no seu smartphone/tablet todas as mensagens e estados do contador da XJ6, em vista geral, e a enviá-los por e-mail.

sv Viktig information om bruksanvisningen till din nya helautomatiska kaffespecialitetsmaskin: Den medföljande bruksanvisningen för IMPRESSA XJ5 Professional gäller även för din IMPRESSA XJ6 Professional.

Din IMPRESSA XJ6 är kompatibel med **JURA Connect:** Tillsammans med **Smart Connect** hjälper **JURA Connect App** dig att få en överblick över alla meddelanden och räknartillstånd för XJ6 på din smartphone/surfplatta och att exempelvis skicka dem per e-post.

ru Важная информация о руководстве по эксплуатации Вашей новой автоматической кофе-машины: Приложенное руководство по эксплуатации для IMPRESSA XJ5 Professional действительно также для Вашей IMPRESSA XJ6 Professional.

Ваша IMPRESSA XJ6 совместима с **JURA Connect:** наряду со **Smart Connect**, приложение **JURA Connect** позволит Вам переносить на свой смартфон/планшет все сообщения и показатели счетчиков кофе-машины XJ6 и, например, отправлять их на электронную почту.

pl Ważna informacja dotycząca instrukcji obsługi nowego automatycznego ekspresu do specjalów kawowych: Załączona instrukcja obsługi ekspresu IMPRESSA XJ5 Professional odnosi się także do ekspresu IMPRESSA XJ6 Professional.

Państwa ekspres do kawy IMPRESSA XJ6 jest kompatybilny z **JURA Connect: Smart Connect** wraz ze **apl. JURA Connect** pomoże Państwu uzyskać dostęp do przeglądu wszystkich komunikatów i stanów liczników urządzenia XJ6 na smartfonie/tablecie i wysłać je na przykład pocztą elektroniczną.

jura®



IMPRESSA XJ5 Professional Instructions for Use



Original instructions for use

Before using the machine read the instructions for use.



The Instructions for use has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.

JURA Type 684



Your IMPRESSA XJ5 Professional

Control elements	4
Important information	6
Proper use	6
For your safety	6
1 Preparing and using for the first time	10
JURA on the Internet.....	10
Settings by the JURA service technician.....	10
Setting up the machine	10
Filling the bean container	10
First-time use	11
Determining the water hardness	14
Adjusting the grinder	14
2 Preparation	15
Espresso and coffee	15
Preparing two speciality coffees at the touch of a button	15
Ground coffee	16
Permanently setting the amount of water for the cup size	16
Hot water	17
3 Daily operation	18
Filling the water tank.....	18
Switching on	18
Daily maintenance	19
Switching off	19
4 Permanent settings in programming mode	20
Enabling and disabling programming mode.....	21
Product settings	22
Setting the water hardness	23
Energy-saving mode	24
Automatic switch-off	24
Rinses	25
Restore factory settings	26
Querying information	27
Reset counter	28
Unit for amount of water.....	29
Language	29
Disable.....	30




5	Maintenance	31
	Rinsing the machine.....	31
	Inserting and activating the filter.....	31
	Changing the filter.....	33
	Cleaning the machine.....	34
	Descaling the machine.....	35
	Cleaning the bean container.....	37
	Descaling the water tank.....	37
6	Display messages	38
7	Troubleshooting	39
8	Transport and environmentally friendly disposal	40
	Transport / Emptying the system.....	40
	Disposal.....	40
9	Technical data	41
10	Index	42
11	JURA contact details / Legal information	44

Symbol description


Warnings

	WARNING	Always take note of any information marked with the words CAUTION or WARNING and a warning sign. The signal word WARNING draws your attention to potential serious injury, and the signal word CAUTION to potential minor injury.
	CAUTION	CAUTION draws your attention to potential damage to the machine.

Symbols used

	Prompt to take action. This symbol means that you are being prompted to perform some action.
	Information and tips to make it even easier to use your IMPRESSA.
	Display

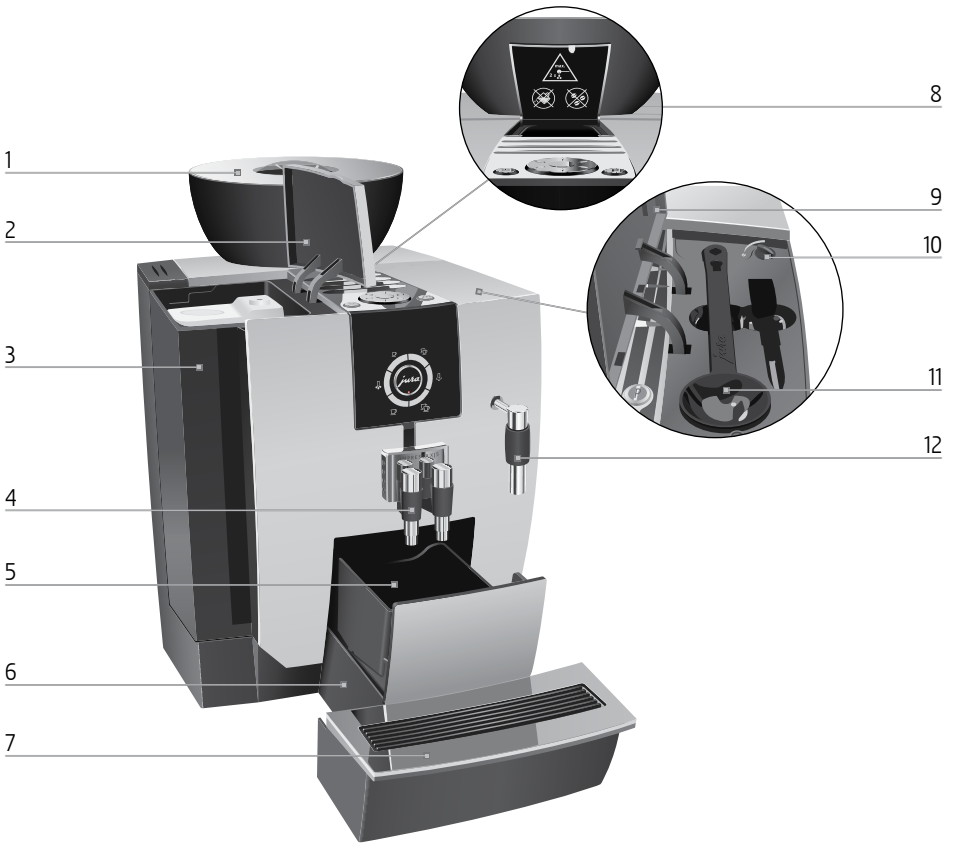


Control elements








 


- 1 Bean container with aroma preservation cover
- 2 Water tank cover
- 3 Water tank
- 4 Height- and width-adjustable coffee spout
- 5 Coffee grounds container
- 6 Drip tray
- 7 Cup grille
- 8 Filler funnel for ground coffee
- 9 Storage compartment cover
- 10 Grinder adjustment switch
- 11 Measuring spoon for ground coffee
- 12 Hot-water nozzle



Top of the machine

 
- 1  On/Off button
- 2  Rotary Switch
- 3  Maintenance button

Front

- 4  Display
- 5  Preparation buttons
 -  1 espresso button
 -  2 espressi button
 -  Hot Water button
 -  Steam button
 -  1 coffee button
 -  2 coffees button



Back of the machine

- 1  Power switch
- 2  Mains cable
- 3  Port (under cover)

Important information

Proper use

This machine is intended for use by specialist or trained staff in businesses, light industry and agricultural facilities or for commercial use by non-professionals. It should only be used for coffee preparation and to heat milk and water. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

Before using the machine read these instructions for use thoroughly and completely and comply with the instructions they contain. A warranty service is not applicable for damage or defects caused by non-compliance with the instructions for use. Keep these instructions for use close to the machine and pass them on to the next user.

The IMPRESSA may only be operated by instructed persons. Non-professionals must be supervised during use.

For your safety

Please carefully read and observe the important safety information set out below.



To avoid danger of potentially fatal electric shock:

- Never use a machine which is damaged or has a defective mains cable.
- In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from the mains supply and contact JURA service.
- If the mains cable of this machine is damaged, it must be repaired either directly by JURA or by an authorised JURA service centre.

- Make sure that the IMPRESSA and the mains cable are not located close to hot surfaces.
- Be careful to ensure that the mains cable is not trapped and does not rub against sharp edges.
- Never open and repair the machine yourself. Do not modify the machine in any way that is not described in these instructions for use. The machine contains live parts. If opened, there is a danger of potentially fatal injury. Repairs may only be carried out by authorised JURA service centres, using original spare parts and accessories.
- To completely and safely disconnect the machine from the power supply, first switch off the IMPRESSA using the On/Off button and then at the power switch. Only then should you remove the mains plug from the power socket.

There is a risk of scalds or burns on the spouts or the hot-water nozzle:

- Place the machine out of the reach of children.
- Do not touch any hot parts. Use the handles provided.
- Be careful to ensure that the hot-water nozzle is correctly installed and clean. If incorrectly fitted or if it becomes blocked, the hot-water nozzle might come off.

A defective machine is not safe and could cause injury or fire. To avoid damage and any associated risk of injury or fire:

- Never allow the mains cable to loosely hang down. The mains cable could pose a tripping hazard or become damaged.

Important information

- Protect the IMPRESSA from environmental influences such as rain, frost and direct sunlight.
- Do not immerse the IMPRESSA, mains cable or connections in water.
- Do not put the IMPRESSA or any individual parts in the dishwasher.
- Switch your IMPRESSA off at the power switch before any cleaning operation. Always wipe the IMPRESSA with a damp cloth rather than a wet one, and protect it from prolonged exposure to water splash.
- The IMPRESSA is not suitable for installation on a surface where a jet of water can be used.
- The machine must not be cleaned with a jet of water.
- Only connect the machine to the mains voltage in accordance with the information on the rating plate. The rating plate is located on the underside of your IMPRESSA. Further technical data is provided in these instructions for use (see Chapter 9 'Technical data').
- Please only use original JURA maintenance products. Use of products that are not explicitly recommended by JURA could damage the IMPRESSA.
- Do not use any coffee beans treated with additives or caramelised coffee beans.
- Only fill the water tank with fresh, cold water.
- Switch the machine off at the power switch if you are going to be absent for a longer period of time.
- Children may not clean or service the machine unless supervised by a responsible person.

- Do not allow children to play with the machine.
- Keep children under the age of 8 away from the machine, or supervise them constantly.
- Children aged 8 and over may only operate the machine without supervision if they have been instructed in how to use it safely. Children must be able to recognise and understand the potential dangers arising from incorrect use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge in how to use the machine safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Safety when handling the CLARIS Pro Blue filter cartridge:

- Filter cartridges should be kept out of the reach of children.
- Store filter cartridges in a dry place in the sealed packaging.
- Protect cartridges from heat and direct sunlight.
- Do not use damaged filter cartridges.
- Do not open filter cartridges.

1 Preparing and using for the first time

JURA on the Internet

Visit us on the Internet.

On the JURA website (www.jura.com) you will find interesting and up-to-date information on your IMPRESSA and on every aspect of coffee.

Settings by the JURA service technician

The following settings can only be made by the JURA service technician:

- Setting the filter capacity

You can also obtain the following optional accessories for your IMPRESSA from your JURA service partner:

- Set for automatic coffee grounds disposal function and drip drain
- Permanent water connection kit
- Payment system and other accessories

Setting up the machine

-
- CAUTION** If the machine is not lifted properly, it may be damaged.
- ▶ Do not lift the machine by the bean container.
 - ▶ Only lift the machine by gripping it underneath, in the recesses on the left and right sides of the machine.
-

When setting up your IMPRESSA, please note the following:

- Place the IMPRESSA on a horizontal surface that is not sensitive to water.
- Choose a spot for your IMPRESSA which protects the machine against overheating. Ensure that the ventilation slots are not covered.

Filling the bean container

The bean container has an aroma preservation cover. This will ensure that your coffee beans retain their aroma for longer.

-
- CAUTION** Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.
- ▶ Only use untreated coffee beans to fill the bean container.
-

- ▶ Remove the aroma preservation cover.
- ▶ Remove any dirt or foreign objects from inside the bean container.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

First-time use

When using the machine for the first time, you can choose whether you want to operate IMPRESSA **with** or **without** the CLARIS Pro Blue filter cartridge. If the water hardness is 10 °dH or more, we recommend using the filter cartridge. If you do not know the hardness of your water, you can find this out first (see Chapter 1 'Preparing and using for the first time – Determining the water hardness').

 



WARNING

If the machine is operated with a defective mains cable, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged or has a defective mains cable.



Precondition: The bean container has been filled.

- ▶ Insert the mains plug into a power socket.
-  ▶ Switch on the IMPRESSA using the power switch on the back of the machine.
-  ▶ Press the On/Off button to switch the IMPRESSA on. The Rotary Switch lights up. **SPRACHE DEUTSCH** appears on the display.
-  ▶ Turn the Rotary Switch until the required language is displayed, for example **LANGUAGE ENGLISH**.
-  ▶ Press the Rotary Switch to confirm the setting. **OK** appears briefly on the display to confirm the setting. **FILTER ✓ / YES ✓**

- i** Now decide whether you want to operate your IMPRESSA **with** or **without** a CLARIS Pro Blue filter cartridge.


First-time use with filter cartridge activation





CAUTION

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

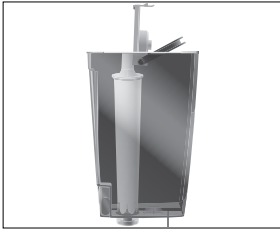- ▶ Only fill the water tank with fresh, cold water.

1 Preparing and using for the first time



- ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
INSERT FILTER, the Maintenance button  lights up.
- ▶ Press the Maintenance button.
FILL WATER TANK
 - ▶ Remove the water tank and rinse it with cold water.
 - ▶ Open the filter holder and insert the filter cartridge into the water tank, exerting slight pressure.
 - ▶ Close the filter holder. It will click into place audibly.
- i** After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.
PRESS RINSE, the Maintenance button  lights up.
 - ▶ Place one receptacle under the coffee spout and another under the hot-water nozzle.
- ▶ Press the Maintenance button.
FILTER RINSING, water flows out of the hot-water nozzle.
- i** You can interrupt rinsing of the filter at any time by pressing the Maintenance button . Press the Maintenance button  again to continue rinsing of the filter.
- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically.
SYSTEM FILLING, the system fills up with water. Water flows out of the hot-water nozzle. The operation stops automatically.
HEATING
RINSING, the machine rinses. The operation stops automatically.
READY appears on the display. Your IMPRESSA is ready for use.

First-time use without filter cartridge activation


CAUTION


Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

- ▶ Turn the Rotary Switch until **FILTER – / NO –** is displayed.
- ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
16 °dH



i If you do not know the hardness of your water, you must find this out first (see Chapter 1 'Preparing and using for the first time – Determining the water hardness').

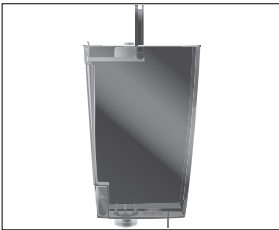- ▶ Turn the Rotary Switch to set the desired water hardness.
- ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
FILL WATER TANK
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
PRESS RINSE, the Maintenance button  lights up.



- ▶ Place one receptacle under the coffee spout and another under the hot-water nozzle.
- ▶ Press the Maintenance button.
SYSTEM FILLING, the system fills up with water. Water flows out of the hot-water nozzle. The operation stops automatically.
HEATING
RINSING, the machine rinses. The operation stops automatically.
READY appears on the display. Your IMPRESSA is ready for use.

2 Preparation

- i** While a speciality coffee and hot water is being prepared, you can stop preparation at any time. Just press any button.
- i** Before and during the grinding operation you can select the **coffee strength** of single products by turning the Rotary Switch : **MILD, NORMAL, STRONG, INTENSIVE**.
- i** During preparation, you can change the preset **amount of water** by turning the Rotary Switch .
- i** You can follow the current status of preparation on the display.


In programming mode you can enable or disable one-off settings before and during preparation (see Chapter 4 'Permanent settings in programming mode – Disable').

You can make permanent settings for all products in programming mode (see Chapter 4 'Permanent settings in programming mode – Product settings').

Espresso and coffee

The preparation of 1 espresso, 2 espressi, 1 coffee and 2 coffees follows this same model.

Example: Proceed as follows to prepare one coffee.


- ▶ Place a cup under the coffee spout.
-  ▶ Press the 1 coffee button.

Preparation starts. The coffee strength is briefly displayed. The preset amount of water for coffee flows into the cup.

Preparation stops automatically. **READY** appears on the display.



Preparing two speciality coffees at the touch of a button

To prepare two cups of coffee: Place two cups under the coffee spout. Press the 2 coffees button  to start the coffee preparation.

Ground coffee

You can choose to use a second coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

- i** Never add more than two level measuring spoons of ground coffee.
- i** Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- i** If you did not fill the machine with a sufficient amount of ground coffee, **NOT ENOUGH PRE-GROUND** is displayed and the IMPRESSA stops the operation.
- i** The desired speciality coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the IMPRESSA stops the operation and is once more ready for use.

All speciality coffees with ground coffee are prepared following this model.

Example: Proceed as follows to prepare one espresso using ground coffee.



- ▶ Place an espresso cup under the coffee spout.
- ▶ Open the cover of the filler funnel for ground coffee.
FILL PRE-GROUND
- ▶ Place one level measuring spoon of ground coffee into the filler funnel.
- ▶ Close the cover of the filler funnel.
SELECT BUTTON
- ▶ Press the 1 espresso button.
Preparation starts. The preset amount of water for espresso flows into the cup. Preparation stops automatically. **READY** appears on the display.

Permanently setting the amount of water for the cup size

It is easy to make permanent settings for the amount of water for all speciality coffees and hot water according to the cup size. Adjust the amount once as shown in the following example. Every time you prepare a drink in the future, this amount of water will be dispensed.

The permanent settings for adapting the amount of water to the cup size for all speciality coffees and hot water follow this model.

Example: Proceed as follows to **permanently** set the amount of water for one coffee.

Precondition: **READY** is displayed.



- ▶ Place a cup under the coffee spout.
- ☺ ▶ Press and **hold** the 1 coffee button.
1 COFFEE.
- ☺ ▶ **Hold** the 1 coffee button down until **ENOUGH COFFEE ?** appears.
- ☺ ▶ Release the 1 coffee button.
Preparation starts and the coffee flows into the cup.
- ▶ Press any button as soon as there is sufficient coffee in the cup.
Preparation stops. **OK** appears briefly on the display. The set amount of water for one coffee is permanently stored. **READY** appears on the display.

- i** You can alter this setting at any time by repeating the above procedure.
- i** You can also permanently set the amount for all speciality coffees, hot water and steam in programming mode (see Chapter 4 'Permanent settings in programming mode – Product settings').

Hot water

The following temperatures can be selected for preparing hot water:
REGULAR, NORMAL, HOT.

⚠ CAUTION

There is a danger of scalding from hot water splashes.

- ▶ Avoid direct contact with the skin.



- ▶ Place a cup under the hot-water nozzle.
- ⚡ ▶ Press the Hot Water button.
WATER. The preset temperature is then briefly displayed.
- i** By touching the Hot Water button several times **⚡ (within approximately 2 seconds)** you can set the temperature to your individual preference. This setting is not saved.

Hot water flows into the cup. Preparation stops automatically. **READY** appears on the display.

3 Daily operation

Filling the water tank

 
Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

CAUTION Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.
-
- ▶ Open the water tank cover.
 - ▶ Remove the water tank and rinse it with cold water.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.
 - ▶ Close the water tank cover.



Switching on


When the IMPRESSA is switched on, a rinse operation is automatically initiated. In programming mode you can change this setting so that the machine prompts you to perform the switch-on rinse by pressing the Maintenance button  (see Chapter 4 'Permanent settings in programming mode – Rinses').

Precondition: Your IMPRESSA is switched on at the power switch.

- ▶ Place a receptacle under the coffee spout.
 - ▶ Press the On/Off button to switch the IMPRESSA on.
- HEATING** appears on the display, the machine heats up.
- RINSING**, the machine rinses. The operation stops automatically. **READY** appears on the display.



Daily maintenance

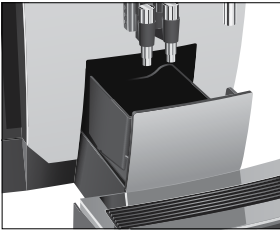

To ensure that you get many years of reliable service out of your IMPRESSA and to guarantee the optimum coffee quality, the machine requires daily maintenance.

- ▶ Pull out the drip tray.
- ▶ Empty the coffee grounds container and the drip tray. Rinse them both with warm water.
- ▶ Dry the metal contacts on the back of the drip tray.
- ▶ Refit the coffee grounds container and the drip tray.
- ▶ Rinse the water tank with clean water.
- ▶ Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfibre cloth).

Switching off



When the IMPRESSA is switched off, the system is automatically rinsed if a speciality coffee has been prepared.

- ▶ Place a receptacle under the coffee spout.
 - ▶ Press the On/Off button.
- RINSING**, the machine rinses. The operation stops automatically. Your IMPRESSA is switched off.
- i** When the IMPRESSA is switched off with the On/Off button, the machine consumes less than 0.1 W of standby energy. The machine can be completely disconnected from the power supply using the power switch.

4 Permanent settings in programming mode

You can make permanent settings in programming mode. You can navigate through the programme items and permanently save the required settings simply by turning and pressing the Rotary Switch. You can make the following settings with the Rotary Switch:

Programme item	Sub-item	Explanation
RINSE	RINSE, FILTER (only if filter is activated), CLEAN, DE-SCALE (only if filter is not activated)	▶ Select the desired maintenance programme. If no action is taken in this programme item, programming mode is exited automatically after approximately 5 seconds.
BUTTONS	SELECT BUTTON	▶ Select your settings for speciality coffees and hot water.
FILTER	YES ✓ / NO -	▶ Indicate whether you are operating your IMPRESSA with or without a CLARIS Pro Blue filter cartridge.
HARDNESS	1 °dH - 30 °dH	▶ Adjust the water hardness.
ENERGY	SAVE ✓, SAVE -	▶ Select an energy-saving mode.
OFF AFTER	15 MIN., 0.5 HRS - 15 HRS	▶ Set the time after which the IMPRESSA should switch off automatically.
RINSING	MANUAL, AUTOMATIC	▶ Set whether the switch-on rinse should be started manually or automatically.
RESET	PRODUCT, ALL PROD., RESET.ALL	▶ Reset the permanently set values of all products to the factory settings.




Programme item	Sub-item	Explanation
INFO		▶ Keep track of all speciality coffees prepared and view the number of maintenance programmes performed.
COUNTER		▶ Keep track of all speciality coffees prepared. The counter can be reset to zero.
DISPLAY	ML, OZ	▶ Select the unit for the amount of water.
LANGUAGE		▶ Select your language.
LOCK	BUTTONS, PRE-SELECT, MAINTAIN	▶ Disable the preparation of individual products. ▶ Select whether or not to allow one-off settings before and during preparation. ▶ Disable the maintenance programme.
EXIT		▶ Exit programming mode.


 
 
Enabling and disabling programming mode

You can set your IMPRESSA such that programming mode is disabled. When programming mode is disabled, it cannot be accessed.

Example: Proceed as follows to disable programming mode.

Precondition: READY is displayed.

- ▶ Remove the water tank.
FILL WATER TANK
- ▶ **Simultaneously press for approx. 2 seconds** the Rotary Switch , Maintenance button  and Hot Water button .
LOCKED is briefly displayed.
FILL WATER TANK
Programming mode is disabled.
- ▶ Fit the water tank.
READY

To enable programming mode again, remove the water tank. Then simultaneously press the Rotary Switch , Maintenance button  and Hot Water button  for approx. 2 seconds. FREE is briefly displayed. Programming mode is enabled again.










Product settings







In the programme item **BUTTONS** you can make individual settings for all speciality coffees, hot water and steam. The following settings can be made:

Product	Temperature	Coffee strength	Amount
1 espresso, 1 coffee	NORMAL, HIGH	MILD, NORMAL, STRONG, INTENSIVE	Volume: 25 ML – 240 ML
2 espressi, 2 coffees	NORMAL, HIGH	–	Volume: 25 ML – 240 ML (per cup)
Hot water	REGULAR, NORMAL, HOT	–	Volume: 25 ML – 450 ML
Steam	–	–	Amount of steam: 3 SEC – 120 SEC


Example: Proceed as follows to change the coffee strength for one espresso from **STRONG** to **NORMAL** and the amount of water from **45 ML** to **40 ML**.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
-  ▶ Turn the Rotary Switch until the programme item **BUTTONS** is displayed.
-  ▶ Press the Rotary Switch.
SELECT BUTTON
- i** Next select the button of the product for which you would like to make settings. No product is prepared at this point.
-  ▶ Press the 1 espresso button.
WATER
-  ▶ Press the Rotary Switch.
45 ML
-  ▶ Turn the Rotary Switch until **40 ML** is displayed.
-  ▶ Press the Rotary Switch.
OK appears briefly on the display.
WATER
-  ▶ Turn the Rotary Switch until **STRENGTH** is displayed.
-  ▶ Press the Rotary Switch.
STRONG

-  ▶ Turn the Rotary Switch until **NORMAL** is displayed.
-  ▶ Press the Rotary Switch.
OK appears briefly on the display.
STRENGTH
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit the programme item.
BUTTONS
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
READY

Setting the water hardness








-  If you are using the CLARIS Pro Blue filter cartridge and have activated it, it is not possible to set the water hardness.

The harder the water is, the more frequently the IMPRESSA needs to be descaled. It is therefore important to set the water hardness accurately.

The water hardness can be adjusted on a continuous scale between 1 °dH and 30 °dH.

Example: Proceed as follows to change the water hardness from **16 °dH** to **25 °dH**.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
-  ▶ Turn the Rotary Switch until the programme item **HARDNESS** is displayed.
-  ▶ Press the Rotary Switch.
16 °dH
-  ▶ Turn the Rotary Switch until **25 °dH** is displayed.
-  ▶ Press the Rotary Switch.
OK appears briefly on the display.
HARDNESS
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
READY








Energy-saving mode

In the programme item **ENERGY** you can permanently set an energy-saving mode (Energy Save Mode, E.S.M.®):

- **SAVE ✓**
 - Soon after the last preparation, the IMPRESSA stops heating up. After about 5 minutes the message **ENERGY ON** is displayed.
 - Before you can prepare a speciality coffee, hot water or steam, the machine must heat up.
- **SAVE –**
 - All speciality coffees as well as hot water and steam can be prepared without having to wait.

Example: Proceed as follows to change the energy-saving mode from **SAVE –** to **SAVE ✓**.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
 -  ▶ Turn the Rotary Switch until the programme item **ENERGY –** is displayed.
 -  ▶ Press the Rotary Switch.
 -  ▶ Turn the Rotary Switch until **SAVE ✓** is displayed.
 -  ▶ Press the Rotary Switch.
 - OK** appears briefly on the display.
 -  ▶ Turn the Rotary Switch until **EXIT** is displayed.
 -  ▶ Press the Rotary Switch to exit programming mode.
- READY**








Automatic switch-off

By instructing your IMPRESSA to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your IMPRESSA switches off automatically after the preset time following the last action on the machine.

You can set the automatic switch-off time to 15 minutes or 0.5–15 hours.





Example: Proceed as follows to change the automatic switch-off from **5 HRS** to **1 HRS**.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
-  ▶ Turn the Rotary Switch until the programme item **OFF AFTER** is displayed.
OFF AFTER
-  ▶ Press the Rotary Switch.
5 HRS
-  ▶ Turn the Rotary Switch until **1 HRS** is displayed.
1 HRS
-  ▶ Press the Rotary Switch.
OK appears briefly on the display.
OFF AFTER
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
EXIT
-  ▶ Press the Rotary Switch to exit programming mode.
READY








Rinses

In the programme item **RINSING** you can make the following settings:

-  **MANUAL**
 -  The switch-on rinse must be started manually.
-  **AUTOMATIC**
 -  The switch-on rinse is started automatically.

Example: Proceed as follows to specify that the switch-on rinse should be started manually.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
-  ▶ Turn the Rotary Switch until the programme item **RINSING** is displayed.
RINSING
-  ▶ Press the Rotary Switch.
AUTOMATIC
-  ▶ Turn the Rotary Switch until **MANUAL** is displayed.
MANUAL
-  ▶ Press the Rotary Switch.
OK appears briefly on the display.
RINSING
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
EXIT
-  ▶ Press the Rotary Switch to exit programming mode.
READY













Restore factory settings

In the programme item **RESET** you can reset various settings to their factory settings:

- **PRODUCT**
 - The settings (e.g. amount of water and temperature) for any product can be reset **individually** to the factory settings.
- **ALL PROD.**
 - The settings (e.g. amount of water and temperature) for **all products** are reset to the factory settings.
- **RESET, ALL**
 - **All user settings** (apart from the 'filter' and 'water hardness') are reset to factory settings. Your IMPRESSA then switches off.

Example: Proceed as follows to reset the values for **1 espresso** to the factory settings.

Precondition: **READY** is displayed.








-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
-  ▶ Turn the Rotary Switch until the programme item **RESET** is displayed.
-  ▶ Press the Rotary Switch.
-  ▶ Press the Rotary Switch.
-  **Next** select the button of the product for which you would like to make settings. No product is prepared at this point.
-  ▶ Press the 1 espresso button
-  **OK** appears briefly on the display. The values for 1 espresso are reset to the factory settings.
-  ▶ Press the Rotary Switch to exit the programme item.
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit the programme item.
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.

Querying information






In the programme item **INFO** you can view the following information.

- **BUTTONS**: Number of prepared speciality coffees, hot water and steam
- **CLEAN, DE-SCALE, FILTER**: number of maintenance programmes performed and the current maintenance status.
- **VERSION**: Software version

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
-  ▶ Turn the Rotary Switch until the programme item **INFO** is displayed.
-  ▶ Press the Rotary Switch.
BUTTONS
-  ▶ Press the Rotary Switch.
The total number of prepared speciality coffees, hot water and steam is displayed.
- i** By pressing the individual buttons for the speciality coffees, hot water and steam, the respective number of prepared products is displayed.
- i** Open the cover of the filler funnel for ground coffee to query this number.
-  ▶ Press the Rotary Switch to exit the programme item.
BUTTONS
-  ▶ Turn the Rotary Switch until **CLEAN** is displayed.
- i** Continue turning the Rotary Switch to switch to the performed descaling and filter change operations.
-  ▶ Press the Rotary Switch.
The number of performed cleaning operations appears on the display.
- i** By turning the Rotary Switch, the maintenance status can also be displayed in addition to the number of performed maintenance programmes. The filled out fields show the maintenance status. Once all fields are filled out, your IMPRESSA will request the respective maintenance programme.

4 Permanent settings in programming mode








-  ▶ Press the Rotary Switch to exit the programme item.
CLEAN
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit the programme item.
INFO
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
READY

Reset counter

In the **COUNTER** programme item you can record your consumption over a user-defined period. You can reset this counter to zero at any time.

Example: Proceed as follows to reset the counter to zero.

Precondition: **READY** is displayed.








-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
-  ▶ Turn the Rotary Switch until the programme item **COUNTER** is displayed.
-  ▶ Press the Rotary Switch.
The total number of prepared speciality coffees, hot water and steam is displayed.
- i** By pressing the individual buttons for the speciality coffees, hot water and steam, the respective number of prepared products is displayed.
- i** Open the cover of the filler funnel for ground coffee to query this number.
-  ▶ Press the Rotary Switch.
DELETE / YES ✓
-  ▶ Press the Rotary Switch.
OK appears briefly on the display.
COUNTER
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
READY

Unit for amount of water

You can change the unit for the amount of water from 'ml' to 'oz'.

Example: Proceed as follows to change the unit for the amount of water from **ML** to **OZ**.

Precondition: **READY** is displayed.








-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
-  ▶ Turn the Rotary Switch until the programme item **DISPLAY** is displayed.
-  ▶ Press the Rotary Switch.
ML
-  ▶ Turn the Rotary Switch until **OZ** is displayed.
-  ▶ Press the Rotary Switch.
OK appears briefly on the display.
DISPLAY
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
READY

Language

In this programme item you can set the language used by your IMPRESSA.

Example: Proceed as follows to change the language from **ENGLISH** to **DEUTSCH**.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
-  ▶ Turn the Rotary Switch until the programme item **LANGUAGE** is displayed.
-  ▶ Press the Rotary Switch.
ENGLISH
-  ▶ Turn the Rotary Switch until **DEUTSCH** is displayed.
-  ▶ Press the Rotary Switch.
OK appears briefly on the display.
SPRACHE
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
BEREIT








Disable

In the programme item **LOCK** you can make the following settings.

- **BUTTONS:**
 - Each product can be disabled individually. It cannot then be prepared. **LOCKED** is briefly displayed if the button for a disabled product is pressed.
- **PRE-SELECT:**
 - One-off settings cannot be made before and during preparation. The product is prepared according to the settings in programming mode.
- **MAINTAIN:**
 - The maintenance programmes are disabled and cannot be started.

Example: Proceed as follows to disable one-off settings before and during preparation.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
-  ▶ Turn the Rotary Switch until the programme item **LOCK** is displayed.
-  ▶ Press the Rotary Switch.
BUTTONS
-  ▶ Turn the Rotary Switch until **PRE-SELECT** is displayed.
-  ▶ Press the Rotary Switch.
LOCKED appears briefly on the display.
LOCK
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
READY

5 Maintenance

Your IMPRESSA has the following integrated maintenance programmes:

- Rinsing the machine (**RINSE**)
 - Changing the filter (**FILTER**) (only if filter is activated)
 - Cleaning the machine (**CLEAN**)
 - Descaling the machine (**DE-SCALE**) (only if filter is not activated)
- i** Clean the machine, descale the machine or change the filter when you are prompted to do so.

Rinsing the machine

You can initiate the rinse operation manually at any time.

Precondition: **READY** is displayed.

- ▶ Place a receptacle under the coffee spout.
- ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
- ▶ Press the Rotary Switch.
RINSE
- ▶ Press the Rotary Switch again.
RINSING, water flows out of the coffee spout.
The rinse stops automatically. **READY** appears on the display.









Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using the CLARIS Pro Blue filter cartridge. If the water hardness is 10 °dH or more, we recommend using the filter cartridge. If you do not know the hardness of your water, you can find this out first (see Chapter 1 'Preparing and using for the first time – Determining the water hardness').


If you did not activate the filter cartridge the first time you used the machine, you can do this now as follows.

 

- i** Perform the 'inserting the filter' operation without any interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: **READY** is displayed.

- ▶  Press **and hold** the Rotary Switch until **RINSE** appears.
RINSE
- ▶  Turn the Rotary Switch until the programme item **FILTER –** is displayed.
FILTER –
- ▶  Press the Rotary Switch.
NO –
- ▶  Turn the Rotary Switch until **YES ✓** is displayed.
- ▶  Press the Rotary Switch.
OK appears briefly on the display.
INSERT, the Maintenance button  lights up.
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.

i After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle under the hot-water nozzle.
- ▶  Press the Maintenance button.
FILTER RINSING, water flows out of the hot-water nozzle.


i You can interrupt rinsing of the filter at any time by pressing the Maintenance button . Press the Maintenance button  again to continue rinsing of the filter.

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically. The machine heats up.

READY

Your IMPRESSA is once more ready for use.

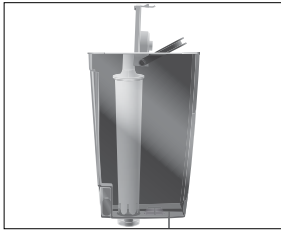

Changing the filter

- i** After 120 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.
- i** After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.
- i** If the CLARIS Pro Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.
- i** CLARIS filter cartridges are available from specialised dealers.

Precondition: **READY / FILTER** is displayed and the Maintenance button **⚡** lights up.

- ⚡** ▶ Press the Maintenance button.

FILTER / CHANGE

- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLARIS Pro Blue filter cartridge.
- ▶ Insert the new filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.

- i** After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle under the hot-water nozzle.

- ⚡** ▶ Press the Maintenance button.

FILTER RINSING, water flows out of the hot-water nozzle.

- i** You can interrupt rinsing of the filter at any time by pressing the Maintenance button **⚡**. Press the Maintenance button **⚡** again to continue rinsing of the filter.

- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically. The machine heats up.

READY

Your IMPRESSA is once more ready for use.



Cleaning the machine

 
After 200 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: **READY / CLEAN** is displayed and the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

EMPTY TRAY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

PRESS RINSE, the Maintenance button  lights up.

- ▶ Place a receptacle under the coffee spout.

-  ▶ Press the Maintenance button.

CLEANING, water flows out of the coffee spout.

The operation is interrupted, **ADD TABLET**.

- ▶ Open the cover of the filler funnel for ground coffee.



- ▶ Insert a JURA cleaning tablet into the filler funnel.

- ▶ Close the cover of the filler funnel.

PRESS RINSE, the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

CLEANING, water flows out of the coffee spout several times.

The operation is interrupted, **EMPTY TRAY**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Cleaning is now complete. Your IMPRESSA is once more ready for use.

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- ⚠ CAUTION** If the descaling agent comes into contact with the skin or eyes, this can cause irritation.
- ▶ Avoid contact with the skin or eyes.
 - ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

- CAUTION** If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.
- ▶ Use only original JURA maintenance products.

- CAUTION** If the descaling operation is interrupted, there may be damage to the machine.
- ▶ Allow the descaling programme to run to the end.

- CAUTION** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.
- ▶ Clean up any splashes immediately.

- i** The descaling programme lasts approximately 50 minutes.
- i** JURA descaling tablets are available from specialised dealers.
- i** If you use a CLARIS Pro Blue filter cartridge and this is activated, you will not be prompted to descale.

Precondition: **READY / DE-SCALE** is displayed and the Maintenance button **⚡** lights up.

- ⚡** ▶ Press the Maintenance button.


EMPTY TRAY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

AGENT IN TANK

- ▶ Remove and empty the water tank.
- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 600 ml of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.


AGENT IN TANK and the Maintenance button **⚡** lights up.

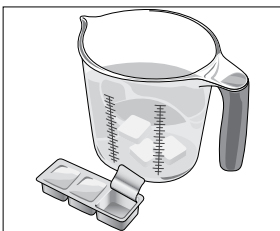

5 Maintenance



- ▶ Place a receptacle under the hot-water nozzle.
- ⚠ ▶ Press the Maintenance button.
DE-SCALING, water flows straight into the drip tray and out of the hot-water nozzle repeatedly.
The operation is interrupted, **EMPTY TRAY**.
- ▶ Empty the receptacle.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
FILL WATER TANK
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

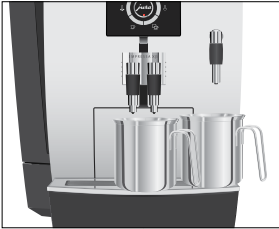


 
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
PRESS RINSE and the Maintenance button ⚠ lights up.
- ▶ Place one receptacle under the hot-water nozzle and another under the coffee spout.
- ⚠ ▶ Press the Maintenance button.
DE-SCALING, water flows out of the hot-water nozzle and the coffee spout.
The operation stops automatically, **EMPTY TRAY**.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Descaling is now complete. Your IMPRESSA is once more ready for use.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: **READY** is displayed.

- ▶  Switch the machine off with the On/Off button.
- ▶  Switch the machine off at the power switch.
 - ▶ Remove the aroma preservation cover.
 - ▶ Clean the bean container with a soft, dry cloth.
 - ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLARIS Pro Blue filter cartridge, remove this.
- ▶ Descale the tank with a mild conventional descaling agent in accordance with the manufacturer's instructions.
- ▶ Rinse out the water tank thoroughly.
- ▶ If you use a CLARIS Pro Blue filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

6 Display messages

Message	Cause/Result	Action
FILL WATER TANK	The water tank is empty. You cannot prepare any products.	▶ Fill the water tank (see Chapter 3 'Daily operation – Filling the water tank').
EMPTY GROUNDS	The coffee grounds container is full. You cannot prepare any products.	▶ Empty the coffee grounds container and the drip tray (see Chapter 3 'Daily operation – Daily maintenance').
EMPTY TRAY	The drip tray is full. You cannot prepare any products.	▶ Empty the drip tray and the coffee grounds container. ▶ Clean and dry the metal contacts on the back of the drip tray.
TRAY MISSING	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	▶ Fit the drip tray.
PRESS RINSE	The IMPRESSA is prompting you to perform a rinse or continue a maintenance programme that was already started.	▶ Press the Maintenance button to start the rinse or to continue the maintenance programme.
READY / CLEAN	The IMPRESSA is prompting you to clean it.	▶ Perform cleaning (see Chapter 5 'Maintenance – Cleaning the machine').
READY / DE-SCALE	The IMPRESSA is prompting you to descale it.	▶ Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
READY / FILTER	The filter cartridge no longer works. The IMPRESSA is prompting a filter change.	▶ Replace the CLARIS Pro Blue filter cartridge (see Chapter 5 'Maintenance – Changing the filter').
FILL BEANS	The bean container is empty. You cannot prepare any products.	▶ Fill the bean container (see Chapter 1 'Preparing and using for the first time – Filling the bean container').
NOT ENOUGH PRE- GROUND	There is insufficient ground coffee in the machine; the IMPRESSA stops the operation.	▶ The next time you prepare a beverage, add more ground coffee (see Chapter 2 'Preparation – Ground coffee').

7 Troubleshooting

Problem	Cause/Result	Action
Coffee only comes out in drips when it is being prepared.	Coffee or ground coffee has been ground too finely and is blocking the system. The same filter cartridge may have been used several times or the water hardness set incorrectly in the programming mode.	<ul style="list-style-type: none"> ▶ Put the grinder on a coarser setting or use coarser ground coffee (see Chapter 1 'Preparing and using for the first time – Adjusting the grinder'). ▶ Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
Water hardness cannot be adjusted.	The CLARIS Pro Blue filter cartridge is activated.	▶ Deactivate the filter cartridge in programming mode.
FILL BEANS is displayed although the bean container is full.	The sliding catch for the bean container has not been pulled out or has not been pulled out completely.	▶ Pull the sliding catch on the right-hand side of the bean container fully out.
EMPTY TRAY is always displayed.	The metal contacts of the drip tray are dirty or wet.	▶ Clean and dry the metal contacts on the back of the drip tray.
FILL WATER TANK is displayed although the water tank is full.	The water tank float is trapped.	▶ Descale the water tank (see Chapter 5 'Maintenance – Descaling the water tank').
Grinder is making a very loud noise.	There are foreign objects in the grinder.	▶ Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').
ERROR 2 is displayed.	If the machine was exposed to the cold for a long period of time, heating is disabled for safety reasons.	▶ Warm the machine at room temperature.
Other ERROR messages are displayed.	–	▶ Switch the IMPRESSA off at the power switch. Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

i If you were unable to solve the problem, contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

8 Transport and environmentally friendly disposal

Transport / Emptying the system

In order to protect the IMPRESSA from frost during transport, the system must be emptied.



Precondition: **READY** is displayed.

- ▶ Place a receptacle under the hot-water nozzle.
- ⏴ ▶ Press the Steam button.
STEAM, hot steam is discharged from the hot-water nozzle.
- ▶ Remove and empty the water tank.
- ⏴ ▶ Turn the Rotary Switch until **ECO SEC** is displayed.
Steam will continue to be discharged from the hot-water nozzle until the system is empty.
FILL WATER TANK
- ⏴ ▶ Press the On/Off button.
The IMPRESSA is switched off.


Disposal

Please dispose of old machines in an environmentally neutral way.



Old machines contain valuable, recyclable materials which should be recycled. Please therefore dispose of old machines via suitable collection systems.

9 Technical data

Voltage	220–240 V ~, 50 Hz
Power	1450 W
Airborne noise emitted	$L_p < 70$ dB (A)
Ambient conditions	Humidity max. 80% Ambient temperature 10–35 °C
Conformity mark	CE 
Energy consumption	approx. 4.1 Wh SAVE ✓
Energy consumption	approx. 10.6 Wh SAVE –
Pump pressure	Static, max. 15 bar
Holding capacity of water tank	4 l
Holding capacity of bean container	500 g
Holding capacity of coffee grounds container	max. 40 portions
Cable length	approx. 1.1 m
Weight	approx. 12.8 kg
Dimensions (W × H × D)	33.8 × 49.7 × 43.2 cm

Information for testers (repeat test in accordance with DIN VDE 0701-0702): The central grounding point (CGP) is located on the back of the machine below the JURA logo (turn JURA logo anti-clockwise).

10 Index

A

- Addresses 44
- Aroma preservation cover
 - Bean container with aroma preservation cover 4
- Automatic switch-off 24

B

- Bean container
 - Bean container with aroma preservation cover 4
 - Cleaning 37
 - Filling 10
- Bus bar
 - Technical data 41
- Button
 - 1 coffee button 5
 - 1 espresso button 5
 - 2 coffees button 5
 - 2 espressi button 5
 - Hot Water button 5
 - Maintenance button 5
 - On/Off button 5
 - Steam button 5

C

- Central grounding point 41
- CLARIS Pro Blue filter cartridge
 - Changing 33
 - Inserting and activating the filter 31
- Cleaning
 - Bean container 37
 - Machine 34
- Coffee 15
- Coffee grounds container 4
- Coffee spout
 - Height- and width-adjustable coffee spout 4
- Consistency of grind
 - Adjusting the grinder 14
 - Grinder adjustment switch 4
- Contact details 44
- Counter
 - Reset 28

Cover

- Storage compartment 4
 - Water tank 4
- Cup grille 4
- Customer support 44

D

- Descaling
 - Machine 35
 - Water tank 37
- Disable 30
- Display 5
- Display messages 38
- Disposal 40
- Drip tray 4

E

- Emptying the system 40
- Energy-saving mode 24
- Errors
 - Troubleshooting 39
- Espresso 15

F

- Factory settings
 - Restore factory settings 26
- Filler funnel
 - Filler funnel for ground coffee 4
- Filling
 - Bean container 10
 - Water tank 18
- Filter
 - Changing 33
 - Inserting and activating the filter 31
- First-time use 11
 - With filter cartridge activation 11
 - Without filter cartridge activation 13

G

- Grinder adjustment switch 4
- Ground coffee 16
 - Measuring spoon for ground coffee 4
- Grounding point 41

H

- Hotline 44
- Hot water 17
- Hot-water nozzle 4

- I**
 - Instant coffee
 - Ground coffee 16
 - Internet 10
- J**
 - JURA
 - Contact details 44
 - Internet 10
- L**
 - Language 29
- M**
 - Machine
 - Cleaning 34
 - Descaling 35
 - Rinsing 31
 - Setting up 10
 - Switching off 19
 - Switching on 18
 - Mains cable 5
 - Maintenance 31
 - Daily maintenance 19
 - Measuring spoon for ground coffee 4
 - Messages, display 38
- P**
 - Permanently setting the water for the cup size 16
 - Permanent settings in programming mode 20
 - Power switch 5
 - Preparation 15
 - Coffee 15
 - Espresso 15
 - Ground coffee 16
 - Hot water 17
 - Problems
 - Troubleshooting 39
 - Product settings 22
 - Programming mode 20
 - Automatic switch-off 24
 - Disable 30
 - Energy-saving mode 24
 - Language 29
 - Product settings 22
 - Querying information 27
 - Reset counter 28
 - Restore factory settings 26
 - Rinses 25
 - Setting the water hardness 23
 - Unit for amount of water 29
 - Proper use 6
 - Q**
 - Querying information 27
 - R**
 - Rinses 25
 - Rinsing
 - Machine 31
 - Rotary Switch 5
 - S**
 - Safety 6
 - Safety information 6
 - Settings
 - Permanent settings in programming mode 20
 - Setting up
 - Setting up the machine 10
 - Switching off
 - Machine 19
 - Switching on
 - Machine 18
 - Switch-off
 - Automatic switch-off 24
 - Symbol description 3
 - T**
 - Technical data 41
 - Tel 44
 - Transport 40
 - Troubleshooting 39
 - U**
 - Unit for amount of water 29
 - Use, First-time 11
 - W**
 - Water hardness
 - Determining the water hardness 14
 - Setting the water hardness 23
 - Water tank 4
 - Descaling 37
 - Filling 18
 - Website 10

11 JURA contact details / Legal information

Your JURA service partner



JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten
Tel. +41 (0)62 38 98 233
www.jura.com

- Directives** The machine complies with the following directives:
- 2006/42/EC – Machinery Directive
 - 2004/108/EC – Electromagnetic Compatibility
 - 2009/125/EC – Ecodesign Directive
 - 2011/65/EU – RoHS Directive

Technical changes We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colours of the machine. Some details of your IMPRESSA may vary.

Feedback Your opinion is important to us! Use the contact link at www.jura.com.

Copyright The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.