


Impressa C9 One Touch Quick Reference Guide

This Guide does not replace the Operating Instructions.
For details and cautions you must read all instructions.

Traces of Coffee Grounds in New Machine?

This is normal! Grinder was tested during assembly with beans.
Despite cleaning, traces of ground coffee may be found.

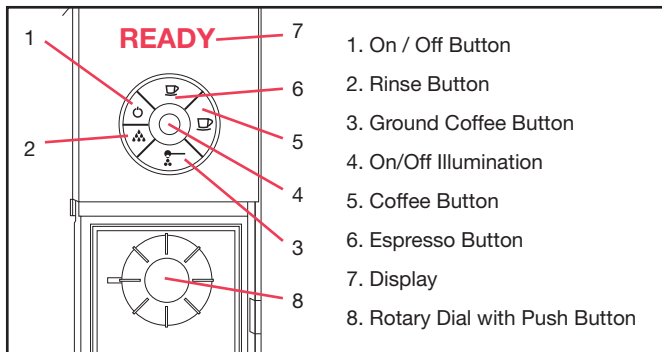

RED TEXT represents display text.

A) First Time Ever Preparation

1. Fill water in tank and beans in bean container.
2. DO NOT install the Clearyl Blue Filter now!
3. Push the main power switch in the back of the machine.
4. Push the **On/Off** button in the display. When the display reads **PRESS RINSE** place a cup under the frothXpress and push the **Rinse** button. **SYSTEM FILLING**, then **HEATING**, then **PRESS RINSE**.
5. Place a cup under the coffee spouts and press the **Rinse** button. **RINSING**, then **READY**.
6. Place a large cup underneath the coffee spouts and press the **Coffee** button. **1 COFFEE**: The machine starts grinding and brewing. Repeat once. Discard the first two cups of coffee.

B) Daily Preparation

1. Fill fresh water in tank and check bean container.
2. Push **On/Off** button. **HEATING. PRESS RINSE**. Place a cup under the coffee spouts and press the **Rinse** button. **RINSING. READY**.

Important: You can only brew coffee when display shows **READY**.

C) Grinding and Brewing Coffee

Two pre-set coffee buttons: **ESPRESSO**, **COFFEE**. These buttons are pre-set for strength (three settings), cup size (1 to 8 oz. per cup) and temperature (HIGH, NORMAL). In programming you can change all three functions.

To brew coffee:

Pre-warm cup, see "E) Using Hot Water"

READY. Place a cup under the Dual Coffee Spouts and push one of the two coffee buttons. Display shows e.g.

1 ESPRESSO and coffee flows into your cup and stops automatically. **READY.**

During brewing you can override the strength and the cup size by turning the **Rotary Dial** (behind the door on the left side). **NOTE:** To brew **two cups**, push either Coffee button twice. The C9 OT brews twice the volume.





Important: You can always stop the flow of coffee by pushing any of the coffee buttons.

D) Changing the Grinder Fineness

Important: You can only adjust the fineness during the actual grinding process.

1. Open the bean container lid and turn the dial while grinding: larger dots: coarser; smaller dots: finer.
2. For darker, oily beans, grind somewhat coarser. For lighter beans, grind somewhat finer.

E) Using Hot Water. Place a cup underneath the Hot Water nozzle and push the **Hot Water** button **WATER.** Water begins flowing. Push button again to stop the water flow.

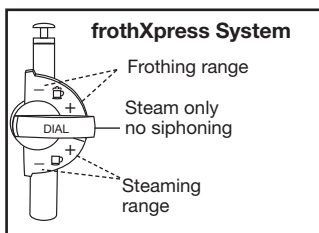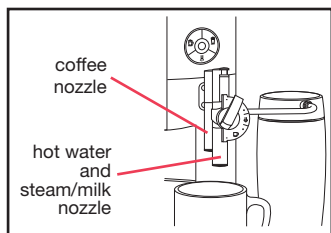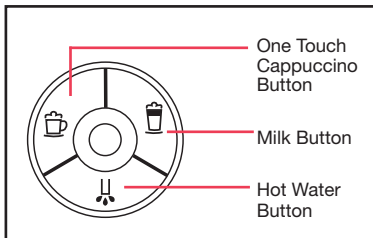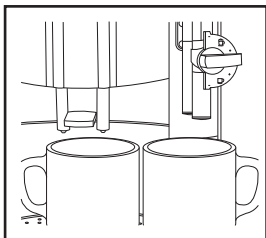

F) One Touch Cappuccino.

The C9 OT features the Auto Cappuccino System with two spouts located behind each other. The front spout produces steam (hot water and steam /milk nozzle). The rear spout produces high pressure brewed coffee. Attached to the steam nozzle is the removable frothXpress system. It siphons, steams and froths milk.

1. Fill the thermal milk container with milk and attach to the frothXpress system. **Important:** Make sure all parts are connected tightly, otherwise siphoning does not work.
2. Set the frothXpress dial to the 12 o'clock position for frothing for cappuccino or to the 6 o'clock position for steaming for latte.

3. Place a cup underneath the Cappuccino System.
4. Push the **Cappuccino** button. The C9 OT starts grinding, the display shows **CAPPUCCINO**, then coffee strength. It siphons, heats and froths milk for 14 seconds, adds 2 oz. of high-pressure brewed coffee and stops automatically. **READY**.
5. For hotter milk in either position move the frothXpress dial towards the (+) plus symbols.

NOTE: For preparing Café Mocha, Latte Macchiato, Hot Milk and Hot Chocolate see Instruction Book (page 17).

G) Cappuccino Rinsing:

Ten minutes after preparing a beverage with milk, the C9 OT shows **READY / RINSE CAPPUCCINO** and the **Rinse** button illuminates. It takes only a few seconds and makes sure that your frothXpress is free of any milk.

- Turn frothXpress dial to the 3 o'clock position and place a cup underneath the cappuccino system.
- Push **Rinse** button **CAPPUCCINO RINSING**. Hot water flows through the frothXpress and stops. **READY**.
- Turn the frothXpress dial back to your preferred position.

H) Factory Settings, Beverage Buttons:

- All coffee and water buttons are set to temperature **HIGH**.
- Espresso button – 1.5 oz./ **STRONG**.
- Coffee button – 5 oz. per cup / **NORMAL**.
- Cappuccino; one-touch button – 14 seconds milk, 2 oz. coffee / **NORMAL**.
- Milk portion button; 30 seconds milk,
- Water portion button; 6 oz.

All other settings see chapter 5, Operating Instructions.

I) Re-Programming, Beverage Buttons:

a. Visual Programming of cup size.

- Push and hold the beverage button you want to re-program, display shows **ENOUGH COFFEE?** or **ENOUGH MILK?**

Example:

Visually re-programming the Cappuccino button. **READY**.

- Prepare the Cappuccino Systems (milk container etc.) to make a cappuccino and place your cappuccino cup under the Cappuccino System.
- Push and hold the Cappuccino button until display shows **ENOUGH MILK?**
- When the desired amount of milk and milk froth is in your cup, push the Cappuccino button again. The display now shows **ENOUGH COFFEE?**
- When enough coffee has been added to your frothed milk push the Cappuccino button again. The display briefly shows **OK** then **READY**.

The next time you push the Cappuccino button, the C9 OT will produce that amount of milk and coffee.

b. Programming Cup Size, Temperature and Strength.

Example: Re-program the Cappuccino button to: 3.5 oz. of coffee, strong, milk production for 20 seconds, temperature stays as is (HIGH). **READY**.

1. Push the Rotary Dial until the display shows **RINSE**.
2. Turn the Rotary Dial to **BUTTONS** and push the Rotary Dial. The display shows **SELECT BUTTON**.
3. Push **CAPPUCCINO** button. Display shows **MILK**.
4. Push the Rotary Dial, **14 SEC**, and turn the dial until display shows **20 SEC**.
5. Push the Rotary Dial to confirm: **OK** then **MILK**.
6. Turn the Rotary Dial until display shows **WATER** (here it stands for coffee volume) and push the Dial, **2.0 OZ**.
7. Turn the Rotary Dial until the display shows **3.5 OZ** and push to confirm, **OK** then **WATER**.
8. Turn the Rotary Dial until the display shows **STRENGTH** and push the Dial, **NORMAL**.
9. Turn the Dial until the display shows **STRONG** and push the Dial, **OK**, then **STRENGTH**.
10. Turn the Rotary Dial until the display shows **EXIT** and push the dial. **BUTTONS**. If you do not want to change another button, turn dial until display shows again **EXIT** and push the Dial: **READY**.
For more programming options see Instruction Book, pages 22 through 24.

J) Installing the Clearyl Blue Filter

- Rinse filter under running water. Insert into Water Tank reception, make sure tapered end fits snugly inside the fins. Close filter holder.
- Fill tank with cold water and replace.

Activating the Clearyl Blue Filter:

You must activate the filter for the machine to monitor it properly. Otherwise the C9 OT assumes decalcifying mode. **READY**.

1. Push the Rotary Dial until display shows **RINSE**.
2. Turn the Rotary Dial until the display shows **FILTER –** and push the Rotary Dial to enter the program **NO –**.
3. Turn the Rotary Dial until **YES** is displayed and push the Rotary Dial. **OK** is displayed briefly and then **INSERT** and the **Rinse** button illuminates.
4. Place a 20 oz. container under the steam nozzle.
5. Push the **Rinse** button **FILTER RINSING**. For the next 60 seconds the machine will push water through the filter and out through the frothXpress system. Initially, the water may have a slight discoloration. The program will stop automatically. Display shows **HEATING**, then **READY**.

Please note: You can stop the water flow at any time by pushing Rinse button. Empty the container, replace and push the Rinse button to complete the activation process.

K. Replacing the Clearyl Blue Filter

When display shows **READY / FILTER** and the **Rinse** button lights up:

- Push **Rinse** button. **CHANGE**.
- Remove water tank, remove old filter. Rinse new filter under running water and install in water tank. Fill tank with fresh water and replace.
- Now proceed as explained in steps 4 and 5 above.

L) Cleaning with Special Tablet (Machine is on)

The message **READY / CLEAN** appears after 200 cups of coffee. This program removes coffee oils inside the machine and takes 20 minutes.

Important: Do not interrupt program once started.

Important: Only use special round cleaning tablet.

- Make sure the water container is at least half full.
1. Push the Rinse Button **EMPTY TRAY**.
 2. Remove and empty tray and the used coffee container and replace. **PRESS RINSE**. **Rinse** button illuminates.
Attention: If the tray and the used coffee container are already empty, you still need to remove the tray for approx. 20 seconds and then replace it.
 3. Place containers (10 oz.) under the coffee spout and the frothXpress and push the **Rinse** button.
The display shows **CLEANING**. After a short while the display shows **ADD TABLET**.
 4. Open the ground coffee funnel lid and drop one white tablet into the opening. Close lid.
 5. Push the Rinse button. The display shows **CLEANING**.
The machine will start the automatic cleaning program by dispensing water in intervals into the containers underneath the spouts. When finished, the display shows **EMPTY TRAY**.
 6. Remove the tray. There will be water in the tray and in the used coffee container. Empty, clean and replace, **READY**.

M) Decalcifying DE-SCALE

For different water hardness levels see Operating Instructions (page 19/20). If water hardness level is selected, the decalcifying monitor is active. The machine needs to be decalcified when above message appears.

CAUTION: Immediately remove any splashes of the decalcifying solution from sensitive surfaces, such as natural stone or wood.

CAUTION: If the decalcifying solution comes in contact with the skin, rinse it off with water. If the solution comes in contact with your eyes, see a doctor.

Important: If you use the Clearyl Blue filter and **DE-SCALE** appears, then the filter activation procedure was not performed properly, see "J) Installing Clearyl...".

Important: Decalcifying program must not be interrupted. Use only the special decalcifying tablets (not the cleaning tablets!). For supplies see "N) Supplies".

DE-SCALE / READY.

1. Push the Rinse button, display shows **EMPTY TRAY**.
2. Remove and empty the tray and the used coffee container and replace, display shows **AGENT IN TANK**.
Attention: If the tray and the used coffee container are empty, you must remove the tray for approx. 20 seconds and then replace it.
3. Remove the frothXpress system from the Auto Cappuccino system.
4. Remove the water container and empty.
5. Completely dissolve 3 of the large square decalcifying tablets in a container with 18 oz. of water (0.5 liters) and pour the solution into the water tank.
6. Replace water tank. **AGENT IN TANK**. The **Rinse** button illuminates.
7. Place a large container under Auto Cappuccino system.
8. Push the Rinse button. The display shows **DE-SCALING** and the light in the Rinse button flashes during the operation. The machine pumps the decalcifying solution in intervals through the Cappuccino system.
9. When display shows **EMPTY TRAY**, remove and empty the container. Then carefully remove and empty the tray and the used coffee container and replace.
10. Display shows **FILL WATER TANK**. Remove the water tank, rinse thoroughly, fill it halfway with fresh water and replace. The display shows **PRESS RINSE**.
11. Place the container under the Auto Cappuccino system and push the **Rinse** button **DE-SCALING**.
12. The machine pumps fresh water through the system and stops automatically. The display shows **EMPTY TRAY**.
13. Remove and empty the container. Then carefully remove and empty the tray and the used coffee container and replace. **READY**.
14. Attach the frothXpress system to the steam nozzle. The machine will automatically remind you when it's time to decalcify again.

N) Supplies can be ordered through:

Customer Service, Mail Order Form or www.cappresso.com

- Clearyl Blue Water Filter: #67879
- Cleaning Tablets: #62205
- Decalcifying Tablets: #61848

JURA-CAPRESSO CUSTOMER SERVICE:

1-800-220-5701 M-F 9AM - 9PM; Sat. 9AM - 5PM EST

FAX: 201-767-9684 contact@jura-cappresso.com