



IMPRESSA F7 Instructions for Use



For your safety: read and understand manual before use.

Your IMPRESSA F7

IMPORTANT SAFEGUARDS	4
Control elements	8
1 Preparing and using for the first time	10
JURA on the Internet.....	10
Setting up the machine	10
Filling the bean container.....	10
First-time use	10
Determining the water hardness	13
Adjusting the grinder	14
Filling the water tank.....	14
2 Preparation	15
Ristretto, espresso and coffee.....	16
Two specialty coffees at the touch of a button.....	16
Cappuccino.....	16
Milk foam.....	17
Ground coffee	19
Permanently setting the amount of water for the cup size	20
Hot water	21
3 Daily operation	22
Switching on	22
Daily maintenance.....	22
Switching off	23
4 Permanent settings in programming mode	24
Product settings	25
Setting the water hardness	27
Energy-saving mode	27
Automatic switch-off.....	28
Rinses	29
Restore factory settings	30
Querying information	31
Unit for amount of water.....	32
Language.....	32
5 Maintenance	33
Rinsing the machine.....	34
Rinsing the fine foam frother.....	34
Cleaning the fine foam frother	34
Dismantling and rinsing the fine foam frother.....	36
Dismantling and rinsing the professional fine foam frother	37
Inserting and activating the filter.....	37

Changing the filter	38
Cleaning the machine	40
Descaling the machine	41
Cleaning the bean container	43
Descaling the water tank	44
6 Display messages	45
7 Troubleshooting	46
8 Transport and environmentally friendly disposal	48
Transport / Emptying the system.....	48
Disposal.....	48
9 Technical data	49
10 Index	50
11 JURA contact details / Legal information	56

Symbol description

Warnings



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.


Symbols used



Prompt to take action. This symbol means that you are being prompted to perform some action.



Information and tips to make it even easier to use your IMPRESSA.

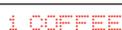

Display message

IMPORTANT SAFEGUARDS

Follow the basic safety precautions

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot steam, hot water or hot coffee.
- For household use only.

SAVE THESE INSTRUCTIONS.

Pass them on to any subsequent user.

Intended use The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Special power cord set instructions

- The power cord is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way.

Do NOT use extension cords.

If the user chooses to use an extension cord,

- the marked electrical rating of the extension cord shall be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord shall be a grounding type 3-wire cord, and
- the longer cord shall be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

 WARNING



To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact JURA customer service.

IMPORTANT SAFEGUARDS

⚠ CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher.
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts and the cappuccino frother / nozzle.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.
- Ensure that the cappuccino frother / nozzle is correctly fitted and clean. If incorrectly fitted or if they become blocked, the cappuccino frother or its parts might come off.
- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.
- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

NOTICE



**NEVER DO
(or you will void your
warranty protection):**

- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container. In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.
- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

Control elements

Control elements



- 1 Bean container with aroma preservation cover
- 2 Water tank cover
- 3 Water tank
- 4 Power switch and power cord (back of the machine)
- 5 Coffee grounds container
- 6 Drip tray
- 7 Cup platform
- 8 Filler funnel cover
- 9 Filler funnel for ground coffee

- 10 Storage compartment cover
- 11 Grinder adjustment switch
- 12 Measuring spoon for ground coffee
- 13 Height-adjustable hot-water nozzle
- 14 Switch for hot water and steam preparation
- 15 Connector System® for removable frothers
- 16 Fine foam frother
- 17 Height-adjustable coffee spout



Top of the machine

- 1  On/Off button
- 2  Rotary Switch
- 3  Maintenance button

Front

- 4  Display
- 5  Preparation buttons
 -  Ristretto button
 -  Espresso button
 -  Coffee button
 -  Hot Water button
 -  Steam button
 -  Cappuccino button

The Connector System® permits the use of different cappuccino frothers. These are available from specialized dealers.

Professional fine foam frother (sold separately)



Milk foam
Hot milk

Fine foam frother



Milk foam

1 Preparing and using for the first time

JURA on the Internet

Visit us on the Internet. You can download **short operating instructions** for your machine from the JURA website (www.jura.com). You will also find interesting and up-to-date information on your IMPRESSA and on every aspect of coffee.

Setting up the machine

When setting up your IMPRESSA, please note the following:

- Place the IMPRESSA on a horizontal surface that is not sensitive to water.
- Choose a spot for your IMPRESSA which protects the machine against overheating. Ensure that the ventilation slots are not covered.

Filling the bean container

NOTICE

Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- ▶ Only use roasted, untreated coffee beans to fill the bean container.

-
- ▶ Remove the aroma preservation cover.
 - ▶ Remove any dirt or foreign objects from inside the bean container.
 - ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

First-time use

When using the machine for the first time, you can choose whether you want to operate IMPRESSA **with** or **without** the CLEARYL Blue filter cartridge. If the water hardness is 10 °dH or more, we recommend using the filter cartridge. If you do not know the hardness of your water, you can find this out first (see Chapter 1 'Preparing and using for the first time – Determining the water hardness').

WARNING


If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged.
 - ▶ Never use a machine which has a defective power cord.
-

- i** The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 4 'Permanent settings in programming mode – Unit for amount of water').

Precondition: The bean container has been filled.

- ▶ Insert the power plug into a power socket.
-  ▶ Switch on the IMPRESSA using the power switch on the back of the machine.
-  ▶ Press the On/Off button to switch the IMPRESSA on.
LANGUAGE ENGLISH appears on the display.
-  ▶ Press the Rotary Switch to confirm the language.
OK appears briefly on the display to confirm the setting.
FILTER ✓ YES

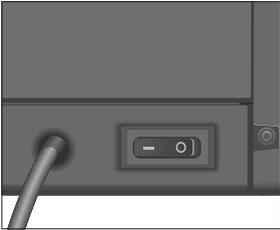

- i** Now decide whether you want to operate your IMPRESSA **with** or **without** a CLEARYL Blue filter cartridge.

First-time use with filter cartridge activation

-  ▶ Press the Rotary Switch.
OK appears briefly on the display.
FILTER INSERT
-  ▶ Press the Rotary Switch.
FILL WATER TANK
- ▶ Open the water tank cover.
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Open the filter holder.
- ▶ Remove the CLEARYL Blue filter cartridge from the Welcome Pack.
- ▶ Insert the CLEARYL Blue filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.

- i** After three months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

SWITCH OPEN

The arrow on the switch lights up.



1 Preparing and using for the first time



▶ Place a receptacle (at least 10 oz or 300 ml) under the fine foam frother and the coffee spout.



▶ Turn the switch to the  position.

FILTER RINSING, water flows out of the fine foam frother.



You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.



The water may be slightly discolored. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 10 oz (300 ml). **SWITCH CLOSE** appears on the display.



▶ Turn the switch to the  position.

The illuminated arrow on the switch goes out.

SYSTEM FILLING, the system fills up with water.

HEATING, the machine heats up.

RINSING, the system is rinsed. The rinse stops automatically. **READY** appears on the display. Your IMPRESSA is ready for use.

First-time use without filter cartridge activation



▶ Turn the Rotary Switch until **FILTER – NO** is displayed.



▶ Press the Rotary Switch.

OK appears briefly on the display.

16 °dH



If you do not know the hardness of your water, you must find this out first (see Chapter 1 'Preparing and using for the first time – Determining the water hardness').



▶ Turn the Rotary Switch to change the water hardness setting, e.g. to **25 °dH**.



▶ Press the Rotary Switch.

OK appears briefly on the display.

FILL WATER TANK

▶ Open the water tank cover.

▶ Remove the water tank and rinse it with cold water.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

SWITCH OPEN

The arrow on the switch lights up.

- ▶ Place a receptacle under the fine foam frother and under the coffee spout.



- ▶ Turn the switch to the position.

SYSTEM FILLING, the system fills up with water.

SWITCH CLOSE



- ▶ Turn the switch to the position.

The illuminated arrow on the switch goes out.

SYSTEM FILLING, the system fills up with water.

HEATING, the machine heats up.


RINSING, the system is rinsed. The rinse stops automatically. **READY** appears on the display. Your IMPRESSA is ready for use.



Determining the water hardness

You can find out what the water hardness is by using the Aquadur® test strip supplied as standard.

- ▶ Hold the test strip briefly (for 1 second) under flowing water. Shake off the water.
- ▶ Wait for about 1 minute.
- ▶ You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.

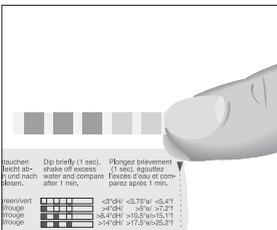

Level	Display German Degree (°dH)	Degrees of general hardness (°dGH)	Parts per million (ppm)	Indicator Strip number of 'reddish' fields
Not active	-	-	-	-
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3

1 Preparing and using for the first time

Adjusting the grinder

You can adjust the grinder on a continuous scale to suit the degree of roast of your coffee.

NOTICE


If you adjust the consistency of grind when the grinder is not operating, the grinder adjustment switch could be damaged.

- ▶ Only adjust the consistency of grind when the grinder is running.

The consistency of grind is correct if the coffee flows regularly from the coffee spout. In addition a fine, thick crema forms.

Example: Proceed as follows to change the consistency of grind **during** the preparation of an espresso.

- ▶ Place a cup under the coffee spout.
- ▶ Open the storage compartment cover.
- ▶ Press the Espresso button to start preparation.
- ▶ Turn the grinder adjustment switch to the desired position **while** the grinder is running.
The preset amount of water flows into the cup. Preparation stops automatically.
- ▶ Close the storage compartment cover.

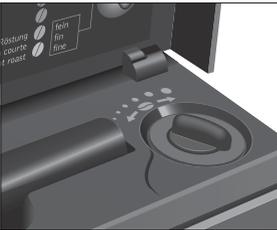

Filling the water tank

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

- ▶ Open the water tank cover.
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Close the water tank cover.



2 Preparation

WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.


-
- i** You can stop the machine at any time while a specialty coffee, steam or hot water is being prepared. Just press any button (for a specialty coffee) or return the switch to its original position (for steam and hot water).
 - i** Before the grinding operation you can select the **coffee strength** by turning the Rotary Switch : MILD, NORMAL, STRONG or EXTRA.
 - i** During the grinding operation you can select the coffee strength of **single products** by turning the Rotary Switch .
 - i** During preparation, you can change the preset **amount of water or steam** by turning the Rotary Switch .
 - i** You can follow the current status of preparation on the progress bar.
 - i** The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 4 'Permanent settings in programming mode – Unit for amount of water').

Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. The full coffee aroma can develop only in prewarmed cups. You can purchase a JURA cup warmer from your specialized dealer.

You can make **permanent settings** for all products in programming mode (see Chapter 4 'Permanent settings in programming mode – Product settings').

2 Preparation

Ristretto, espresso and coffee

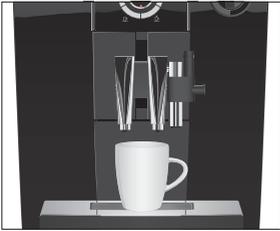

Ristretto ☺, espresso ☺ and coffee ☺ are all prepared following this model.

Example: Proceed as follows to prepare one coffee.

Precondition: **READY** is displayed.

- ▶ Place a cup under the coffee spout.
- ☺ ▶ Press the Coffee button.

Preparation starts. **1 COFFEE** and the coffee strength are displayed. The preset amount of water for coffee flows into the cup.

Preparation stops automatically. **READY** appears on the display.

Two specialty coffees at the touch of a button

Two ristretti, two espressi or two coffees can always be prepared following the same model: Press the preparation button you want **twice within two seconds**.

Cappuccino


Your IMPRESSA can prepare a cappuccino without the cup having to be moved.

- i** This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

Example: Proceed as follows to prepare one cappuccino.

Precondition: **READY** is displayed.

- ▶ Remove the protective cover from the fine foam frother.
- ▶ Connect the milk pipe to the fine foam frother. Use the short pipe for a milk container and the long pipe for a milk carton.
- ▶ Connect the other end of the milk pipe to a milk container or immerse it in a milk carton.

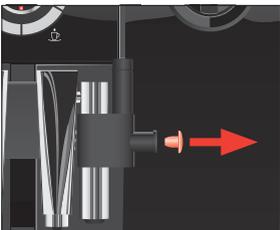

- ▶ Place a cup under the coffee spout and the fine foam frother. (Figure: Optional JURA Cool Control Basic 0.6 l)



- i** Ensure that the filling height of the milk is **no higher** than the milk pipe connection on the fine foam frother.
- i** If you are using the **professional fine foam frother**, turn the selector switch to the Milk Foam position ☺.

- ▶ Press the Cappuccino button.
NORMAL
HEATING / STEAM
 As soon as the machine has heated up, **SWITCH OPEN** appears.
 The arrow on the switch lights up.
- ▶ Turn the switch to the **☘** position.
CAPPUCCINO, the milk foam is prepared. Preparation stops automatically when the preset amount of steam is reached.
SWITCH CLOSE
- ▶ Turn the switch to the **①** position.
 The illuminated arrow on the switch goes out.
CAPPUCCINO appears on the display.
 Coffee preparation starts. The preset amount of water for espresso flows into the cup.
 Preparation stops automatically. **READY** appears on the display.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see Chapter 5 ‘Maintenance – Cleaning the fine foam frother’). Your IMPRESSA will **not** prompt you to clean the fine foam frother.

Milk foam


i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

i With the professional fine foam frother, available as an optional accessory, you can also prepare hot milk.

Example: Proceed as follows to prepare milk foam.

Precondition: **READY** is displayed.

- ▶ Remove the protective cover from the fine foam frother.
- ▶ Connect the milk pipe to the fine foam frother. Use the short pipe for a milk container and the long pipe for a milk carton.
- ▶ Connect the other end of the milk pipe to a milk container or immerse it in a milk carton.

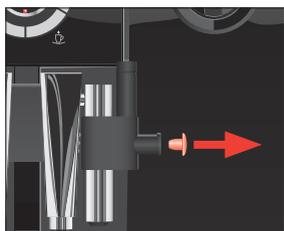

2 Preparation



- ▶ Place a cup under the fine foam frother. (Figure: Optional JURA Cool Control Basic 0.6 l)
- i** Ensure that the filling height of the milk is **no higher** than the milk pipe connection on the fine foam frother.
- i** If you are using the **professional fine foam frother**, turn the selector switch to the Milk Foam position .
- ⇩ ▶ Press the Steam button.
HEATING / STEAM
As soon as the machine has heated up, **READY / STEAM** appears.
The arrow on the switch lights up.
- ⊙ ▶ Turn the switch to the  position.
STEAM, the milk foam is prepared. Preparation stops automatically when the preset amount of steam is reached.
SWITCH CLOSE
- ⊙ ▶ Turn the switch to the  position.
The illuminated arrow on the switch goes out. **READY / STEAM** appears on the display.
- i** You can continue to prepare steam for the next 40 seconds or so without the machine having to heat up again.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see Chapter 5 ‘Maintenance – Cleaning the fine foam frother’). Your IMPRESSA will **not** prompt you to clean the fine foam frother.

Ground coffee

You can choose to use a second coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

- i** Never add more than two level measuring spoons of ground coffee.
- i** Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- i** If you did not fill the machine with a sufficient amount of ground coffee, **NOT ENOUGH PRE-GROUND** is displayed and the IMPRESSA stops the operation.
- i** The desired specialty coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the IMPRESSA stops the operation and is once more ready for use.

All specialty coffees with ground coffee are prepared following this model.

Example: Proceed as follows to prepare one espresso using ground coffee.

Precondition: **READY** is displayed.

- ▶ Place an espresso cup under the coffee spout.
- ▶ Open the cover of the filler funnel for ground coffee.
FILL PRE-GROUND
- ▶ Place one level measuring spoon of ground coffee into the filler funnel.
- ▶ Close the cover of the filler funnel.
SELECT BUTTON
-  ▶ Press the Espresso button.

Preparation starts. **1 ESPRESSO**, the preset amount of water for espresso flows into the cup.

Preparation stops automatically. **READY** appears on the display.




Permanently setting the amount of water for the cup size

It is easy to make permanent settings for the amount of water for all specialty coffees and hot water according to the cup size. Adjust the amount once as shown in the following example. Every time you prepare a drink in the future, this amount of water will be dispensed.

The permanent settings for adapting the amount of water to the cup size for all specialty coffees and hot water follow this model.

Example: Proceed as follows to **permanently** set the amount of water for one coffee.

Precondition: **READY** is displayed.

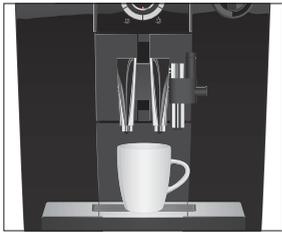

- ▶ Place a cup under the coffee spout.
- ☺ ▶ Press and **hold** the Coffee button.
1 COFFEE
- ☺ ▶ **Hold** the Coffee button down until **ENOUGH COFFEE ?** appears.
- ☺ ▶ Release the Coffee button.
Preparation starts and the coffee flows into the cup.
- ▶ Press any button as soon as there is sufficient coffee in the cup.
Preparation stops. **OK** appears briefly on the display. The set amount of water for one coffee is permanently stored.
READY appears on the display.

i You can alter this setting at any time by repeating the above procedure.

i You can also permanently set the amount of water for all specialty coffees and hot water in programming mode (see Chapter 4 'Permanent settings in programming mode – Product settings').

Hot water

To obtain a perfect water flow, use the hot-water nozzle. You can find the hot-water nozzle under the cover of the storage compartment.

CAUTION

There is a danger of scalding from hot water splashes.

- ▶ Avoid direct contact with the skin.

Example: Proceed as follows to prepare hot water.

Precondition: **READY** is displayed.

- ▶ Carefully remove the fine foam frother from the Connector System[®] by twisting slightly.
- ▶ Open the storage compartment cover, take out the hot-water nozzle and close the cover again.
- ▶ Attach the hot-water nozzle to the connector.
- ▶ Place a cup under the hot-water nozzle.
-  ▶ Press the Hot Water button.

SWITCH OPEN

The arrow on the switch lights up.



- ▶ Turn the switch to the  position.

WATER PORTION, the preset amount of water flows into the cup. Preparation stops automatically.

SWITCH CLOSE



- ▶ Turn the switch to the  position.

The illuminated arrow on the switch goes out. **READY** appears on the display.

- i** You can also prepare any amount of hot water you require: To do this, turn the switch to the  position. When there is enough water in the cup, turn the switch back to the  position.



3 Daily operation

Switching on




Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

Precondition: Your IMPRESSA is switched on at the power switch.

- ▶ Place a receptacle under the coffee spout.
- ▶ Press the On/Off button to switch the IMPRESSA on.
HEATING
RINSING, the system is rinsed. The rinse stops automatically. **READY** appears on the display. Your IMPRESSA is ready for use.

Daily maintenance

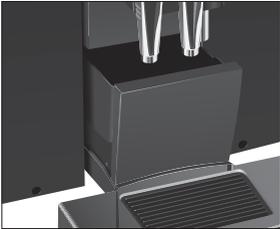

To ensure that you get many years of reliable service out of your IMPRESSA and to guarantee the optimum coffee quality, the machine requires daily maintenance.

- ▶ Pull out the drip tray.
- ▶ Empty the coffee grounds container and the drip tray. Rinse them both with warm water.
- ▶ Refit the coffee grounds container and the drip tray.
- ▶ Rinse the water tank with clean water.
- ▶ Clean the fine foam frother (see Chapter 5 'Maintenance – Cleaning the fine foam frother').
- ▶ Dismantle and rinse the fine foam frother (see Chapter 5 'Maintenance – Dismantling and rinsing the fine foam frother').
- ▶ Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth).

i In the interests of hygiene, we recommend changing the milk pipe on a regular basis (approx. every 3 months). Replacement pipes are available from specialized dealers.

Switching off



When the IMPRESSA is switched off, the system is automatically rinsed if a specialty coffee has been prepared. If cappuccino or milk foam has been prepared, the machine will also prompt you to rinse the cappuccino frother.

Precondition: **READY** is displayed.

- ▶ Place a receptacle under the fine foam frother and under the coffee spout.
- ▶ Press the On/Off button.
SWITCH OPEN (if you have prepared cappuccino or milk foam)
The arrow on the switch lights up.
- ▶ Turn the switch to the  position.
CAPPUCCINO RINSING, the fine foam frother is rinsed.
SWITCH CLOSE
- ▶ Turn the switch to the  position.
The illuminated arrow on the switch goes out.
RINSING, the system is rinsed. The operation stops automatically. Your IMPRESSA is switched off.

i When the IMPRESSA is switched off with the On/Off button, the machine consumes less than 0.1 W of standby energy. The machine can be completely disconnected from the power grid using the power switch.

4 Permanent settings in programming mode



WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

You can make permanent settings in programming mode. You can navigate through the program items and permanently save the required settings simply by turning and pressing the Rotary Switch. You can make the following settings with the Rotary Switch:

Program item	Sub-item	Explanation
RINSE	○ CLEANING, RINSE, ○ RINSE, CLEAN, FILTER (only if filter is activated), DESCALE (only if filter is not activated)	▶ Start the required maintenance program here. If no action is taken in this program item, programming mode is exited automatically after approximately 5 seconds.
BUTTONS	SELECT BUTTON	▶ Select your settings for specialty coffees and hot water.
FILTER ✓ / FILTER -	YES, NO	▶ Indicate whether you are operating your IMPRESSA with or without a CLEARYL Blue filter cartridge.
HARDNESS (only if filter is not activated)	1 °dH - 30 °dH	▶ Adjust the water hardness.
ENERGY ✓ / ENERGY -	SAVE ✓, SAVE -	▶ Choose whether you want to operate your IMPRESSA with or without energy-saving mode.
OFF AFTER	15 MIN., 30 MIN., 1 HRS. - 15 HRS.	▶ Set the time after which the IMPRESSA should switch off automatically.
RINSES	INIT RINSE, ○-RINSE	▶ Change the settings for the switch-on rinse and the cappuccino rinse.

Program item	Sub-item	Explanation
RESET ALL	PRODUCT, ALL PROD., MACHINE	▶ Reset the machine or the permanently set values of all products to the factory settings.
INFO	COUNTER, CLEAN, DESCALE (only if filter is not activated), FILTER (only if filter is activated), VERSION	▶ Keep track of all products prepared and view the number of maintenance programs performed and the maintenance status.
DISPLAY	ML, OZ	▶ Select the unit for the amount of water.
LANGUAGE		▶ Select your language.
EXIT		▶ Exit programming mode.

Product settings



WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

In the program item **BUTTONS** you can make individual settings for all specialty coffees and hot water. The following permanent settings can be made:

Product	Amount	Coffee strength	Temperature
Ristretto, espresso, coffee	Volume: 0.5 OZ – 3.0 OZ (25 ml – 240 ml)	MILD, NORMAL, STRONG, EXTRA	NORMAL, HIGH
2 ristretti, 2 espressi, 2 coffees	Volume: 0.5 OZ – 3.0 OZ (25 ml – 240 ml) (per cup)	–	NORMAL, HIGH

4 Permanent settings in programming mode

Product	Amount	Coffee strength	Temperature
Cappuccino	Volume: 0.5 OZ – 8.0 OZ (25 ml – 240 ml) Amount of milk foam: 3 SEC – 120 SEC	MILD, NORMAL, STRONG, EXTRA	NORMAL, HIGH
Steam	3 SEC – 120 SEC	–	–
Hot water	Volume: 0.5 OZ – 15.0 OZ (25 ml – 450 ml)	–	NORMAL, HOT, LOW

Permanent settings in programming mode always follow the same model.

Example: Proceed as follows to change the coffee strength for one coffee from **NORMAL** to **STRONG**.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
-  ▶ Turn the Rotary Switch until **BUTTONS** is displayed.
-  ▶ Press the Rotary Switch to enter the program item.
SELECT BUTTON

i Next select the button of the product for which you would like to make settings. No product is prepared at this point.

i To change the setting for a double product, press the corresponding symbol twice within 2 seconds.

-  ▶ Press the Coffee button.
1 COFFEE appears briefly on the display.
VOLUME
-  ▶ Turn the Rotary Switch until **STRENGTH** is displayed.
-  ▶ Press the Rotary Switch to enter the program item.
NORMAL
-  ▶ Turn the Rotary Switch until **STRONG** is displayed.
-  ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
STRENGTH
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit the program item.
BUTTONS
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.

Setting the water hardness

- ▶ Press the Rotary Switch to exit programming mode.
READY

- i** If you are using the CLEARYL Blue filter cartridge and have activated it, it is not possible to set the water hardness.

The harder the water is, the more frequently the IMPRESSA needs to be descaled. It is therefore important to set the water hardness accurately.

The water hardness can be adjusted on a continuous scale between 1 °dH and 30 °dH.

Example: Proceed as follows to change the water hardness setting from **16 °dH** to **25 °dH**.

Precondition: **READY** is displayed.

- ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
- ▶ Turn the Rotary Switch until **HARDNESS** is displayed.
- ▶ Press the Rotary Switch to enter the program item.
16 °dH
- ▶ Turn the Rotary Switch until **25 °dH** is displayed.
- ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
HARDNESS
- ▶ Turn the Rotary Switch until **EXIT** is displayed.
- ▶ Press the Rotary Switch to exit programming mode.
READY

Energy-saving mode

The energy-saving mode (Energy Save Mode, E.S.M.®) helps you to prevent your machine from consuming power unnecessarily and to actively save energy:

- **ENERGY ✓**
 - Soon after the last preparation, the IMPRESSA stops heating up. After about 5 minutes the message **ENERGY ON** is displayed.
 - Before you can prepare a specialty coffee, steam or hot water, the machine must heat up.
- **ENERGY –**
 - All specialty coffees as well as hot water can be prepared without having to wait.
 - Before you can prepare steam, the machine must heat up.

Example: Proceed as follows to change the energy-saving mode from **ENERGY ✓** to **ENERGY –**.

Precondition: **READY** is displayed.

- ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
- ▶ Turn the Rotary Switch until **ENERGY ✓** is displayed.
- ▶ Press the Rotary Switch to enter the program item.
SAVE ✓
- ▶ Turn the Rotary Switch until **SAVE –** is displayed.
- ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
ENERGY –
- ▶ Turn the Rotary Switch until **EXIT** is displayed.
- ▶ Press the Rotary Switch to exit programming mode.
READY

Automatic switch-off

By instructing your IMPRESSA to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your IMPRESSA switches off automatically after the preset time following the last action on the machine.

You can set the automatic switch-off to 15 minutes, 30 minutes or 1–15 hours.

Example: Proceed as follows to change the switch-off time from **2 HRS.** to **1 HRS.**.

Precondition: **READY** is displayed.

- ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
- ▶ Turn the Rotary Switch until **OFF AFTER** is displayed.
- ▶ Press the Rotary Switch to enter the program item.
2 HRS.
- ▶ Turn the Rotary Switch until **1 HRS.** is displayed.
- ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
OFF AFTER
- ▶ Turn the Rotary Switch until **EXIT** is displayed.
- ▶ Press the Rotary Switch to exit programming mode.
READY

Rinses

In the program item **RINSES** you can make the following settings:

- **INIT RINSE AUTOMATIC**
 - The switch-on rinse is started automatically.
- **INIT RINSE MANUAL**
 - The switch-on rinse must be started manually.
- **C-RINSE AFTER 10'**
 - You are prompted to rinse the cappuccino frother 10 minutes after preparing cappuccino or milk foam.
- **C-RINSE NOW**
 - You are prompted to rinse the cappuccino frother immediately after preparing cappuccino or milk foam.

Example: Proceed as follows to make the machine prompt you to perform cappuccino frother rinsing **immediately** after preparing a cappuccino or milk foam.

Precondition: **READY** is displayed.

- ⌚ ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
- ⌚ ▶ Turn the Rotary Switch until **RINSES** is displayed.
- ⌚ ▶ Press the Rotary Switch to enter the program item.
INIT RINSE
- ⌚ ▶ Turn the Rotary Switch until **C-RINSE** is displayed.
- ⌚ ▶ Press the Rotary Switch to enter the program item.
AFTER 10'
- ⌚ ▶ Turn the Rotary Switch until **NOW** is displayed.
- ⌚ ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
C-RINSE
- ⌚ ▶ Turn the Rotary Switch until **EXIT** is displayed.
- ⌚ ▶ Press the Rotary Switch to exit the program item.
RINSES
- ⌚ ▶ Turn the Rotary Switch until **EXIT** is displayed.
- ⌚ ▶ Press the Rotary Switch to exit programming mode.
READY

Restore factory settings

In the program item **RESET ALL** you can reset various settings to their factory settings:

- **PRODUCT**
 - The settings (amount, coffee strength and temperature) for any product can be reset **individually** to the factory settings. The corresponding double product is also reset to the factory settings at the same time.
- **ALL PROD.**
 - The settings (amount, coffee strength and temperature) for **all products** are reset to the factory settings.
- **MACHINE**
 - **All user settings** (apart from the 'filter' and 'water hardness') are reset to factory settings. Your IMPRESSA then switches off.

Example: Proceed as follows to reset the values for 'Espresso' to the factory settings.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
-  ▶ Turn the Rotary Switch until **RESET ALL** is displayed.
-  ▶ Press the Rotary Switch to enter the program item.
PRODUCT
-  ▶ Press the Rotary Switch.
SELECT BUTTON
-  ▶ Press the Espresso button.
OK appears briefly on the display.
PRODUCT
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit the program item.
RESET ALL
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
READY

Querying information

In the program item **INFO** you can view the following information:

- Number of products prepared
- Number of maintenance programs performed (cleaning, descaling, filter changes) and maintenance status
- Software version

Example: Proceed as follows to view the number of coffees prepared.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
-  ▶ Turn the Rotary Switch until **INFO** is displayed.
-  ▶ Press the Rotary Switch to enter the program item.
COUNTER
-  ▶ Press the Rotary Switch to enter the program item.
250 (example), the total number of all products prepared is displayed.
-  ▶ Press the Coffee button.
1 COFFEE 88 (example), the number of coffees prepared is displayed.
-  Press the Coffee button  again to view the number of double products.
-  ▶ Turn the Rotary Switch to view additional information.
-  The maintenance status can also be displayed in addition to the number of performed maintenance programs. The bar shows the current maintenance status. When the bar is completely filled, your IMPRESSA will request the respective maintenance program.
-  ▶ Press the Rotary Switch to exit the program item.
COUNTER
-  Turn the Rotary Switch  to view additional information.
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit the program item.
INFO
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
READY

Unit for amount of water

In the program item **DISPLAY** you can select the unit used for the amount of water.

Example: Proceed as follows to change the unit for the amount of water from **OZ** to **ML**.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
-  ▶ Turn the Rotary Switch until **DISPLAY** is displayed.
-  ▶ Press the Rotary Switch to enter the program item.
OZ
-  ▶ Turn the Rotary Switch until **ML** is displayed.
-  ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
DISPLAY
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
READY

Language

In the program item **LANGUAGE** you can select the language used by your IMPRESSA.

Example: Proceed as follows to change the language from **ENGLISH** to **DEUTSCH**.

Precondition: **READY** is displayed.

-  ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
-  ▶ Turn the Rotary Switch until **LANGUAGE** is displayed.
-  ▶ Press the Rotary Switch to enter the program item.
LANGUAGE ENGLISH
-  ▶ Turn the Rotary Switch until **DEUTSCH** is displayed.
-  ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
SPRACHE
-  ▶ Turn the Rotary Switch until **EXIT** is displayed.
-  ▶ Press the Rotary Switch to exit programming mode.
BEREIT

5 Maintenance

WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Keep children away from the machine while it is performing a maintenance program.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ When using do not eat or drink.
- ▶ Keep maintenance products away from food, drink and animal food.
- ▶ Keep container tightly closed and dry. Keep in a cool place.

Your IMPRESSA has the following integrated maintenance programs:

- Rinsing the machine (RINSE)
- Rinsing the fine foam frother (C RINSE)
- Cleaning the fine foam frother (C CLEANING)
- Changing the filter (FILTER)
- Cleaning the machine (CLEAN)
- Descaling the machine (DESCALE) (only if filter is not activated)

i Clean the machine, change the filter or descale the machine when you are prompted to do so.

i You can start the maintenance programs at any time in programming mode (program item RINSE). If no action is taken in this program item, programming mode is exited automatically after approximately 5 seconds.

i Your IMPRESSA will not prompt you to clean the fine foam frother. In the interests of hygiene, you should clean the fine foam frother **daily** when you have been preparing milk.

Rinsing the machine



You can initiate the rinse operation manually at any time.

Precondition: **READY** is displayed.

- ▶ Place a receptacle under the coffee spout.
- ⌚ ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
- ⌚ ▶ Press the Rotary Switch to enter the program item.
C CLEANING
- ⌚ ▶ Turn the Rotary Switch until **RINSE** is displayed.
- ⌚ ▶ Press the Rotary Switch to initiate the rinse operation.
RINSING, water flows out of the coffee spout.
The rinse stops automatically. **READY** appears on the display.

Rinsing the fine foam frother

i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

After each milk preparation, the IMPRESSA prompts you to perform a cappuccino rinse.

Precondition: **RINSE CAPPUCCINO** is displayed and the Maintenance button **⚡** lights up.

- ▶ Place a receptacle under the fine foam frother.
- ⚡ ▶ Press the Maintenance button.
SWITCH OPEN
The arrow on the switch lights up.
- ⌚ ▶ Turn the switch to the **⚡** position.
CAPPUCCINO RINSING, the fine foam frother is rinsed.
The rinse stops automatically. **SWITCH CLOSE** appears on the display.
- ⌚ ▶ Turn the switch to the **⌚** position.
The illuminated arrow on the switch goes out. **READY** appears on the display.

Cleaning the fine foam frother

i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk. Your IMPRESSA will **not** prompt you to clean the fine foam frother.

⚠ WARNING

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

- ▶ Use only original JURA milk system cleaner.

⚠ WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

i JURA milk system cleaner is available from specialized dealers.

Precondition: **READY** is displayed.

- ⌚ ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
- ⌚ ▶ Press the Rotary Switch to enter the program item.
C CLEANING
- ⌚ ▶ Press the Rotary Switch.
CLEANER FOR CAPPU.
 - ▶ Remove the milk pipe from the milk container or carton.
 - ▶ Pour 8.5 oz (250 ml) of fresh water into a receptacle and add one capful of milk system cleaner.
 - ▶ Immerse the milk pipe in the receptacle.
 - ▶ Place a receptacle under the fine foam frother.
- ⌚ ▶ Press the Rotary Switch.
HEATING / STEAM

As soon as the machine has heated up, **SWITCH OPEN** appears.

The arrow on the switch lights up.
- ⌚ ▶ Turn the switch to the **⚡** position.
CAPPUCCINO CLEANING, the fine foam frother and the milk pipe are cleaned.
SWITCH CLOSE



- ▶ Turn the switch to the ① position.
WATER FOR CAPPUCCINO
- ▶ Rinse the receptacle thoroughly, fill it with 8.5 oz (250 ml) of fresh water and immerse the milk pipe in the water.
- ▶ Empty the other receptacle and place it under the fine foam frother once more.
- ▶ Turn the switch to the ⚡ position.
CAPPUCCINO CLEANING, the fine foam frother and the milk pipe are rinsed with fresh water.
SWITCH CLOSE
- ▶ Turn the switch to the ① position.
The illuminated arrow on the switch goes out. **READY** appears on the display.

Dismantling and rinsing the fine foam frother

To make sure the fine foam frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk. Your IMPRESSA will not prompt you to dismantle and rinse the frother.



- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Carefully remove the fine foam frother from the Connector System® by twisting slightly.
- ▶ Dismantle the fine foam frother into its individual parts.
- ▶ Rinse all the parts of the fine foam frother thoroughly under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 8.5 oz (250 ml) cold water and one capful of JURA milk system cleaner. Then rinse the parts thoroughly.
- ▶ Re-assemble the fine foam frother.

- i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.
- ▶ Firmly attach the fine foam frother to the Connector System®.

Dismantling and rinsing the professional fine foam frother



To make sure the professional fine foam frother (sold separately) works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk. Your IMPRESSA will not prompt you to dismantle and rinse the frother.

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Carefully remove the professional fine foam frother from the Connector System® by twisting slightly.
- ▶ Dismantle the professional fine foam frother into its individual parts.
- ▶ Rinse all the parts of the professional fine foam frother thoroughly under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 8.5 oz (250 ml) cold water and one capful of JURA milk system cleaner. Then rinse the parts thoroughly.
- ▶ Re-assemble the professional fine foam frother.

i Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.

- ▶ Firmly attach the professional fine foam frother to the Connector System®.

Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using the CLEARYL Blue filter cartridge. If you did not activate the filter cartridge the first time you used the machine, you can do this now as follows.

i Perform the ‘inserting the filter’ operation without any interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: **READY** is displayed.

- ⌚ ▶ Press **and hold** the Rotary Switch until **RINSE** appears.
- ⌚ ▶ Turn the Rotary Switch until **FILTER --** is displayed.
- ⌚ ▶ Press the Rotary Switch to enter the program item.
NO
- ⌚ ▶ Turn the Rotary Switch until **YES** is displayed.
- ⌚ ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display.
FILTER INSERT

5 Maintenance



- ▶ Remove and empty the water tank.
- ▶ Open the filter holder.
- ▶ Remove the CLEARYL Blue filter cartridge from the Welcome Pack.
- ▶ Insert the CLEARYL Blue filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.

i After three months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle (at least 10 oz or 300 ml) under the fine foam frother.



- ▶ Press the Rotary Switch.

SWITCH OPEN

The arrow on the switch lights up.



- ▶ Turn the switch to the  position.

FILTER RINSING, water flows out of the fine foam frother.

i You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.

i The water may be slightly discolored. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 10 oz (300 ml). **SWITCH CLOSE** appears on the display.



- ▶ Turn the switch to the  position.

The illuminated arrow on the switch goes out.

HEATING, the machine heats up.

READY appears on the display. The filter is now activated.

Changing the filter

i After 2000 oz (60 liters) of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.

i After three months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- i** If the CLEARYL Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.
- i** CLEARYL filter cartridges are available from specialized dealers.

Precondition: **READY / FILTER** is displayed and the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

FILTER CHANGE

- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLEARYL Blue filter cartridge.
- ▶ Insert a new CLEARYL Blue filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.



- ▶ Place a receptacle (at least 10 oz or 300 ml) under the fine foam frother.

-  ▶ Press the Rotary Switch.

SWITCH OPEN

The arrow on the switch lights up.

-  ▶ Turn the switch to the  position.

FILTER RINSING, water flows out of the fine foam frother.

- i** You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.

- i** The water may be slightly discolored. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 10 oz (300 ml). **SWITCH CLOSE** appears on the display.

-  ▶ Turn the switch to the  position.

The illuminated arrow on the switch goes out.

HEATING, the machine heats up.

READY appears on the display.

Cleaning the machine

⚠ WARNING

After 200 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

i The cleaning program lasts approximately 20 minutes.

i Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.

i JURA cleaning tablets are available from specialized dealers.

Precondition: **READY / CLEAN** is displayed and the Maintenance button **⚙** lights up.

- ⚙** ▶ Press the Maintenance button.

EMPTY TRAY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

PRESS RINSE, the Maintenance button **⚙** lights up.

- ▶ Place a receptacle under the coffee spout.

- ⚙** ▶ Press the Maintenance button.

CLEANING, water flows out of the coffee spout.

The operation is interrupted, **ADD TABLET**.

- ▶ Open the cover of the filler funnel for ground coffee.





- ▶ Insert a JURA cleaning tablet into the filler funnel.
 - ▶ Close the cover of the filler funnel.
- PRESS RINSE**, the Maintenance button  lights up.
-  ▶ Press the Maintenance button.
- CLEANING**, water flows out of the coffee spout several times.
- The operation stops automatically.
- EMPTY TRAY**
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- HEATING**
- READY** appears on the display. Cleaning is now complete. Your IMPRESSA is once more ready for use.

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are specially formulated for your machine.

WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling program to run to the end.

- i** The descaling program lasts approximately 45 minutes.
- i** JURA descaling tablets are available from specialized dealers.
- i** If you use a CLEARYL Blue filter cartridge and this is activated, you will not be prompted to descale.
- i** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.

Precondition: **READY / DESCALE** is displayed and the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

EMPTY TRAY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

AGENT IN TANK

- ▶ Remove and empty the water tank.
- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a receptacle holding 500 ml of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.

SWITCH OPEN

The arrow on the switch lights up.

- ▶ Carefully remove the fine foam frother from the Connector System[®] by twisting slightly.
- ▶ Place a receptacle (at least 500 ml) under the Connector System[®].



- ▶ Turn the switch to the  position.

DESCALING, water flows out of the Connector System[®] several times. The Maintenance button  flashes during the descaling operation.

The operation is interrupted, **SWITCH CLOSE**.




- ▶ Turn the switch to the  position.

DESCALING, the descaling operation is continued. The Maintenance button  flashes during the descaling operation.

The operation is interrupted, **EMPTY TRAY**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

FILL WATER TANK

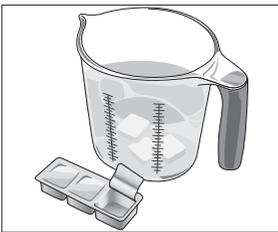

- ▶ Empty the receptacle and place it under the Connector System® and the coffee spout.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

SWITCH OPEN

The arrow on the switch lights up.



- ▶ Turn the switch to the  position.
DESCALING, the descaling operation is continued. The Maintenance button  flashes during the descaling operation.

The operation is interrupted, SWITCH CLOSE.



- ▶ Turn the switch to the  position.
DESCALING, the descaling operation is continued. The Maintenance button  flashes during the descaling operation.

The operation is interrupted, DESCALING.

Water flows out of the coffee spout.

EMPTY TRAY

- ▶ Re-assemble the fine foam frother.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

READY appears on the display. Descaling is now complete. Your IMPRESSA is once more ready for use.



If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: FILL BEANS is displayed.



- ▶ Switch the machine off with the On/Off button.



- ▶ Switch the machine off at the power switch.
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLEARYL Blue filter cartridge, remove this.
- ▶ Descale the tank with a mild conventional descaling agent in accordance with the manufacturer's instructions.
- ▶ Rinse out the water tank thoroughly.
- ▶ If you use a CLEARYL Blue filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

6 Display messages

Message	Cause/Result	Action
FILL WATER TANK	The water tank is empty. You cannot prepare any products.	▶ Fill the water tank (see Chapter 1 'Preparing and using for the first time – Filling the water tank').
EMPTY GROUNDS	The coffee grounds container is full. You cannot prepare any products.	▶ Empty the coffee grounds container and the drip tray (see Chapter 3 'Daily operation – Daily maintenance').
TRAY MISSING	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	▶ Fit the drip tray.
FILL BEANS	The bean container is empty. You cannot prepare any products.	▶ Fill the bean container (see Chapter 1 'Preparing and using for the first time – Filling the bean container').
PRESS RINSE	The IMPRESSA is prompting you to perform a rinse or continue a maintenance program that was already started.	▶ Press the Maintenance button to start the rinse or to continue the maintenance program.
RINSE CAPPUCCINO	The IMPRESSA requests a cappuccino rinse.	▶ Press the Maintenance button to start the cappuccino rinse.
READY / FILTER	The filter cartridge no longer works.	▶ Replace the CLEARYL Blue filter cartridge (see Chapter 5 'Maintenance – Changing the filter').
READY / CLEAN	The IMPRESSA is prompting you to clean it.	▶ Perform cleaning (see Chapter 5 'Maintenance – Cleaning the machine').
READY / DESCALE	The IMPRESSA is prompting you to descale it.	▶ Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
NOT ENOUGH PRE-GROUND	There is insufficient ground coffee in the machine; the IMPRESSA stops the operation.	▶ The next time you prepare a beverage, add more ground coffee (see Chapter 2 'Preparation – Ground coffee').
TOO HOT	The system is too hot to start a maintenance program.	▶ Wait for several minutes until the system has cooled or prepare a specialty coffee or hot water.

7 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed or milk sprays out of the fine foam frother.	The fine foam frother is dirty.	<ul style="list-style-type: none"> ▶ Clean the fine foam frother (see Chapter 5 'Maintenance – Cleaning the fine foam frother'). ▶ Dismantle and rinse the fine foam frother (see Chapter 5 'Maintenance – Dismantling and rinsing the fine foam frother').
Coffee only comes out in drips when it is being prepared.	Coffee or ground coffee has been ground too finely and is blocking the system. The same filter cartridge may have been used several times or the water hardness set incorrectly in the programming mode.	<ul style="list-style-type: none"> ▶ Put the grinder on a coarser setting or use coarser ground coffee (see Chapter 1 'Preparing and using for the first time – Adjusting the grinder'). ▶ Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
Water hardness cannot be adjusted.	The CLEARYL Blue filter cartridge is activated.	<ul style="list-style-type: none"> ▶ Deactivate the filter cartridge in programming mode.
FILL WATER TANK is displayed although the water tank is full.	The water tank float is trapped.	<ul style="list-style-type: none"> ▶ Descale the water tank (see Chapter 5 'Maintenance – Descaling the water tank').
Little or no water or steam comes out of the fine foam frother. The pump is very quiet.	The connector of the fine foam frother may be blocked by milk residues or limescale fragments loosened during descaling.	<ul style="list-style-type: none"> ▶ Remove the fine foam frother. ▶ Unscrew the black connector with the aid of the hexagonal hole on the measuring spoon for ground coffee. ▶ Clean the connector thoroughly. ▶ Screw the connector back on by hand. ▶ Carefully tighten it using the hexagonal hole on the measuring spoon, turning by no more than a quarter of a rotation.
Grinder is making a very loud noise.	There are foreign objects in the grinder.	<ul style="list-style-type: none"> ▶ Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

Problem	Cause/Result	Action
ERROR 2 or ERROR 5 is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	► Warm the machine at room temperature.
Other ERROR messages are displayed.	–	► Switch the IMPRESSA off at the power switch. Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

- i** If you were unable to solve the problem, contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

8 Transport and environmentally friendly disposal

Transport / Emptying the system

Keep the packaging for your IMPRESSA. It should be used to protect the machine during transport.

In order to protect the IMPRESSA from frost during transport, the system must be emptied.



Precondition: **READY** is displayed.

- ▶ Place a receptacle under the fine foam frother.
- ⏴ ▶ Press the Steam button.
HEATING / STEAM
As soon as the machine has heated up, **READY / STEAM** appears.
The arrow on the switch lights up.
- ⌚ ▶ Turn the switch to the ⏴ position.
STEAM, hot steam is discharged from the fine foam frother.
- ▶ Remove and empty the water tank.
- ⌚ ▶ Turn the Rotary Switch until **60 SEC** is displayed.
Steam will continue to be discharged from the fine foam frother until the system is empty.
SWITCH CLOSE
- ⌚ ▶ Turn the switch to the ⌚ position.
The illuminated arrow on the switch goes out. **FILL WATER TANK** appears on the display.
- ⏻ ▶ Press the On/Off button.
Your IMPRESSA is switched off.

Disposal

Please dispose of old machines in an environmentally neutral way.



9 Technical data

Voltage	120 V ~, 60 Hz
Power	1450 W
Conformity mark	
Energy consumption ENERGY ✓	approx. 6 Wh
Energy consumption ENERGY -	approx. 13 Wh
Pump pressure	Static, max. 15 bar
Holding capacity of water tank	64 oz (1.9 l)
Holding capacity of bean container	11 oz (310 g)
Holding capacity of coffee grounds container	Max. 15 portions
Cord length	Approx. 59 in. (Approx. 1.5 m)
Weight	21 lb (9.6 kg)
Dimensions (W × H × D)	11.2 × 14 × 17.5 in. (28.5 × 35.5 × 44.5 cm)

Information for testers (repeat test in accordance with DIN VDE 0701-0702): The central grounding point (CGP) is located on the underside of the machine, right next to the power cord's connection point.

Directives The machine complies with the following directives:

- Standard UL 1082
- Canadian Standard CSA C22.2 No. 64

10 Index

A

- Addresses 56
- Aroma preservation cover
 - Bean container with aroma preservation cover 8
- Automatic switch-off 28

B

- Bean container
 - Bean container with aroma preservation cover 8
 - Cleaning 43
 - Filling 10
- Bus bar
 - Technical data 49
- Button
 - Cappuccino button 9
 - Coffee button 9
 - Espresso button 9
 - Hot Water button 9
 - Maintenance button 9
 - On/Off button 9
 - Ristretto button 9
 - Steam button 9

C

- Cappuccino 16
- Cappuccino frother rinsing 29, 34
- Central grounding point 49
- Cleaning
 - Bean container 43
 - Fine foam frother 34
 - Machine 40
- CLEARYL Blue filter cartridge
 - Changing 38
 - Inserting and activating the filter 37
- Coffee 16
- Coffee grounds container 8
- Coffee spout
 - Height-adjustable coffee spout 8
- Connector System© 8
- Consistency of grind
 - Adjusting the grinder 14
 - Grinder adjustment switch 8
- Contact details 56

Cover

- Filler funnel for ground coffee 8
- Storage compartment 8
- Water tank 8
- Cup platform 8
- Customer support 56

D

- Descaling
 - Machine 41
 - Water tank 44
- Display 9
- Display messages 45
- Disposal 48
- Double product 16
- Drip tray 8

E

- Emptying the system 48
- Energy-saving mode 27
- Errors
 - Troubleshooting 46
- Espresso 16

F

- Factory settings
 - Restore factory settings 30
- Filler funnel
 - Filler funnel for ground coffee 8
- Filling
 - Bean container 10
 - Water tank 14
- Filter
 - Changing 38
 - Inserting and activating the filter 37
- Fine foam frother 8
 - Cleaning 34
 - Dismantling and rinsing 36
 - Rinsing 34
- First-time use 10
 - With filter cartridge activation 11
 - Without filter cartridge activation 12

G

- Grinder adjustment switch 8
- Ground coffee 19
 - Measuring spoon for ground coffee 8
- Grounding point 49

H

- Height-adjustable coffee spout 8
- Hotline 56
- Hot water 21
- Hot water and steam preparation
 - Switch for hot water and steam preparation 8
- Hot-water nozzle 8

I

- Important safeguards
 - Safety 4
- Instant coffee
 - Ground coffee 19
- Internet 10

J

- JURA
 - Contact details 56
 - Internet 10

L

- Language 32

M

- Machine
 - Cleaning 40
 - Descaling 41
 - Rinsing 34
 - Setting up 10
 - Switching off 23
 - Switching on 22
- Maintenance 33
 - Daily maintenance 22
- Measuring spoon for ground coffee 8
- Messages, display 45
- Milk foam 17

P

- Permanently setting the water for the cup size 20
- Permanent settings in programming mode 24
- Power cord 8
- Power switch 8
- Preparation 15
 - Cappuccino 16
 - Coffee 16
 - Espresso 16

- Ground coffee 19
- Hot water 21
- Milk foam 17
- Ristretto 16
 - Two specialty coffees 16

Problems

- Troubleshooting 46
- Product settings 25
- Professional fine foam frother
 - Dismantling and rinsing 37
- Programming mode 24
 - Automatic switch-off 28
 - Cappuccino frother rinsing 29
 - Energy-saving mode 27
 - Language 32
 - Product settings 25
 - Querying information 31
 - Restore factory settings 30
 - Rinses 29
 - Setting the water hardness 27
 - Switch-on rinse 29
 - Unit for amount of water 32

Q

- Querying information 31

R

- Rinses 29
 - Cappuccino frother rinsing 29, 34
 - Switch-on rinse 29
- Rinsing
 - Fine foam frother 34
 - Machine 34
- Ristretto 16
- Rotary Switch 9

S

- Safety
 - Important safeguards 4
- Settings
 - Permanent settings in programming mode 24
- Setting up
 - Setting up the machine 10
- Short operating instructions 10
- Switch for hot water and steam preparation 8

10 Index

- Switching off
 - Machine 23
- Switching on
 - Machine 22
- Switch-off
 - Automatic switch-off 28
- Switch-on rinse 29
- Symbol description 3

T

- Technical data 49
- Tel 56
- Transport 48
- Troubleshooting 46
- Two products 16

U

- Unit for amount of water 32
- Use, First-time 10

W

- Water hardness
 - Determining the water hardness 13
 - Setting the water hardness 27
- Water tank 8
 - Descaling 44
 - Filling 14
- Website 10

- intentionally blank -

- intentionally blank -

- intentionally blank -

11 JURA contact details / Legal information

11 JURA contact details / Legal information

JURA Elektroapparate AG
 Kaffeeweltstrasse 10
 CH-4626 Niederbuchsiten
 Switzerland

	USA: JURA Inc.	Canada: FAEMA
Customer Service		
Phone	1-800-220-5701	1-(855)-544-8600
E-Mail	info@us.jura.com	info@juracanada.ca
Opening Hours (EST)	Mon – Thu 9 am – 9 pm Fri 9 am – 8 pm Sat 9 am – 5 pm	
Distributor Address	20 Craig Road Montvale, NJ 07645	115 Matheson Boulevard East Mississauga, Ontario, L4Z 1X8
Phone	001 (201) 767-3999	1-(905)-501-8600
Fax	001 (201) 767-9684	
Internet	www.us.jura.com	www.ca.jura.com

@ You will find additional contact details for your country at www.jura.com.

Technical changes We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colors of the machine. Some details of your IMPRESSA may vary.

Feedback Your opinion is important to us! Use the contact details at www.jura.com.

Copyright The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.