



IMPRESSA Z7 – Quick Reference Guide



These short instructions do not replace the 'IMPRESSA Z7 Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

IMPORTANT SAFEGUARDS

- Follow the basic safety precautions** When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:
- Read all instructions.
 - Do not touch hot surfaces. Use handles or knobs.
 - To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
 - Close supervision is necessary when any appliance is used by or near children.
 - Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
 - Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
 - The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
 - Do not use outdoors.
 - Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
 - Do not place on or near a hot gas or electric burner, or in a heated oven.
 - Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
 - Do not use appliance for other than intended use.
 - Use extreme caution when dispensing hot steam, hot water or hot coffee.
 - For household use only.

SAVE THESE INSTRUCTIONS.
Pass them on to any subsequent user.

IMPORTANT SAFEGUARDS

Intended use The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Special power cord set instructions

- The power cord is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug. As a safety feature, this plug will fit in a polarized outlet only one way.
- If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
- Do not modify the plug in any way or attempt to defeat this safety feature.

Do NOT use extension cords.

If the user chooses to use an extension cord,

- the marked electrical rating of the extension cord shall be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord shall be a grounding type 3-wire cord, and
- the longer cord shall be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

WARNING



To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

IMPORTANT SAFEGUARDS

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact JURA customer service.

⚠ CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher.
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts and the cappuccino frother / nozzle.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.
- Ensure that the cappuccino frother / nozzle is correctly fitted and clean. If incorrectly fitted or if they become blocked, the cappuccino frother or its parts might come off.

NOTICE



- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.
- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

IMPORTANT SAFEGUARDS

**NEVER DO
(or you will void your
warranty protection):**

- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container. In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.
- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

IMPRESSA Z7 – Quick Reference Guide

Rinsing the machine



You can initiate the rinse operation manually at any time.

Precondition: **COFFEE READY** is displayed.

- ▶ Place a receptacle under the coffee spout.
 - ▶ Press **and hold** the Rotary Switch until **MAINTENANCE** appears.
 - ▶ Press the Rotary Switch to enter the program item.
CAPPUCCINO CLEAN
 - ▶ Turn the Rotary Switch until **MACHINE RINSING** is displayed.
 - ▶ Press the Rotary Switch to initiate the rinse operation.
RINSING
- Rinsing stops automatically and **COFFEE READY** appears on the display.

Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using the CLEARYL Blue filter cartridge.

- i** Perform the 'inserting the filter' operation without any interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: **COFFEE READY** is displayed.

- ▶ Press **and hold** the Rotary Switch until **MAINTENANCE** appears on the display.
- ▶ Turn the Rotary Switch until **FILTER** is displayed.
- ▶ Press the Rotary Switch to enter the program item.
FILTER NO
- ▶ Turn the Rotary Switch until **FILTER YES** is displayed.
- ▶ Press the Rotary Switch to confirm the setting.
CONFIRMED appears briefly on the display.
INSERT FILTER / PRESS BUTTON, the Maintenance button **⚙** lights up.
- ▶ Remove the filter cartridge extension from the Welcome Pack.
- ▶ Fit the filter extension on top of a CLEARYL Blue filter cartridge.
- ▶ Remove and empty the water tank.



- ▶ Open the filter holder and insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.

i After two months, the filter will cease to work. You can check the elapsed time by referring to the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle (at least 17 oz or 500 ml) under the cappuccino frother.

⚡ ▶ Press the Maintenance button.
FILTER RINS. Water flows out of the cappuccino frother.

i You can interrupt rinsing of the filter at any time by pressing any button. Press the Maintenance button ⚡ to continue rinsing of the filter.

i The water may be slightly discolored. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 17 oz (500 ml). **COFFEE READY** appears on the display. The filter is activated.

Changing the filter

i After 2000 oz (60 liters) of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.

i After two months, the filter will cease to work. You can check the elapsed time by referring to the date plate on the filter holder in the water tank.

i If the CLEARYL Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.

Precondition: **COFFEE READY / FILTER CHANGE** is displayed and the Maintenance button ⚡ lights up.

- ⚡ ▶ Press the Maintenance button.
CHANGE TIME 20 MIN / START YES

i If you do not want to start changing the filter just yet, turn the Rotary Switch until **CHANGE / START NO** is displayed. Press the Rotary Switch to exit the maintenance program. The prompt to change the filter remains active.

- ⚡ ▶ Press the Maintenance button.
CHANGE FILTER / PRESS BUTTON
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLEARYL Blue filter cartridge and extension piece.
- ▶ Fit the filter extension on top of a new filter cartridge.
- ▶ Insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.



- ▶ Place a receptacle (at least 17 oz or 500 ml) under the cappuccino frother.
- ▶ Turn the setting wheel of the cappuccino frother to the steam position ⚡.
- ⚡ ▶ Press the Maintenance button.
FILTER RINS., water flows out of the frother.



i You can interrupt rinsing of the filter at any time by pressing any button. Press the Maintenance button ⚡ to continue rinsing of the filter.

i The water may be slightly discolored. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 17 oz (500 ml). The IMPRESSA heats up and is once more ready for use.

Rinsing the cappuccino frother



After each milk preparation, the IMPRESSA prompts you to run a cappuccino rinse.

Precondition: COFFEE READY / CAPPU RINSE is displayed and the Maintenance button ☼ lights up.

- ▶ Place a receptacle under the cappuccino frother.
 - ☼ ▶ Press the Maintenance button.
- CAPPUCCINO RINSING, the cappuccino frother is rinsed.
- COFFEE READY

Cleaning the cappuccino frother

To ensure that the cappuccino frother always works properly, you should clean it **daily** when you have been preparing milk. Your IMPRESSA will **not** prompt you to clean the cappuccino frother.

WARNING

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

- ▶ Use only original JURA Cappuccino Cleaner.



WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

 JURA Cappuccino Cleaner is available from specialized dealers.

Precondition: COFFEE READY is displayed.

- ▶ Press and hold the Rotary Switch until **MAINTENANCE** appears.
- ▶ Press the Rotary Switch to enter the program item.
CAPPUCCINO CLEAN
- ▶ Press the Rotary Switch.
CLEANER FOR CAPPUCCINO / PRESS BUTTON
- ▶ Pour 8.5 oz (250 ml) of fresh water into a receptacle and add one capful (max. 0.5 oz or 15 ml) of Cappuccino Cleaner.
- ▶ Immerse the milk pipe in the receptacle.
- ▶ Turn the setting wheel of the cappuccino frother to the milk foam  or milk  position.
- ▶ Place another receptacle under the cappuccino frother.
- ▶ Press the Maintenance button.
CAPPUCCINO CLEANING, the cappuccino frother and the pipe are cleaned.
WATER FOR CAPPUCCINO / PRESS BUTTON
- ▶ Rinse the receptacle thoroughly, fill it with 8.5 oz (250 ml) of fresh water and immerse the milk pipe in the water.
- ▶ Empty the other receptacle and place it under the cappuccino frother again.
- ▶ Press the Maintenance button.
CAPPUCCINO CLEANING, the cappuccino frother and the pipe are rinsed with fresh water.
COFFEE READY appears on the display.



Dismantling and rinsing the cappuccino frother



- ▶ Carefully pull the cappuccino frother down and off.
 - ▶ Dismantle the frother completely.
 - ▶ Rinse all frother parts thoroughly under running water.
 - ▶ Reassemble the cappuccino frother.
- i** Ensure that all individual parts are correctly and firmly connected to ensure correct operation of the cappuccino frother.
- ▶ Firmly attach it to the connector.

Cleaning the machine

After 220 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

WARNING




Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are specially formulated for your machine.


WARNING


Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.



- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

-  The cleaning program lasts approximately 20 minutes.
-  Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
-  JURA cleaning tablets are available from specialized dealers.

Precondition: COFFEE READY / CLEAN is displayed and the Maintenance button  lights up.

-  ▶ Press the Maintenance button.
CLEANING TIME 20 MIN / START YES

-  If you do not want to start cleaning just yet, turn the Rotary Switch until CLEANING / START NO is displayed. Press the Rotary Switch to exit the maintenance program. The prompt to clean the machine remains active.

-  ▶ Press the Maintenance button.
TRAY / EMPTY
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
PRESS BUTTON, the Maintenance button  lights up.



- ▶ Place one receptacle under the coffee spout and another under the cappuccino frother.
- ⚠ ▶ Press the Maintenance button.
MACHINE IS CLEANING, water flows out of the coffee spout.

The operation is interrupted, **ADD TABLET**.

- ▶ Open the cover of the bean container.
- ▶ Open the cover of the filler funnel for ground coffee.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel and the cover of the bean container.


PRESS BUTTON, the Maintenance button ⚠ lights up.

- ⚠ ▶ Press the Maintenance button.
MACHINE IS CLEANING, water flows repeatedly out of the coffee spout and the cappuccino frother.

The operation is interrupted, **TRAY / GROUNDS EMPTY**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Cleaning is now complete. The IMPRESSA is once more ready for use.

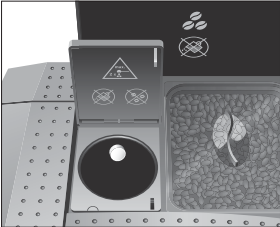

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are specially formulated for your machine.

WARNING





Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling program to run to the end.

-  The descaling program lasts approximately 45 minutes.
-  JURA descaling tablets are available from specialized dealers.
-  If you use a CLEARYL Blue filter cartridge and this is activated, you will not be prompted to descale.
-  If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.


Precondition: COFFEE READY / DESCALE is displayed and the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

DESCALIFYING TIME 45 MIN / START YES

i If you do not want to start descaling just yet, turn the Rotary Switch until **DECALCIFYING / START NO** is displayed. Press the Rotary Switch to exit the maintenance program. The prompt to descale the machine remains active.

- ⚙ ▶ Press the Maintenance button.
TRAY / GROUNDS EMPTY
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

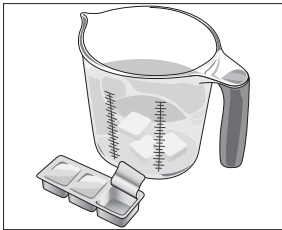

- SOLVENT IN TANK**
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve the contents of one blister (three JURA descaling tablets) in a receptacle holding 20 oz (600 ml) of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.



- SOLVENT IN TANK / PRESS BUTTON**, the Maintenance button ⚙ lights up.
- ▶ Remove the cappuccino frother.
- ▶ Place one receptacle under the hot-water spout and another under the connector of the cappuccino frother.

- ⚙ ▶ Press the Maintenance button.
MACHINE IS DECALCIFYING
Water flows out of the hot-water spout and the connector of the cappuccino frother. The Maintenance button flashes during the descaling operation. The operation stops automatically, **TRAY / GROUNDS EMPTY**.

- ▶ Empty the receptacles from under the hot-water spout and the connector of the cappuccino frother.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

- WATER TANK FILL**
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

- PRESS BUTTON**, the Maintenance button ⚙ lights up.
- ▶ Refit the cappuccino frother.

IMPRESSA Z7 – Quick Reference Guide

- ▶ Place one receptacle under the hot-water and coffee spout and another under the cappuccino frother.
- ⚡ ▶ Press the Maintenance button.
 - MACHINE IS DECALCIFYING, water flows out of the cappuccino frother and the hot-water spout.
 - UNIT IS HEATING, RINSING, water flows out of the coffee spout.
 - The operation stops automatically, TRAY / GROUNDS EMPTY.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
 - Descaling is now complete. The IMPRESSA heats up and is once more ready for use.
- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.