

jura®



Figure: Your machine may look different than the one shown.

J8 (NAA) Instructions for Use



For your safety: read and understand manual before use.

Your J8





1	IMPORTANT SAFEGUARDS	4
2	Control elements	8
3	Preparing and using for the first time	10
	Setting up the machine	10
	Filling the bean container	10
	Determining the water hardness	10
	First-time use	11
	Managing your J8 – the JURA Cockpit	13
	Coffee Eye	13
	Connecting milk	13
	Establishing a WiFi connection	13
4	Preparation	14
	Preparation with preselection (Specialty Selection)	15
	Espresso and coffee	15
	Sweet latte (prepared with syrup attachment)	16
	Latte macchiato, cappuccino and other specialty coffees with milk	17
	Milk and milk foam	17
	Americano and lungo	17
	Espresso doppio	18
	Ground coffee	18
	Hot water	19
	Adjusting the product settings	19
5	Daily operation	20
	Switching the machine on and off	20
	Filling the water tank	20
	Maintenance actions	21
6	Machine settings	22
7	Maintenance	23
	Rinsing the machine	23
	Rinsing the milk system	24
	Cleaning the milk system	24
	Dismantling and rinsing the professional fine foam frother	25

Inserting/changing the filter	26
Cleaning the machine	27
Descaling the machine	28
Descaling the water tank	30
Cleaning the bean container	30
8 Display messages	31
9 Troubleshooting	32
10 Transport and environmentally friendly disposal	33
Transport / Emptying the system	33
Disposal	33
11 Technical data	34
12 Index	35
13 JURA contact details / Legal information	40

1 IMPORTANT SAFEGUARDS

Comply with the instructions for use

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE	NOTICE is used to address practices not related to personal injury.

Follow the basic safety precautions

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot steam, hot water or hot coffee.

SAVE THESE INSTRUCTIONS. Pass them on to any subsequent user.

Intended use The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Special power cord set instructions

- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way.

Extension cords are available and may be used if care is exercised in their use.

If the user chooses to use an extension cord,

- the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
- the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

⚠ WARNING



To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact JURA customer service.


⚠ CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher.
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage. The name plate is located on the underside of the appliance.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts and the cappuccino frother / nozzle.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.
- Ensure that the cappuccino frother / nozzle is correctly fitted and clean. If incorrectly fitted or if they become blocked, the cappuccino frother or its parts might come off.

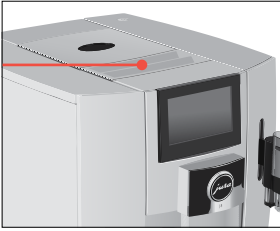NOTICE

NEVER DO
(or you will void your
warranty protection):

- Never clean with scouring powders or hard implements.
 - Ensure that the ventilation slots are not covered.
 - Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.
-
- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
 - Never fill sugar coated coffee beans into the bean container. In case of doubt, call your dealer.
 - Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
 - Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
 - Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
 - Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.
 - Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

2 Control elements

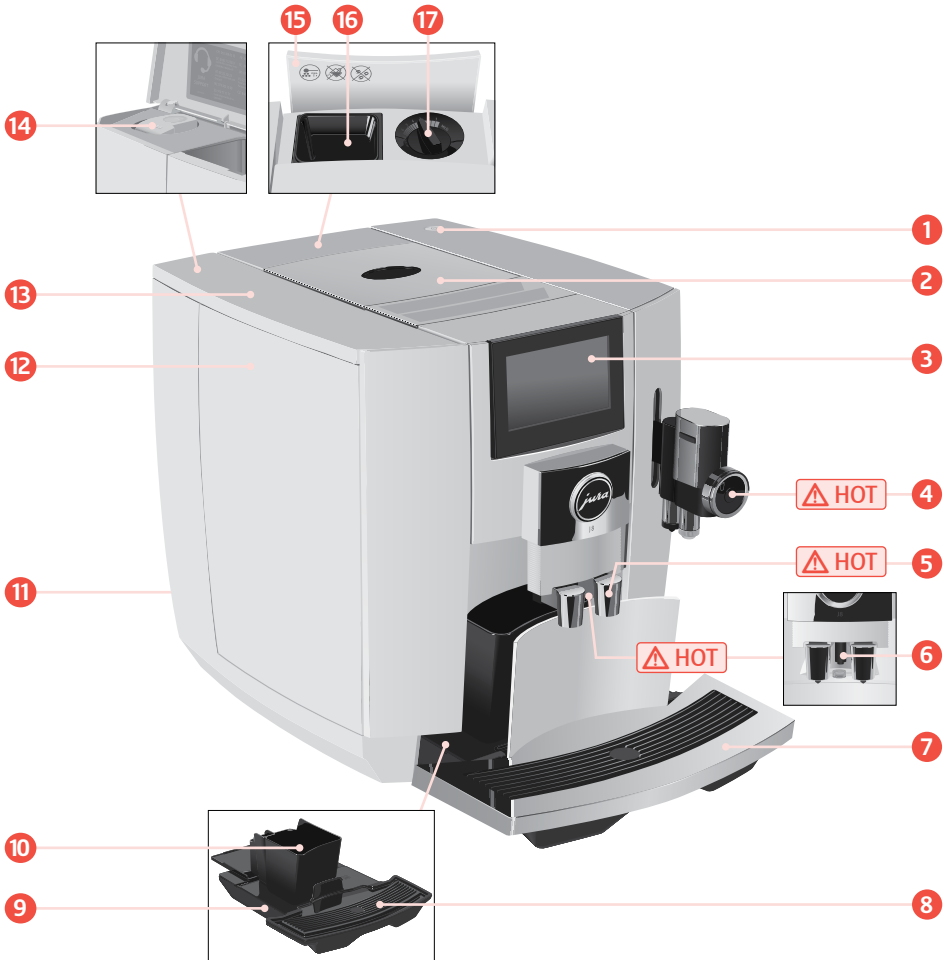

 



Figure: Your machine may look different than the one shown.

- 1 On/Off button 
- 2 Bean container with aroma preservation cover
- 3 Touchscreen display
- 4 Milk system with professional fine foam frother (height-adjustable)
- 5 Height-adjustable coffee spout
- 6 Hot-water spout
- 7 Cup platform
- 8 Insert for drip tray
- 9 Drip tray
- 10 Coffee grounds container
- 11 Power cord
- 12 Water tank
- 13 Water tank cover
- 14 Service socket with JURA WiFi Connect (under cover)
- 15 Filler funnel cover
- 16 Filler funnel for ground coffee (removable)
- 17 Grinder adjustment switch
- 18 Container for milk system cleaning
- 19 Measuring spoon for ground coffee
- 20 Syrup attachment



3 Preparing and using for the first time

Setting up the machine

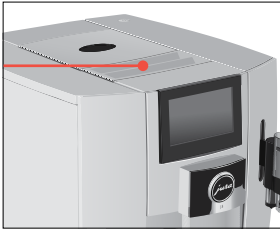

- ▶ Choose a spot for your J8 which protects the machine against overheating. Ensure that the ventilation slots are not covered.
- ▶ Place the J8 on a horizontal surface that is not sensitive to water.

Filling the bean container

The bean container has an aroma preservation cover. This will ensure that your coffee beans retain their aroma for longer.

NOTICE


Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- ▶ Only use roasted, untreated coffee beans to fill the bean container.
-
- ▶ Remove the aroma preservation cover.
 - ▶ Remove any dirt or foreign objects from inside the bean container.
 - ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Determining the water hardness

When you use the machine for the first time, you must set the water hardness. If you know the hardness of your water, go straight to the next section. If you do not know the water hardness, you can find this out first:

- ▶ Hold the test strip under flowing water for one second. Shake off the water.
- ▶ Wait for about 1 minute.
- ▶ You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.

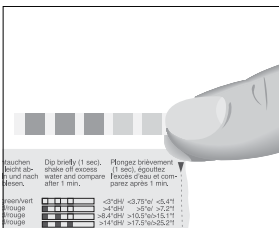

Level	Display German Degree (°dH)	Degrees of general hardness (°dGH)	Parts per million (ppm)	Indicator Strip number of 'reddish' fields
Not active	–	–	–	–
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3

First-time use

WARNING

If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged.
- ▶ Never use a machine which has a defective power cord.


NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

i The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 6 'Machine settings').

Precondition: The bean container has been filled.

- ▶ For machines with a **plug-in** power cord: Connect the power cord to the machine.
- ▶ Insert the power plug into a power socket.
- ▶ Press the On/Off button  to switch the J8 on.

'Choose language' / 'English'

i To display more languages, touch < or > until the desired language comes into focus (e.g. 'English').

- ▶ Touch 'Save'.
- 'Saved' appears briefly on the display.
'Water hardness'

i Please refer to the section above for a description of how to determine the water hardness.

- ▶ Touch < or > to change the water hardness setting.
 - ▶ Touch 'Save'.
- 'Saved' appears briefly on the display.
'Insert filter'

3 Preparing and using for the first time



- ▶ Place a receptacle under the coffee spout.
- ▶ Remove the water tank and rinse it with cold water.



- ▶ Fit the filter cartridge extension supplied on top of the CLEARYL Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.



- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

i The machine automatically detects that you have just inserted the filter cartridge.

‘Saved’

‘Filter is being rinsed’, water flows directly into the drip tray.

‘System is filling’

‘Empty drip tray’

- ▶ Empty the drip tray and put it back into the machine.
‘Accessory’



i You have the option of connecting the J8 to the JURA Cool Control milk cooler (wireless connection). To do this, touch ‘Connect’ and follow the instructions on the display.

- ▶ Touch ‘Next’.
‘Wi-Fi connection’
- ▶ If necessary, scan the QR code with your mobile device to download the JURA app (J.O.E.).





i If you would like to connect the J8 to your home network, touch ‘Connect’ and follow the instructions on the display. You can also establish the connection later on (in the machine settings under ‘Wi-Fi connection’).





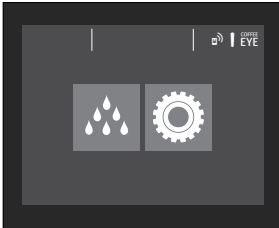

- ▶ Place a receptacle under the coffee spout.

- ▶ Touch 'Next'.
'Machine is rinsing'
The start screen is displayed. Your J8 is ready for use.

Managing your J8 – the JURA Cockpit



The **JURA Cockpit** allows you to manage your J8. Touch  on the start screen to open the JURA Cockpit.

Symbol	Meaning
	'Maintenance' section (blue)
	'Machine setting' section (green)
	The 'Coffee Eye' function (for cup detection) is enabled
 (white)	Your J8 is connected with the network and/or Cool Control via JURA WiFi Connect
 (red)	No connection to the WiFi network
	Filter mode

Coffee Eye


The J8 has an automatic cup detection feature. The 'Coffee Eye' detects when you place a cup under the **coffee spout**. The adapted start screen will now show the black coffee and hot water specialties that you can prepare.

Connecting milk

Your J8 creates fine, creamy, feather-light milk foam with a perfect consistency. The most important requirement for frothing milk is a milk temperature of 39–46 °F (4–8 °C). We would therefore recommend using a milk cooler or a milk container.

- ▶ Remove the protective cover from the professional fine foam frother.
- ▶ Connect the milk pipe to the professional fine foam frother.
- ▶ Connect the other end of the milk pipe to a milk container or a milk cooler.

i Your J8 is equipped with the **HP3** milk system.

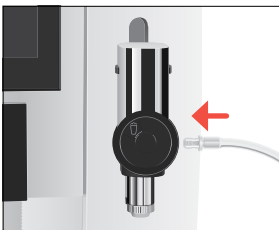


Establishing a WiFi connection

Your J8 can be connected with your JURA app (J.O.E.*).

Precondition: J.O.E.* is installed on your mobile device. The JURA WiFi Connect is inserted into the service socket of your J8.

- ▶ Touch .

3 Preparing and using for the first time

- ▶ Touch the 'Machine setting'  symbol.
- ▶ Touch 'Wi-Fi connection'.
- ▶ Touch 'Connect'.
- ▶ Add a new network in your JURA app (J.O.E.™) and follow the instructions.




4 Preparation

WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

Basic information about preparing drinks:

Aim	What to do
Display more products	Touch    to display additional pages of the start screen; touch the product selector symbol at bottom right to access the product selector view
Change the coffee strength of a single product	While the grinder is operating, swipe across the display with your finger
Change the amount for a single product	During preparation, swipe across the display with your finger
Permanently change the coffee strength, quantity and temperature for any given product	Tap and hold a product for around 2 seconds and configure the settings under 'Product settings'
Changing the consistency of grind	Turn the grinder adjustment switch to the desired position
Stop preparation	Touch 'Cancel'
Place a product on the start screen as a favorite	Tap and hold a product for around 2 seconds and place another product under 'Replace product'

- i** If the screensaver is active, touch the display to return to the start screen.
- i** The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 6 'Machine settings').

- i** Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. You can purchase a JURA cup warmer from your specialized dealer.

Preparation with preselection (Specialty Selection)

Touch '####' to call up the Specialty Selection and activate the desired preselection for your next product:

Specialty Selection	Meaning
'S' – 'Sweet milk foam' (all specialty coffees with milk)	Use the syrup attachment provided to prepare the product with sweet milk foam.
☉ – 'Extra Shot' (sweet latte, cappuccino, caffè latte, latte macchiato, flat white)	The product is prepared with two brewing operations, with half the amount of water – for a specialty coffee with a particularly intense taste.
☞☞ – Double product (espresso, coffee)	The product is prepared twice in succession (2 strokes).
☕ – Ground coffee (all specialty coffees except for espresso doppio)	The product is prepared with ground coffee.

- i** The Specialty Selection closes after 10 seconds.
- i** If you press your preselection **briefly**, the next product will be prepared according to your preselection.
- i** If you press and **hold** your preselection (for 2 seconds), the preselection will be active until you switch off your J8.

Espresso and coffee



Example: Coffee

- ▶ Place a cup under the coffee spout.
 - ▶ Touch 'Coffee'.
- The preset amount of water for coffee flows into the cup.

Sweet latte (prepared with syrup attachment)

The sweet latte is a specialty coffee with sweet milk foam. To make this specialty, use the syrup attachment provided.

- i** All specialty coffees with milk can also be prepared with **sweet milk foam**. To do this, use the syrup attachment provided and before starting preparation, select the Specialty Selection 'S'.

Precondition: Milk is connected to the professional fine foam frother.



- ▶ Remove the cover from the syrup attachment.
- ▶ Fill the syrup attachment with syrup. Fill it to the first, second or third mark depending on the desired sweetness.
- ▶ Close the syrup attachment.
- ▶ Touch 'Sweet Latte'.
'Please connect the syrup attachment, ensuring it is filled with syrup'



- ▶ Remove the lower part of the professional fine foam frother.



- ▶ Connect the syrup attachment to the professional fine foam frother.
- ▶ Turn the setting wheel of the professional fine foam frother to the 'Milk Foam' position.
- ▶ Place a cup under the professional fine foam frother.
- ▶ Touch 'Next'.
The preset amounts of coffee and milk foam flow into the cup.
'Please remove the syrup attachment'
- ▶ Remove the syrup attachment and rinse it thoroughly under running water.
- ▶ Touch 'Next'.

- i** **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the professional fine foam frother after preparing milk.

To ensure that the professional fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see chapter 7 'Maintenance – Cleaning the milk system').

Latte macchiato, cappuccino and other specialty coffees with milk

Your J8 prepares the following specialty coffees with milk at the touch of a button:

- Latte macchiato
- Flat white
- Cappuccino
- Cortado
- Macchiato
- Caffe latte
- Sweet latte

Example: Latte macchiato

Precondition: Milk is connected to the professional fine foam frother.

- ▶ Place a glass under the professional fine foam frother.
- ▶ Turn the setting wheel of the professional fine foam frother to the 'Milk Foam' position.
- ▶ Touch '**Latte macchiato**' (page ○ ● ○).

The preset amount of milk foam flows into the glass.

- i** There is a short interval while the hot milk separates from the milk foam. This allows the typical layers of a latte macchiato to form.

The preset amount of water for espresso flows into the glass.

- i** **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the professional fine foam frother after preparing milk.

To ensure that the professional fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see chapter 7 'Maintenance – Cleaning the milk system').

Milk and milk foam

Your J8 prepares hot milk and milk foam. To do this, turn the setting wheel of the professional fine foam frother to the 'Milk Foam' or 'Milk' position.

- i** **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the professional fine foam frother after preparing milk.

Americano and lungo

For the americano and lungo, the J8 blends the coffee with hot water using a special preparation method. This results in a full-bodied specialty coffee which is particularly easy to digest. You can change the amount of this additional water (see chapter 4 'Preparation – Adjusting the product settings').



Espresso doppio

'Doppio' is Italian for 'double'. When you select Espresso doppio, two espressos are prepared one after the other. The result is an extra full-bodied and aromatic specialty coffee.

Ground coffee

You can choose to use a second coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

- Never add more than two level measuring spoons of ground coffee.
- Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- If you did not fill the machine with a sufficient amount of ground coffee, 'Not enough ground coffee' is displayed and the J8 stops the operation.
- The desired specialty coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the J8 stops the operation and is once more ready for use.

Example: Proceed as follows to prepare an espresso using ground coffee.

- ▶ Place an espresso cup under the coffee spout.
- ▶ Touch '■■■■' to call up the Specialty Selection.
- ▶ Touch ☕.
- ▶ Touch 'Espresso'.
'Please add ground coffee'
- ▶ Open the cover of the filler funnel for ground coffee.
- ▶ Add the desired amount of ground coffee to the filler funnel (max. 2 level measuring spoons).
 - i** The amount of ground coffee determines the intensity and aroma of the beverage, so you can adjust it to your personal preferences.
- ▶ Close the cover of the filler funnel.
- ▶ Touch 'Next'.
The preset amount of water for espresso flows into the cup.



Hot water

The J8 allows you to prepare different variants of hot water:

- 'Hot water'
- 'Hot water for green tea' (in the product selector view)

⚠ CAUTION

There is a danger of scalding from hot water splashes.

- Avoid direct contact with the skin.



Example: Hot water

- Place a cup under the hot-water spout.
 - Touch 'Hot water'.
- The preset amount of water flows into the cup.

Adjusting the product settings

Touch a product for **approximately 2 seconds** to access the settings:


 
- 'Product settings': Specify individual settings such as coffee strength, amount of water, etc.
- 'Product name': Change the name of the product.
- 'Permanent preselection': Specify a permanent preselection (Specialty Selection).
- 'Replace product': Replace the products on the start screen with your favorites.

i If there is a cup under the coffee spout ('Coffee Eye' enabled), not all settings will be possible.

Example: Proceed as follows to change the coffee strength for one coffee.

- Touch 'Coffee' for **approximately 2 seconds**.
- Touch 'Product settings'.


i Depending on the selected product, there will be different settings available which are represented by symbols on your display.

- Touch the  symbol.
The  symbol appears in white.
- Swipe across the coffee beans with your finger to change the coffee strength setting.
- Touch 'Save'.
- Touch 'Back' to return to the start screen.

5 Daily operation

Switching the machine on and off



- ▶ Place one receptacle under the coffee spout and another under the professional fine foam frother.
 - ▶ Press the On/Off button .
- ‘Machine is rinsing’**
Your J8 is switched on or off.

- i** When the machine is switched off, the system is only rinsed if a specialty coffee has been prepared.
- i** If milk has been prepared before switching off, you will be prompted to carry out milk system cleaning (**‘Clean the milk system’**). After 30 seconds the switch-off process continues automatically.

Filling the water tank

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.


NOTICE


Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.
-
- ▶ Remove the water tank and rinse it with cold water.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.



Maintenance actions

Optimal coffee quality depends on many factors. One important prerequisite is regular maintenance of your J8. Carry out the following steps:

Maintenance action	Daily	If necessary	Note
Empty the drip tray and coffee grounds container and rinse with warm water (The insert for the drip tray, including the drip tray itself, and the coffee grounds container are dishwasher-safe)	▪		Always empty the coffee grounds container when the machine is switched on. This is the only way of resetting the coffee grounds counter.
Clean the milk system (if heavily soiled, also dismantle it)		▪	See chapter 7 'Maintenance – Dismantling and rinsing the professional fine foam frother'
Rinse the milk pipe	▪		
Rinse the water tank	▪		
Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth)	▪		
Changing milk pipe with connector HP3		approx. every 3 months	
Change the interchangeable milk spout CX3		approx. every 3 months	
Clean the inside of the water tank with a brush		▪	
Clean the top and bottom of the cup platform		▪	
Thoroughly clean the drip tray and coffee grounds container		▪	In the 'Maintenance' area  of the Cockpit, the message 'Maintenance information' appears.

i You will find more information about maintenance of your J8 in the 'Maintenance'  section in the program item 'Maintenance information'.

6 Machine settings

Touch  to open the Cockpit. In the 'Machine setting'  section, you can make the following settings:

Program item	Explanation
Page '1/3'	
'Coffee Eye'	Enable/disable automatic cup detection with the 'Coffee Eye'
'Product name'	Display product images with/without product names on the start screen
'Number of start screens'	Define number of start screens (1–4)
'Number of products'	Set the number of products on the start screen: 2 products / 5 products
'Wi-Fi connection'	Connect the J8 wirelessly with the JURA app (J.O.E.™) or disconnect again (see chapter 3 'Preparing and using for the first time – Establishing a WiFi connection')
'Switch off after'	Set the automatic switch-off time to save energy (switch-off after 15 minutes, 30 minutes or 1 – 9 hours after the last action on the machine)
'Choose language'	Set language
'Factory setting'	Reset your J8 to factory settings (the machine then switches off)
Page '2/3'	
'Water hardness'	Set the hardness of the water used (1 °dH to 30 °dH) to prevent limescale building up in your machine
'Units'	Set the unit for the amount of water (ml or oz)
'Accessory'	Establish a wireless connection between your J8 and the Cool Control milk cooler or disconnect it again
'Display'	Change display brightness (in 10% increments)
'Product counter'	View product counter
'Maintenance counter'	View the maintenance counter
'Operating instructions'	Show instructions for using the syrup attachment and professional fine foam frother and switching between milk and milk foam
'Aroma control'	Show recommended settings for consistency of grind (enabled/disabled)
Page '3/3'	
'Rinse the milk system'	Set whether milk system rinsing takes place automatically or needs to be started manually
'Empty system'	Empty the system to protect the J8 from frost during transport
'Information'	View software version




 
7 Maintenance

WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Keep children away from the machine while it is performing a maintenance program.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ When using do not eat or drink.
- ▶ Keep maintenance products away from food, drink and animal food.
- ▶ Keep container tightly closed and dry. Keep in a cool place.

Basic information about maintenance:



- Touch  to open the Cockpit. This area consists of a 'Maintenance status'  section and a 'Machine setting'  section. You can manage the maintenance of your J8 in the  section.
- The Cockpit shows maintenance programs that need to be carried out in the form of messages with red backgrounds. Touch a message to go straight to the corresponding maintenance program. Maintenance programs that are due imminently are indicated on your J8 by means of a bar display within the message.
- Carry out each maintenance program when you are prompted to do so.

Rinsing the machine



You can start coffee system rinsing manually at any time.

Precondition: The start screen is displayed.

- ▶ Place one receptacle under the coffee spout and another under the professional fine foam frother.
 - ▶ Touch .
 - ▶ Touch the 'Maintenance' symbol .
 - ▶ Touch 'Rinse the coffee system' to start the rinse operation. 'Machine is rinsing'
- The rinse stops automatically. The start screen is displayed.



Rinsing the milk system

After each milk preparation, the J8 prompts you to perform a milk system rinse.

In the machine settings you can define whether milk system rinsing takes place automatically or needs to be started manually (see chapter 6 'Machine settings').



Precondition: The start screen is displayed.

- ▶ Place a receptacle under the professional fine foam frother.
- ▶ Touch .
- ▶ Touch the 'Maintenance' symbol .
- ▶ Press the 'Rinse the milk system' button to start the rinse operation.

'Milk system is being rinsed'

The rinse stops automatically. The start screen is displayed.

Cleaning the milk system

To ensure that the milk system always works properly, you must clean it **daily** when you have been preparing milk.

 **WARNING**


Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

- ▶ Use only original JURA milk system cleaner.

 **WARNING**

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.


 JURA milk system cleaner is available from specialized dealers.

 Use the container supplied for milk system cleaning.

Precondition: The start screen is displayed. 'Clean the milk system' is displayed in the Cockpit.

- ▶ Touch 'Clean the milk system'.

- ▶ Touch 'Next'.
'Cleaning agent for milk system' / 'Connect the milk tube'
- ▶ Remove the milk pipe from the milk container or milk cooler.
- ▶ Pour one dosing unit of milk system cleaner into the container for milk system cleaning.
- ▶ Place the container under the coffee spout and the professional fine foam frother.

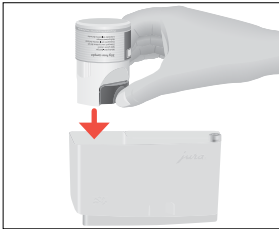


- ▶ Connect the milk pipe to the container.
 - ▶ **i** To connect the milk pipe to the container correctly, the pipe must be fitted with a connector.
- ▶ Touch 'Start'.
The professional fine foam frother and the milk pipe are cleaned.
The operation stops automatically.




Dismantling and rinsing the professional fine foam frother

If insufficient foam is produced when the milk is frothed or milk sprays out of the professional fine foam frother, the frother may be cleaned. If this happens, dismantle and rinse the professional fine foam frother.


- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Remove the professional fine foam frother.

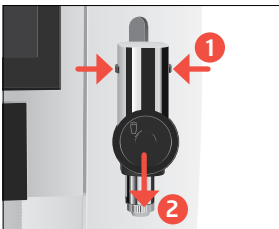


- ▶ Dismantle the professional fine foam frother into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 8.5 oz (250 ml) water and one dosing unit of JURA milk system cleaner. Then rinse the individual parts thoroughly.

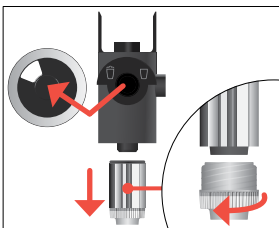

7 Maintenance

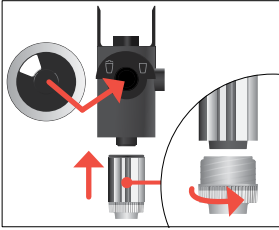

- ▶ Re-assemble the professional fine foam frother.
 - ❗ Ensure that all individual parts are correctly and firmly connected to ensure optimum operation of the professional fine foam frother.

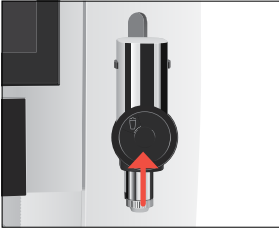

- ▶ Re-fit the professional fine foam frother on the milk system.

Inserting/changing the filter

Once the filter cartridge stops working (depending on the water hardness setting), the J8 will prompt you to change the filter.

- ❗ Your J8 no longer has to be descaled if you are using the CLEARYL Smart filter cartridge.
- ❗ CLEARYL Smart filter cartridges are available from specialized dealers.

Precondition: The start screen is displayed. (Alternatively, 'Change the filter' is displayed in the Cockpit if the filter's capacity has been exhausted.)

- ▶ Remove and empty the water tank.
- ▶ Turn the filter cartridge anticlockwise and remove it along with the extension from the water tank.
- ▶ Remove the old CLEARYL Smart filter cartridge.
- ▶ Fit the filter cartridge extension on top of a **new** CLEARYL Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.





- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank. The machine automatically detects that you have just inserted/changed the filter cartridge.
‘Filter is being rinsed’, water flows directly into the drip tray.
‘Empty drip tray’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The start screen is displayed.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the J8 will prompt you to clean it.

WARNING




Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are formulated especially for your machine.

WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

-  The cleaning program lasts approximately 20 minutes.
-  Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
-  JURA cleaning tablets are available from specialized dealers.

Precondition: ‘Clean’ is displayed in the Cockpit.

- ▶ ▶ Fill the water tank
- ▶ Touch ‘Clean’.
- ▶ Touch ‘Start’.
‘Empty drip tray’ / ‘Empty coffee grounds container’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

7 Maintenance



- ▶ Place one receptacle under the coffee spout and another under the professional fine foam frother.
- ▶ Touch **'Next'**.
'Machine is being cleaned'
The operation is interrupted, **'Add cleaning tablet'**.
- ▶ Open the cover of the filler funnel for ground coffee.



- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
- ▶ Touch **'Next'**.
'Machine is being cleaned'
'Empty drip tray' / 'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Descaling the machine

The J8 builds up deposits of limescale over time and automatically prompts you to descale it when necessary (unless you are using a CLEARYL Smart filter cartridge)

WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are formulated especially for your machine.

WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children **AWAY**.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE

If the descaling operation is interrupted, there may be damage to the machine.


- ▶ Allow the descaling program to run to the end.

 The descaling program lasts approximately 45 minutes.

- ❗ JURA descaling tablets are available from specialized dealers.
- ❗ If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.

Precondition: 'Descale' is displayed in the Cockpit.

- ▶ Touch 'Descale'.
- ▶ Touch 'Start'.
'Empty coffee grounds container' / 'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Pour descaling agent into water tank'
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 17 oz (500 ml) of water. This may take several minutes.
- ▶ Pour the solution into the **empty** water tank and insert it into the machine.

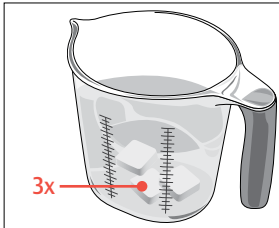

- ▶ Place one receptacle under the coffee spout and another under the professional fine foam frother.
- ▶ Touch 'Next'.
'Machine is being descaled', water flows repeatedly out of the hot-water spout and professional fine foam frother straight into the drip tray.
'Empty coffee grounds container' / 'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Rinse the water tank' / 'Fill water tank'
- ▶ Empty the receptacles and place them back under the coffee spout and the professional fine foam frother.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Touch 'Next'.
Water flows repeatedly out of the hot-water spout and professional fine foam frother straight into the drip tray.
'Empty coffee grounds container' / 'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ❗ If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Descaling the water tank


Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLEARYL Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLEARYL Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: 'Fill bean container' is displayed.


- ▶ Switch the machine off with the On/Off button .
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

8 Display messages


Messages on the start screen

Message	Cause/Result	Action
'Fill water tank'	The water tank is empty. You cannot prepare any products.	▶ Fill the water tank (see chapter 5 'Daily operation – Filling the water tank').
'Empty coffee grounds container' / 'Empty drip tray'	The coffee grounds container is full. / The drip tray is full. You cannot prepare any products.	▶ Empty the coffee grounds container and the drip tray (see chapter 5 'Daily operation – Maintenance actions').
'Drip tray not fitted'	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	▶ Fit the drip tray.
'Fill bean container'	The bean container is empty. You cannot prepare any specialty coffees, but you can prepare hot water and milk.	▶ Fill the bean container (see chapter 3 'Preparing and using for the first time – Filling the bean container').
'Not enough ground coffee'	There is insufficient ground coffee in the machine; the J8 stops the operation.	▶ The next time you prepare a beverage, add more ground coffee (see chapter 4 'Preparation – Ground coffee').

Messages in the Cockpit

Message	Cause/Result	Action
The filter symbol  lights up red. 'Change the filter'	The filter cartridge no longer works.	▶ Replace the CLEARYL Smart filter cartridge (see chapter 7 'Maintenance – Inserting/changing the filter').
'Clean'	The J8 is prompting you to clean it.	▶ Perform cleaning (see chapter 7 'Maintenance – Cleaning the machine').
'Descale'	The J8 is prompting you to descale it.	▶ Perform descaling (see chapter 7 'Maintenance – Descaling the machine').
'Clean the milk system'	The J8 prompts you to clean the milk system.	▶ Perform milk system cleaning (see chapter 7 'Maintenance – Cleaning the milk system').

9 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed or milk sprays out of the professional fine foam frother.	The professional fine foam frother is dirty.	<ul style="list-style-type: none"> ▸ Clean the professional fine foam frother (see chapter 7 'Maintenance – Cleaning the milk system'). ▸ Dismantle and rinse the professional fine foam frother (see chapter 7 'Maintenance – Dismantling and rinsing the professional fine foam frother').
The 'Coffee Eye' reports a cup under the coffee spout even though no cup has been placed there.	The cup detection sensor behind the coffee spout is dirty.	<ul style="list-style-type: none"> ▸ Clean the sensor with a damp cloth.
Coffee only comes out in drips when it is being prepared.	The coffee is ground too finely and obstructs the system.	<ul style="list-style-type: none"> ▸ Put the grinder on a coarser setting or use coarser ground coffee.
	The water hardness may not have been correctly set.	<ul style="list-style-type: none"> ▸ Perform descaling (see chapter 7 'Maintenance – Descaling the machine').
There is dry ground coffee behind the coffee grounds container.	The beans used are resulting in an above-average volume of ground coffee.	<ul style="list-style-type: none"> ▸ Reduce the coffee strength or choose a finer grinder setting (see chapter 4 'Preparation – Adjusting the product settings').
'Fill water tank' is not displayed although the water tank is empty.	There is a lot of limescale in the water tank.	<ul style="list-style-type: none"> ▸ Descale the water tank (see chapter 7 'Maintenance – Descaling the water tank').
Grinder is making a very loud noise.	There are foreign objects in the grinder.	<ul style="list-style-type: none"> ▸ Contact customer support in your country (see chapter 13 'JURA contact details / Legal information').
'Error 2' or 'Error 5' is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	<ul style="list-style-type: none"> ▸ Warm the machine at room temperature.
Other 'Error' messages are displayed.	–	<ul style="list-style-type: none"> ▸ Switch the J8 off with the On/Off button . Contact customer support in your country (see chapter 13 'JURA contact details / Legal information').

i If you were unable to solve the problem, contact customer support in your country (see chapter 13 'JURA contact details / Legal information').



10 Transport and environmentally friendly disposal

Transport / Emptying the system



Keep the packaging for your J8. It should be used to protect the machine during transport. In order to protect the J8 from frost during transport, the system must be emptied.

Precondition: The start screen is displayed.

- ▶ Remove the milk pipe from the professional fine foam frother.
- ▶ Place a receptacle under the professional fine foam frother.
- ▶ Touch .
- ▶ Touch the 'Machine setting'  symbol.
- ▶ Switch to the '3/3' page.
- ▶ Touch 'Empty system'.
- ▶ Remove and empty the water tank.
- ▶ Touch 'Next'.

Steam will continue to be discharged from the professional fine foam frother until the system is empty.


Your J8 is switched off.

Disposal

Please dispose of old machines in an environmentally neutral way.



11 Technical data

Voltage	120 V ~, 60 Hz
Power	1450 W
Conformity mark	
Pump pressure	static, max. 15 bar
Holding capacity of water tank (without filter)	64 oz (1.9 l)
Holding capacity of bean container	10 oz (280 g)
Holding capacity of coffee grounds container	max. 16 portions
Cord length	approx. 47 in. (1.2 m)
Weight	22.7 lb (10,3 kg)
Dimensions (W × H × D)	12.5 × 13.7 × 17.6 in. (31.8 × 34.8 × 44.6 cm)
Milk system with connector	HP3
CLEARYL filter cartridge Smart (RFID technology)	Frequency band 13.56 MHz Max. transmission power < 1 mW
JURA WiFi Connect	Frequency band 2.4 GHz Max. transmission power < 100 mW
JURA type	765

Directives The machine complies with the following directives:

- Standard UL 1082
- Canadian Standard CSA C22.2 No. 64

FCC Rules This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

12 Index

A

- Addresses 40
- Adjusting the product settings 19
- Americano 17
- Aroma preservation cover
 - Bean container with aroma preservation cover 9

B

- Bean container
 - Bean container with aroma preservation cover 9
 - Cleaning 30
 - Filling 10
- Bus bar
 - Technical data 34
- Button
 - On/Off button 9

C

- Caffè latte 17
- Cappuccino 17
- Cleaning
 - Bean container 30
 - Machine 27
- CLEARYL Smart filter cartridge
 - Changing 26
 - Inserting 26
- Cockpit 13, 22, 23
- Coffee 15
- Coffee Eye 13
- Coffee grounds container 9
- Coffee spout
 - Height-adjustable coffee spout 9
- Connecting an accessory 13
- Consistency of grind
 - Grinder adjustment switch 9
- Contact details 40
- Cover
 - Filler funnel for ground coffee 9
 - Water tank 9
- Cup detection
 - Coffee Eye 13
- Cup platform 9
- Customer support 40

D

- Descaling
 - Machine 28
 - Water tank 30
- Display
 - Cockpit 13
 - Touch display 9
- Display messages 31
- Disposal 33
- Drip tray 9
 - Insert 9

E

- Emptying the system 33
- Errors
 - Troubleshooting 32
- Espresso 15
- Espresso doppio 18

F

- Filler funnel
 - Filler funnel for ground coffee 9
- Filling
 - Bean container 10
 - Water tank 20
- Filter
 - Changing 26
 - Inserting 26
- Fine foam frother
 - Professional fine foam frother 9
- First-time use 11
- Flat white 17

G

- Grinder adjustment switch 9
- Ground coffee 18
 - Measuring spoon for ground coffee 9

H

- Height-adjustable coffee spout 9
- Hotline 40
- Hot water 19
- Hot-water spout 9

I

- Important safeguards
 - Safety 4
- Insert for drip tray 9
- Instant coffee
 - Ground coffee 18

J

JURA

Contact details 40

L

Latte macchiato 17

Lungo 17

M

Macchiato 17

Machine

Cleaning 27

Descaling 28

Rinsing 23

Setting up 10

Machine settings 22

Mains cable 9

Maintenance 23

Maintenance actions 21

Measuring spoon for ground coffee 9

Messages, display 31

Milk 17

Connecting milk 13

Milk foam 17

Milk system 34

Clean 24

Professional fine foam frother 9

Rinsing 24

Syrup attachment 9, 16

Milk system rinsing 24

P

Preparation 14, 17

Americano 17

Caffè latte 17

Cappuccino 17

Coffee 15

Espresso 15

Espresso doppio 18

Flat white 17

Ground coffee 18

Hot water 19

Latte macchiato 17

Lungo 17

Macchiato 17

Milk 17

Milk foam 17

Specialty Selection 15

Sweet latte 16

Problems

Troubleshooting 32

Product settings

Adjusting 19

Professional fine foam frother 9

Dismantling and rinsing 25

R

RFID 34

Rinsing

Machine 23

S

Safety

Important safeguards 4

Service socket 9

Setting up

Setting up the machine 10

Specialty Selection

Extra Shot 15

Ground coffee 15

Spout

Hot-water spout 9

Sweet latte 16

Switching off 20

Switching on 20

Syrup attachment 9, 16

T

Technical data 34

Milk system 34

Tel 40

Touch display 9

Transport 33

Troubleshooting 32

U

Use, First-time 11

W

Water hardness

Determining the water hardness 10

Water tank 9

Descaling 30

Filling 20

WiFi 34

WiFi Connect 9, 13

WiFi connection 13

Wireless connection 13, 26, 34

13 JURA contact details / Legal information

JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten
Switzerland

	USA: JURA Inc.	Canada: FAEMA
Customer Service		
Phone	1-800-220-5701	1-(855)-544-8600
E-Mail	info@us.jura.com	info@juracanada.ca
Opening Hours (EST)	Mon – Thu 9 am – 9 pm, Fri 9 am – 8 pm, Sat 9 am – 5 pm	
Distributor Address	20 Craig Road Montvale, NJ 07645	115 Matheson Boulevard East Mississauga, Ontario, L4Z 1X8
Phone	001 (201) 767-3999	1-(905)-501-8600
Fax	001 (201) 767-9684	
Internet	us.jura.com	ca.jura.com

@ You will find additional contact details for your country at **jura.com**.

Technical changes We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colors of the machine. Some details of your J8 may vary.

Feedback Your opinion is important to us! Use the contact details at **jura.com**.

Copyright The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.