

jura[®]



Z10 (NAB)
Instructions for Use



For your safety: read and understand manual before use.

en

es

fr

Your Z10

1	IMPORTANT SAFEGUARDS (for USA)	4
	For your safety (for Canada)	7
2	Control elements	10
3	Preparing and using for the first time	12
	Setting up the machine	12
	Filling the bean container	12
	Determining the water hardness	12
	First-time use	12
	Managing your Z10 – the JURA Cockpit	14
	Connecting milk	15
	Connect the machine with J.O.E.® - your JURA app	15
	Coffee Timer	15
4	Preparation	16
	Worlds of indulgence of your Z10	17
	Easy Mode – one-off settings before preparation	17
	Espresso and coffee	17
	Flat white ('Sweet Foam' world of indulgence)	17
	Coffee ('Cold Brew' world of indulgence)	18
	Chocolate foam and mocaccino	19
	Latte macchiato, cappuccino and other specialty coffees with milk	20
	Americano and special coffee	20
	Espresso doppio	20
	Pot of coffee	20
	Ground coffee	20
	Hot water	21
	Adjusting the product settings	21
5	Daily operation	22
	Switching the machine on and off	22
	Filling the water tank	22
	Maintenance actions	23
6	Machine settings	24
7	Maintenance	25
	Cleaning the milk system	25
	Dismantling and rinsing the dual spout	26
	Inserting/changing the filter	27
	Cleaning the machine	27
	Descaling the machine	28
	Descaling the water tank	28
	Cleaning the bean container	29

8	Display messages	29
9	Troubleshooting	30
10	Transport and environmentally friendly disposal	32
	Transport / Emptying the system	32
	Disposal	32
11	Technical data	32
12	Index	33
13	JURA contact details / Legal information	36

1 IMPORTANT SAFEGUARDS (for USA)

Comply with the instructions for use

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

Follow the basic safety precautions

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot coffee.

SAVE THESE INSTRUCTIONS. Pass them on to any subsequent user.

Intended use

The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper.

JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Special power cord set instructions

- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way. Extension cords are available and may be used if care is exercised in their use.

If the user chooses to use an extension cord,

- the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
- the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.



WARNING

To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact JURA customer service.

CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:


- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher.
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage. The name plate is located on the underside of the appliance.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.

NOTICE

- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.

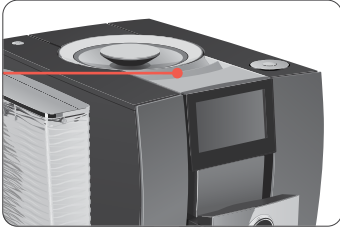

- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

NEVER DO (or you will void your warranty protection):

- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container. In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.

- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

For your safety (for Canada)

Comply with the instructions for use

Before using the machine, read these instructions for use thoroughly and completely and comply with the instructions they contain. Keep these instructions for use close to the machine and pass them on to the next user.

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:

⚠ WARNING

Indicates circumstances that may result in serious injuries or death.

⚠ CAUTION

Indicates circumstances that may result in minor injuries.

CAUTION

Indicates circumstances that may result in damage to property.

Proper use

The machine is intended for private domestic use. It should only be used for coffee preparation and to heat milk and water. Use for any other purpose will be deemed improper.

User limitations

People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

When using the CLEARLYL Smart+ filter cartridge or a JURA Wi-Fi Connect, wireless connections are established. Specific details on the frequency band used and the maximum transmission power can be found in the 'Technical data' section.

Use by children


Children must be able to recognise and understand the potential dangers arising from incorrect use:

- Keep **children under the age of 8** away from the machine, or supervise them constantly.
- **Children aged 8 and over** may only operate the machine without supervision if they have been instructed in how to use it safely.
- Children may not clean or service the machine unless supervised by a responsible person.

- Do not allow children to play with the machine.

What to do in the event of damage

Never use a damaged machine or power cord. This could result in fatal electric shock.


- In the event of signs of damage, disconnect the machine from the mains. To do this, first switch the Z10 off with the On/Off button . Only then should you remove the power plug from the power socket.
- Replace a damaged **plug-in power cord** with an original JURA power cord. Unsuitable power cords may result in consequential damage.
- Only permit authorized JURA service centers to carry out **repairs to the machine** and the **permanently connected power cord**. Unsuitable repairs may result in consequential damage.

Preventing damage

To avoid damage to the machine and the power cord:

 
- The Z10 must not be placed in a cabinet when in use.
- Do not use the Z10 and the power cord near hot surfaces.

- Do not allow the power cord to rub against sharp edges and ensure that it does not become trapped.
- Never allow the power cord to loosely hang down. The power cord could pose a tripping hazard or become damaged.
- Protect the Z10 from weather and direct sunlight.
- Only connect the Z10 to a power grid voltage corresponding to that stated on the rating plate. The rating plate is located on the underside.
- Connect the Z10 directly to a domestic power socket. Using multi-socket adapters or extension cords may cause overheating.
- The surface of the heating element and outer enclosure remains hot after use and the outside of the appliance may retain heat.
- Do not use alkaline or alcohol-based cleaning agents; only use mild cleaning agents and a soft cloth.
- Do not use any coffee beans treated with additives or caramelized coffee beans.
- Only fill the water tank with fresh, cold, non-carbonated water.

- Switch the machine off with the On/Off button  if you are going to be absent for a longer period of time and remove the power plug from the power socket.
- Only use original JURA maintenance products. Use of products that are not explicitly recommended by JURA could damage your Z10.

Danger of electric shock


Water conducts electricity. Do not bring water and electricity into contact with one another:


- Never touch the power plug with wet hands.
- Do not immerse the Z10 and/or power cord in water.
- Do not put the Z10 or any individual parts in the dishwasher.
- Before cleaning, switch the Z10 off with the On/Off button . Always wipe the Z10 with a damp cloth rather than a wet one, and protect it from prolonged exposure to water splash. The Z10 must not be cleaned with a jet of water.
- The Z10 is not suitable for installation on a surface where a jet of water can be used.

Danger of burns, scalding and injury

- Do not touch the spouts during operation. Use the handles provided.
- Optionally, your Z10 can be remotely operated using mobile devices. When preparing a product or initiating a maintenance program, make sure that other people are not put at risk – for example, through contact with the spouts.
- Be careful to ensure that the dual spout is correctly installed and clean. Otherwise parts may come loose. There is a danger of parts being swallowed.

2 Control elements

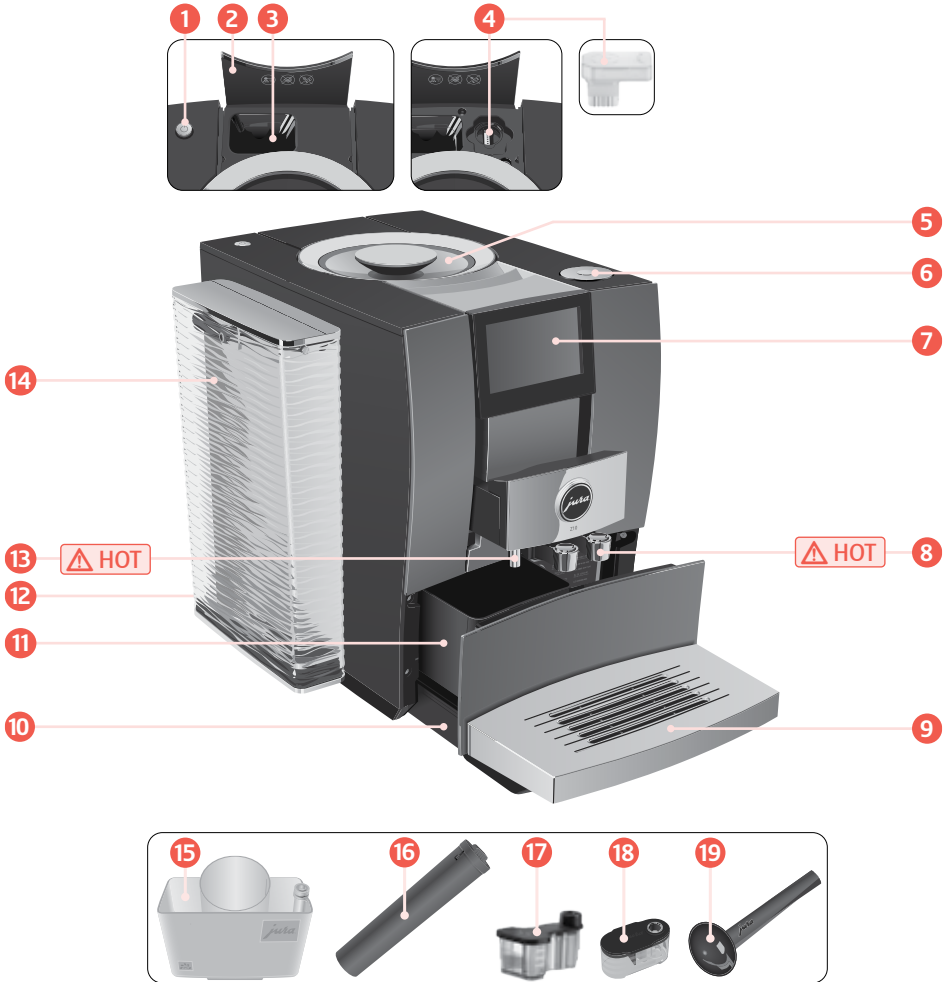


- 1 On/Off button 
- 2 Cover for powder chute for ground coffee
- 3 Powder chute for ground coffee
- 4 Service socket with JURA Wi-Fi Connect (under cover)
- 5 Bean container with aroma preservation cover
- 6 Rotary Switch
- 7 Touch display
- 8 Height- and width-adjustable dual spout
- 9 Cup platform
- 10 Drip tray
- 11 Coffee grounds container
- 12 Power cord (permanently connected or plug-in)
- 13 Hot-water spout
- 14 Water tank
- 15 Container for milk system cleaning
- 16 Filter casing
- 17 Chocolate attachment
- 18 Syrup attachment
- 19 Measuring spoon for ground coffee

3 Preparing and using for the first time

Setting up the machine

- ▶ Choose a spot for your Z10 which protects the machine against overheating. Ensure that the ventilation slots are not covered.

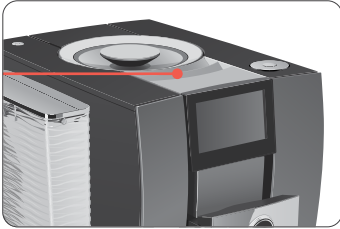

- ▶ Place the Z10 on a horizontal surface that is not sensitive to water.

Filling the bean container

The aroma preservation cover on the bean container ensures that the aroma of the beans is retained for longer.

NOTICE

Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.


- ▶ Only use roasted, untreated coffee beans to fill the bean container.

- ▶ Remove the aroma preservation cover.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Determining the water hardness

When you use the machine for the first time, you must set the water hardness. If you know the hardness of your water, go straight to the next section. If you do not know the water hardness, you can find this out first:

- ▶ Hold the Aquadur® test strip supplied under running water for one second. Shake off the water.
- ▶ Wait for about 1 minute.
- ▶ You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.

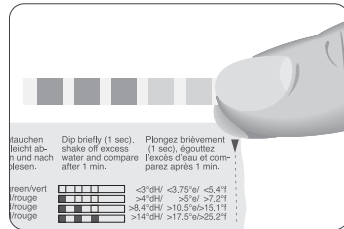

Level	Display German Degree (°dH)	Degrees of general hardness (°dGH)	Parts per million (ppm)	Indicator Strip number of 'reddish' fields
Not active	-	-	-	-
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3

First-time use

⚠ WARNING

If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

 
- ▶ Never use a machine which is damaged.
- ▶ Never use a machine which has a defective power cord.

NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

Precondition: The bean container has been filled.

- ▶ For machines with a **plug-in** power cord: Connect the power cord to the machine.
- ▶ Insert the power plug into a power socket.
- ▶ Press the On/Off button  to switch the Z10 on.

'Language' / 'English'

- i** To display other languages, tap with your finger on < or > until the desired language is in focus (e.g. 'English').

- ▶ Touch 'Save'.
'Saved' appears briefly on the display.
'Water hardness'

- i** Please refer to the section above for a description of how to determine the water hardness.


- ▶ Touch < or > to change the water hardness setting.
- ▶ Touch 'Save'.
'Saved' appears briefly on the display.
'Insert filter'

- ▶ Place a receptacle under the dual spout.




- ▶ Remove the water tank and rinse it with cold water.


- ▶ Open the filter casing.

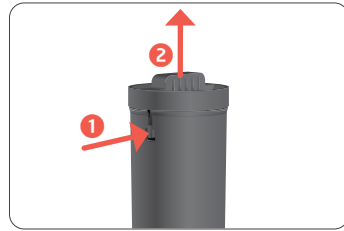

- ▶ Insert the CLEARYL Smart+ filter cartridge.

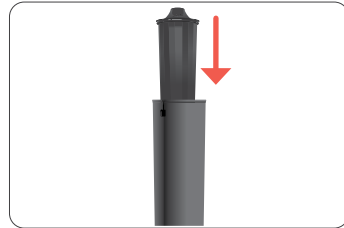

- ▶ Close the filter casing.
- ▶ Insert the filter casing into the water tank.
- ▶ Turn the filter casing clockwise until it audibly clicks into place.

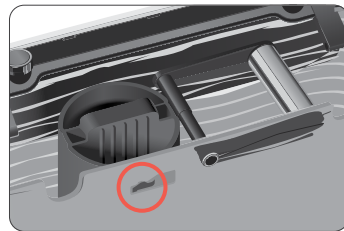

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

- i** The machine automatically detects that you have just inserted the filter cartridge.

'Filter is being rinsed', water flows directly into the drip tray.

'System is filling', water flows out of the hot-water spout.

'Empty drip tray'

en

es

fr

3 Preparing and using for the first time

- ▶ Empty the drip tray and put it back into the machine. Empty the receptacle and place it under the dual spout again.



'Connect to milk cooler'

- i** You have the option of connecting the Z10 to the JURA Cool Control milk cooler (wireless connection). To do this, touch 'Connect' and follow the instructions on the display.

- ▶ Touch 'Next'.
'Connect to J.O.E.'

- i** If you would like to connect the Z10 to your home network, touch 'Connect' and follow the instructions on the display. You can also establish the connection later on (in the machine settings under 'Connect to J.O.E.').

- ▶ Touch 'Next'.
'Support'

- i** Scan the QR code to view our website. If you can't find the information you're looking for in this printed manual, you'll find the answer in our detailed online instructions for use. Support videos show you the necessary maintenance procedures.


- ▶ Touch 'Next'.
'Machine is rinsing' / 'Milk system is being rinsed', water flows out of the dual spout.
'Choose your world'


- i** Now select one of the **worlds of indulgence** of your Z10.






- i** If no selection is made, 'Classic Hot Brew' is set automatically after 10 seconds. You can change this selection at any time.

The start screen is displayed. Your Z10 is ready for use.

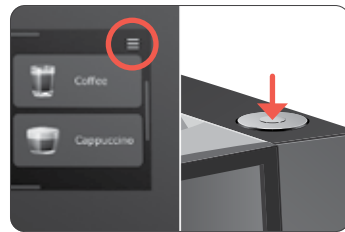Managing your Z10 – the JURA Cockpit

The **JURA Cockpit** allows you to manage your Z10. Tap  at the top right or press the Rotary to access the Cockpit.




Symbol	Meaning
	'Machine settings' area (green)
	'Maintenance' area (blue)
	Filter mode
 (white)	Your Z10 is connected to the network and/or Cool Control via JURA Wi-Fi Connect
 (red)	No connection to the Wi-Fi network

Connecting milk

Your Z10 creates fine, creamy, feather-light milk foam with a perfect consistency. The most important requirement for frothing milk is a milk temperature of 4–8 °C. We would therefore recommend using a milk cooler or a milk container.

- ▶ Connect the milk pipe to the dual spout.

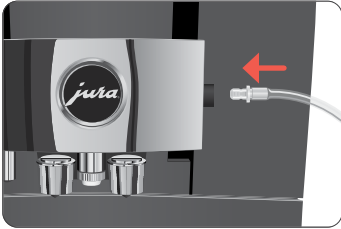

i The milk system of your Z10 has a connector **HP3** and an interchangeable milk spout **CX3**.

- ▶ Connect the other end of the milk pipe to a milk container or a milk cooler.

i After you have prepared a product with milk, the Milk Assistant will prompt you to rinse the milk system. Ideal if you use both milk and milk alternatives.

Connect the machine with J.O.E.® - your JURA app

Your Z10 can be connected with J.O.E.®, your JURA app.



Precondition: J.O.E.® is installed on your mobile device. The JURA Wi-Fi Connect is inserted into the service socket of your Z10.

- ▶ Tap at the top right or press the Rotary Switch to access the JURA Cockpit.
- ▶ Tap the 'Machine settings' symbol .
- ▶ Tap '1/2' at the top right or swipe from right to left across the display to open the second page of the settings.
- ▶ Tap 'Connect to J.O.E.'.
- ▶ Press the 'Connect' button and follow the instructions on the display and in J.O.E.®.

Coffee Timer

In conjunction with the JURA app J.O.E.®, the Coffee Timer offers your favorite coffee at the right time. Preparation can be programmed up to 16 hours in advance.

Please observe the following instructions when using the Coffee Timer:

- The Z10 starts preparation **automatically** at the time you have set. Make sure that there are no people or pets in the immediate vicinity of the spouts at this time. There is a risk of scalding.
- Make sure that the Z10 is properly prepared (water tank and bean container filled) and that all parts are correctly assembled.
- Place the glass or cup under the correct spout.
- Preparing a specialty coffee with **milk**:
 - Make sure that the milk pipe is connected correctly.
 - Use a milk cooler (e.g. the JURA Cool Control) and check whether there is enough milk in the milk cooler.
 - Do not leave milk in an unrefrigerated container for a long period of time. Unrefrigerated milk can spoil quickly.


4 Preparation

⚠ WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

Tap ● ○ ○ ○ ○ or swipe from right to left across the display to show other pages of the start screen.

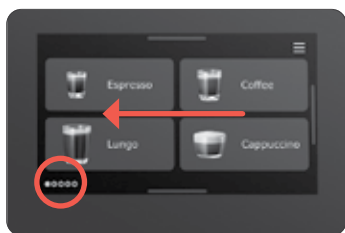

Specialties:

Page ● ○ ○ ○ ○

'Espresso'

'Coffee'

'Lungo'

'Cappuccino'

Page ○ ● ○ ○ ○

'Cortado'

'Flat White'

'Long Black'

'Latte macchiato'

Page ○ ○ ● ○ ○

'Mocaccino'

'Espresso Macchiato'

'Americano'

'Chocolate foam'

Page ○ ○ ○ ● ○

'Caffè latte'

'Espresso doppio'

'Milk foam'

'Milk'

Page ○ ○ ○ ○ ●

'Hot water'


'Hot water for green


'Pot of coffee'


tea'

Turn the Rotary Switch to view the product selector.

Basic information about preparing drinks:

Aim	What to do
Change the amount, coffee strength and temperature for any given product permanently	once: Touch and hold the image of a product for 2 seconds and apply the desired settings for the next preparation in 'Easy Mode' (start preparation by tapping the product image) permanently: Touch and hold the image of a product for 2 seconds, then go to  in the top right-hand corner and apply the desired settings in 'Product settings'




Preparing products with ground coffee Touch and hold the image of a product for 2 seconds and in 'Easy Mode' make the preselection 

Prepare two specialty coffees (for espresso, coffee, americano, special coffee and Long Black) Touch and hold the image of a product for 2 seconds and in 'Easy Mode' make the preselection 

- i** Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. You can purchase a JURA cup warmer from your specialized dealer.

Worlds of indulgence of your Z10

Choose between four worlds of indulgence to prepare the specialties offered by your Z10. Swipe your finger from bottom to top across the start screen to access the selection of the worlds of indulgence:

-  **'Classic Hot Brew'**
 - The product is prepared hot using the classic brewing method.
-  **'Light Brew'**
 - The product is prepared using less ground coffee and at a reduced brewing temperature, making it easier to digest and ready to drink immediately.
- **S** **'Sweet Foam'**
 - The product is prepared with sweet milk foam. Use the syrup attachment supplied for this.
-  **'Cold Brew'**
 - The product is prepared using the Cold Extraction Process, which involves extraction with cold water pulsed at high pressure.

Easy Mode – one-off settings before preparation

Touch and hold the image of a product for 2 seconds to access 'Easy Mode'. Now make one-off settings for the selected product. These settings are **not** saved. Then start preparation by tapping on the image of the product.


In the machine settings (program item **'Easy Mode'**), you can define whether the **caffeine content** or the **coffee strength** can be set in 'Easy Mode'.

Espresso and coffee

Example: Coffee

- Place a cup under the dual spout.




- Tap **'Coffee'** (on page  in the world of indulgence **'Classic Hot Brew'**. The preset amount of water for coffee flows into the cup.

Flat white ('Sweet Foam' world of indulgence)

- i** All specialties with milk can also be prepared with **sweet milk foam**. To do this, switch to the 'Sweet Foam' world of indulgence and use the syrup attachment supplied.

Precondition: Milk is connected to the dual spout.

- Swipe your finger from bottom to top across the start screen to access the selection of the worlds of indulgence.
- Tap **'Sweet Foam'**. The start screen of the 'Sweet Foam' world of indulgence is displayed.
- Remove the cover from the syrup attachment.

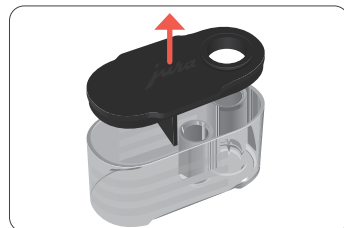


4 Preparation

- ▶ Fill the syrup attachment with syrup. Fill it to the first, second or third mark depending on the desired sweetness.
- ▶ Close the syrup attachment.
- ▶ Tap 'Flat White'.
- ▶ Remove the lower part of the milk system.




- ▶ Attach the syrup attachment to the milk system.

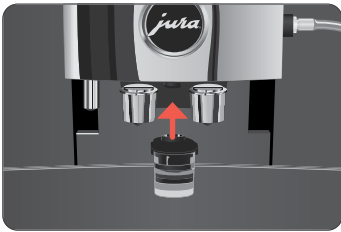

- ▶ Place a cup under the dual spout.
 - ▶ Touch 'Next'.
- The preset amounts of coffee and milk foam flow into the cup.
- ▶ Remove the syrup attachment and rinse it thoroughly under running water.

i The syrup attachment, including the cover, is dishwasher-safe.

- ▶ Refit the lower part of the milk system.

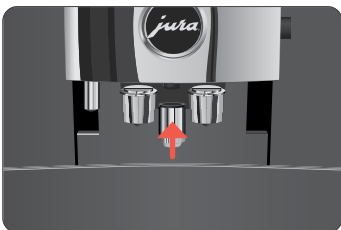

- ▶ Touch 'Next'.

i **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the dual spout after preparing milk.

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** (see chapter 7 'Maintenance – Cleaning the milk system').


Coffee ('Cold Brew' world of indulgence)

i You can prepare many specialties as a **Cold Brew**. To do so, switch to the 'Cold Brew' world of indulgence.

- ▶ Fill the water tank with **cold** water.

i The temperature of the water in the water tank affects the brewing result. Use fresh, cold water.

- ▶ Add ice cubes to a glass according to your own preferences.
- ▶ Place the glass under the dual spout.

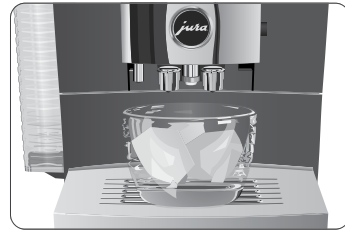

- ▶ Swipe your finger from bottom to top across the start screen to access the selection of the worlds of indulgence.
 - ▶ Tap 'Cold Brew'.
- The start screen of the 'Cold Brew' world of indulgence is displayed.
- ▶ Tap 'Coffee'.
- The preset amount of water for the coffee flows into the glass.

Chocolate foam and mocaccino

The **chocolate attachment** for chocolate syrup enriches the ‘Sweet Foam’ world of indulgence available on your Z10 with chocolate foam for children or mocaccino.


Example: Chocolate foam

Precondition: Milk is connected to the dual spout.


- ▶ Swipe your finger from bottom to top across the start screen to access the selection of the worlds of indulgence.
- ▶ Tap ‘Sweet Foam’.
- ▶ The start screen of the ‘Sweet Foam’ world of indulgence is displayed.
- ▶ Go to page ○●○ on the start screen.
- ▶ Remove the cover from the chocolate attachment.
- ▶ Fill the chocolate attachment with syrup.




- ▶ **i** Fill to the first, second, or third line: whether you want a light or full-bodied cocoa flavour, the amount of chocolate syrup determines the taste.
- ▶ Close the chocolate attachment.
- ▶ Tap ‘Chocolate foam’.
- ▶ Remove the lower part of the milk system.

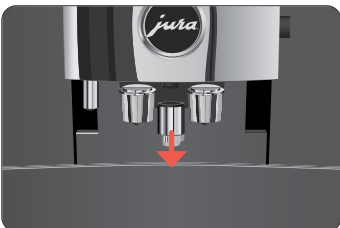

- ▶ Fit the chocolate attachment to the milk system.

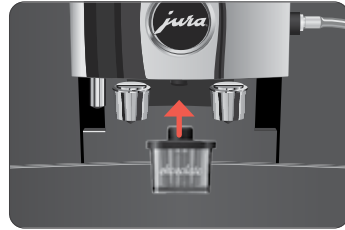

- ▶ Place a glass under the dual spout.
- ▶ Touch ‘Next’.
- ▶ The preset amount of chocolate foam flows into the glass.
- ▶ Remove the syrup attachment and rinse it thoroughly under running water.
- ▶ **i** The chocolate attachment, including the cover, is dishwasher-safe.
- ▶ Refit the lower part of the milk system.

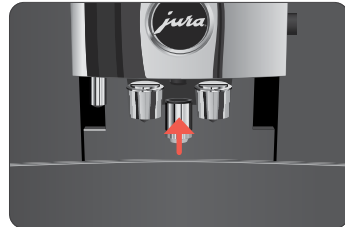

- ▶ Touch ‘Next’.
- ▶ **i** **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the dual spout after preparing milk.

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** (see chapter 7 ‘Maintenance – Cleaning the milk system’).

Latte macchiato, cappuccino and other specialty coffees with milk

Your Z10 prepares the following specialty coffees with milk at the touch of a button:

- ‘Cappuccino’
- ‘Cortado’
- ‘Flat White’
- ‘Latte macchiato’
- ‘Mocaccino’
- ‘Espresso Macchiato’
- ‘Caffè latte’

Example: Latte macchiato

Precondition: Milk is connected to the dual spout.

- ▶ Place a glass under the dual spout.



- ▶ Tap ‘Latte macchiato’ (on page ○●○○○ in the world of indulgence ‘Classic Hot Brew’).

The preset amounts of milk and milk foam flow into the glass.

- i** There is a short interval while the hot milk separates from the milk foam. This allows the typical layers of a latte macchiato to form.

The preset amount of water for espresso flows into the glass.

- i** **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the dual spout after preparing milk.

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** (see chapter 7 ‘Maintenance – Cleaning the milk system’).

Americano and special coffee

For the americano, special coffee and Long Black, the Z10 blends the coffee with hot water using a special preparation method. This results in a full-bodied specialty coffee which is particularly easy to digest. You can change the amount of this additional water (see chapter 4 ‘Preparation – Adjusting the product settings’).

Espresso doppio

‘Doppio’ is Italian for ‘double’. When you select Espresso doppio, two espressi are prepared one after the other. The result is an extra full-bodied and aromatic specialty coffee.

Pot of coffee

Relive the good old days – a ‘pot of coffee’, traditionally made from porcelain, is perfect when you want to slow things down and catch up with friends or family. The ‘pot of coffee’ function provides a large portion of black coffee which is generally served at breakfast or to accompany a piece of cake. Select between 1–5 strokes of black coffee.

You can change the coffee strength and quantity during the first stroke. All further strokes are then prepared with these settings.

Ground coffee

You can choose to use a second coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

Basic information about ground coffee:

- Never add more than two level measuring spoons of ground coffee.
- Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.

- If you did not fill the machine with a sufficient amount of ground coffee, **'Not enough ground coffee'** is displayed and the Z10 stops the operation.
- The desired specialty coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the Z10 stops the operation and is once more ready for use.
- All specialty coffees with ground coffee are always prepared following the same model.

Example: Espresso with ground coffee

- ▶ Place a cup under the dual spout.
- ▶ Tap for **approx. 2 seconds** on **'Espresso'** to call up **'Easy Mode'**.
- ▶ Tap on the preselection ☰.
- ▶ Tap the image of the espresso to start preparation.
- ▶ Open the powder chute cover.



- ▶ Add the desired amount of ground coffee to the filler funnel (max. 2 level measuring spoons).

i The amount of ground coffee determines the intensity and aroma of the beverage, so you can adjust it to your personal preferences.

- ▶ Close the cover.
- ▶ Touch **'Next'**.
The preset amount of water for espresso flows into the cup.

Hot water

The Z10 allows you to prepare different variants of hot water:

- **'Hot water'**
- **'Hot water for green tea'**

⚠ CAUTION

There is a danger of scalding from hot water splashes.

- ▶ Avoid direct contact with the skin.

Example: Hot water

- ▶ Place a cup under the dual spout.



- ▶ Tap **'Hot water'** (on page ○○○○●).
The preset amount of water flows into the cup.

Adjusting the product settings

Tap and hold a product for **approximately 2 seconds** and then tap ⚙ to access the settings:

- **'Product settings'**: Specify individual settings such as coffee strength, amount of water, etc.
- **'Product name'**: Change the name of the product.
- **'Permanent preselection'**: Make a permanent preselection ('ground coffee' ☰ or 'double product' ☰☰).
- **'Product position'**
 - **'Replace product'**: replace a product with any product from the product selector.
 - **'Change position'**: swap the position of two products.

5 Daily operation

- **'Add product'**: add a product. The products after this one move down one position.
- **'Remove product'**: remove a product. The products after this one move up one position.

Example: Proceed as follows to change the coffee strength for one coffee.

- Tap **'Coffee'** for **approximately 2 seconds**.
- Tap **⚙️**.
- Tap **'Product settings'**.

i Depending on the selected product, different settings will be available which are represented by symbols on your display.

- Tap the coffee bean symbol.
- Swipe across the coffee beans with your finger to change the coffee strength setting.
- Touch **'Save'**.
- Touch **'Back'** to return to the start screen.

5 Daily operation

Switching the machine on and off

- Place a receptacle under the dual spout.



- Press the On/Off button **⏻**.

'Machine is rinsing'

Your Z10 is switched on or off.

i When the machine is switched off, the system is only rinsed if a specialty coffee has been prepared.

i If milk has been prepared before switching off, you will be prompted to carry out milk system cleaning (**'Milk system cleaning'**). After 30 seconds, the switch-off process continues automatically.

Filling the water tank

Daily maintenance of the machine and hygiene when handling coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

CAUTION


Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- Only fill the water tank with fresh, cold water.
-
- Remove the water tank and rinse it with cold water.
 - Fill the water tank with fresh, cold water and reinsert the tank.



Maintenance actions

Optimal coffee quality depends on many factors. One important prerequisite is regular maintenance of your Z10. Carry out the following steps:

Maintenance action	Daily	If necessary	Note
Empty the drip tray and coffee grounds container and rinse with warm water (The insert for the drip tray, including the drip tray itself, and the coffee grounds container are dishwasher-safe)	▪		Always empty the coffee grounds container when the machine is switched on. This is the only way of resetting the coffee grounds counter.
Clean the milk system (if heavily soiled, also dismantle and rinse it)		▪	See chapter 7 'Maintenance – Cleaning the milk system'. We recommend dismantling and rinsing the dual spout once a week (see chapter 7 'Maintenance – Dismantling and rinsing the dual spout').
Rinse the milk pipe	▪		
Rinse the water tank	▪		
Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth)	▪		
Changing milk pipe with connector HP3		approx. every 3 months	
Change the interchangeable milk spout CX3		approx. every 3 months	
Clean the inside of the water tank with a brush		▪	
Clean the top and bottom of the cup platform		▪	
Thoroughly clean the drip tray and coffee grounds container		▪	

i You will find more information about the maintenance of your Z10 in the 'Maintenance'  area in program item 'Maintenance information'.

6 Machine settings

Tap  at the top right or press the Rotary Switch to access the Cockpit. The following settings can be made in 'Machine Settings' :

Program item	Explanation
Page <input type="radio"/> <input checked="" type="radio"/>	
'Choose language'	Set language Use J.O.E.®, your JURA app, to download additional languages.
'Water hardness'	Set the hardness of the water used (1 °dH to 30 °dH) to prevent limescale building up in your machine
'Display brightness'	Change display brightness (in 10% increments)
'Switch off after'	To save energy, the switch-off time is set to 30 minutes ex-works. Possible settings: Switch-off after 15 minutes, 30 minutes or 1-9 hours after the last action on the machine If you extend the switch-off time, you therefore accept a high energy consumption. Energy consumption of the Z10 when switched off: 0 W
'Start-up world'	Define whether selection of the world of indulgence should be queried each time the machine is switched on
'Easy Mode'	Define whether the caffeine content or the coffee strength can be set in 'Easy Mode'
'Quality Assistant'	The Quality Assistant supports you in the operation and maintenance of your Z10 – for a long service life and optimum coffee quality at all times (active/inactive)
'Operating instructions'	Show instructions regarding use of the chocolate attachment/syrup attachment (active/inactive)
Page <input type="radio"/> <input checked="" type="radio"/>	
'Connect to milk cooler'	Establish a wireless connection between your Z10 and the Cool Control milk cooler or disconnect it again
'Connect to J.O.E.'	Wirelessly connect the Z10 to the JURA app (J.O.E.®) or disconnect again (see chapter 3 'Preparing and using for the first time – Connect the machine with J.O.E.® - your JURA app')
'Units'	Set the unit for the amount of water (ml or oz)
'Factory settings'	Reset your Z10 to factory settings (the machine then switches off)
'Empty system'	Empty the system to protect the Z10 from frost damage during transport (see chapter 10 'Transport and environmentally friendly disposal – Transport / Emptying the system')
'Product counter'	View product counter
'Maintenance counter'	View the maintenance counter
'Version'	View software version

 
 

 
7 Maintenance

WARNING

Maintenance products may be harmful to health. Liquids may be discharged during the maintenance program. Harmful if swallowed. Causes eye and skin irritation.

- ▶ Keep children AWAY.
- ▶ Keep children away from the machine while it is performing a maintenance program.
- ▶ Avoid contact with skin and eyes.
- ▶ Take precautions to prevent dust generation. Do not inhale dust.
- ▶ When using do not eat or drink.
- ▶ Keep maintenance products away from food, drink and animal food.
- ▶ Keep container tightly closed and dry. Keep in a cool place.

Basic information about maintenance:

- Tap  at the top right or press the Rotary Switch to access the Cockpit. This consists of a 'Maintenance status'  section and a 'Machine settings'  section. You can manage the maintenance of your Z10 in the  section.
- The Cockpit shows maintenance programs that need to be carried out in the form of messages with red backgrounds. Touch a message to go straight to the corresponding maintenance program. Maintenance programs that are due imminently are indicated on your Z10 by means of a bar display within the message.
- Carry out each maintenance program when you are prompted to do so.

Cleaning the milk system

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** when you have been preparing milk.

WARNING

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

- ▶ Use only original JURA milk system cleaner.

 
WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

- i** JURA milk system cleaner is available from specialized dealers.
- i** To clean the milk system, use the container supplied.

Precondition: The start screen is displayed.


- ▶ Tap  at the top right or press the Rotary Switch to access the Cockpit.
- ▶ Tap **'Milk system cleaning'**.
- ▶ Touch **'Start'**.
- ▶ Now follow the instructions on the display.
- i** Amount of milk system cleaner required: 1 dosing unit.
- i** To connect the milk pipe to the container correctly, the pipe must be fitted with a connector HP3.

Dismantling and rinsing the dual spout


If insufficient foam is produced when the milk is frothed or milk sprays out of the dual spout, the spout may be dirty. If this happens, dismantle and rinse the dual spout.

i We recommend dismantling and rinsing the dual spout once a week.


- ▶ Remove the milk pipe and rinse it thoroughly under running water.

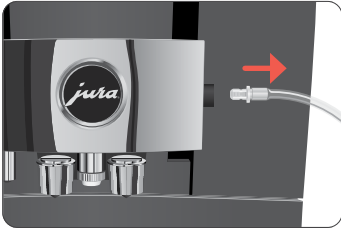

- ▶ Press the releasing devices and pull the cover of the dual spout up and off.

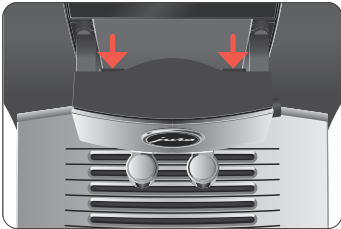


- ▶ Remove the milk system from the dual spout.

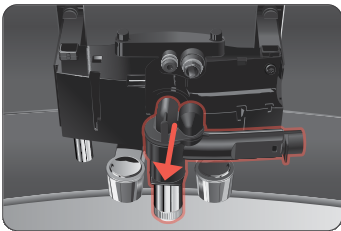


i Do not lever the milk system back and forth to disconnect it from the milk pipe connection. Remove the milk system firmly to prevent it from tilting.

- ▶ Dismantle the milk system into its individual parts.

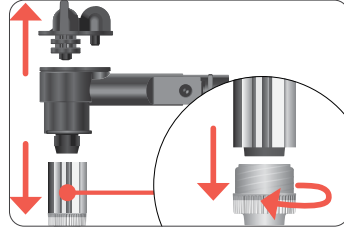


- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 8.5 oz (250 ml) water and one dosing unit of JURA milk system cleaner. Then rinse the individual parts thoroughly.


- ▶ Reassemble the milk system.

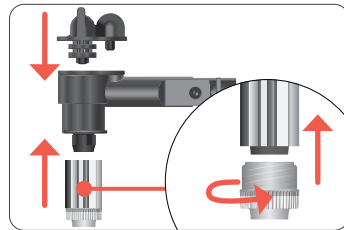

- ▶ Fit the assembled individual parts back in the dual spout and press it firmly.

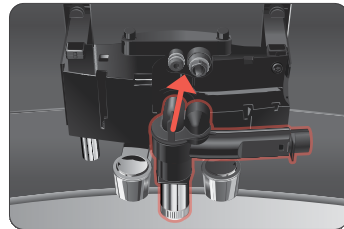

- ▶ Fit the cover of the dual spout.. Make sure the cover of the dual spout is correctly engaged.

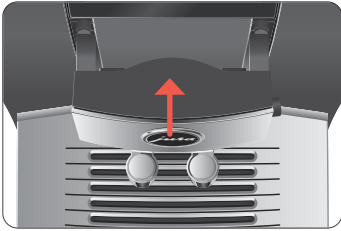


Inserting/changing the filter

Once the filter cartridge stops working (depending on the water hardness setting), the Z10 will prompt you to change the filter.

- i** Your Z10 no longer has to be descaled if you are using the CLEARYL Smart+ filter cartridge.
- i** CLEARYL Smart+ filter cartridges are available from specialized dealers.

Precondition: 'Filter change' is displayed in the Cockpit.

- ▶ Tap  at the top right or press the Rotary Switch to access the Cockpit.
- ▶ Tap 'Filter change'.
- ▶ Touch 'Start'.
- ▶ Now follow the instructions on the display.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the Z10 will prompt you to clean it.

WARNING

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are formulated especially for your machine.


WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Take precautions to prevent dust generation. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

- i** The cleaning program lasts approximately 20 minutes.
- i** Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialized dealers.

Precondition: 'Cleaning' is displayed in the Cockpit.

- ▶ Fill the water tank.
- ▶ Tap  at the top right or press the Rotary Switch to access the Cockpit.
- ▶ Tap 'Cleaning'.
- ▶ Touch 'Start'.
- ▶ Now follow the instructions on the display.
- i** You need 1 JURA cleaning tablet.

Descaling the machine

The Z10 builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLEARLYL Smart+ filter cartridge, you will not be prompted to descale.

⚠ WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are formulated especially for your machine.

⚠ WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Take precautions to prevent dust generation. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.


NOTICE

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling program to run to the end.

- i** The descaling program lasts approximately 20 minutes.
- i** JURA descaling tablets are available from specialized dealers.
- i** If the descaling agent comes into contact with sensitive surfaces (e.g., marble), it may cause damage. Clean up any splashes immediately.

Precondition: 'Descaling' is displayed in the Cockpit.

- ▶ Tap  at the top right or press the Rotary Switch to access the Cockpit.
- ▶ Tap 'Descaling'.
- ▶ Touch 'Start'.
- ▶ Now follow the instructions on the display.

- i** You need 3 JURA descaling tablets.
- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Descaling the water tank


Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLEARLYL Smart+ filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLEARLYL Smart+ filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: ‘Fill bean container’ is displayed.


- ▶ Switch the machine off with the On/Off button .
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

8 Display messages

Messages on the start screen


Message	Cause/Result	Action
‘Fill water tank’	The water tank is empty. You cannot prepare any products.	▶ Fill the water tank (see chapter 5 ‘Daily operation – Filling the water tank’).
‘Empty grounds’ / ‘Empty drip tray’	The coffee grounds container is full. / The drip tray is full. You cannot prepare any products.	▶ Empty the coffee grounds container and the drip tray (see chapter 5 ‘Daily operation – Maintenance actions’).
‘Drip tray not fitted’	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	▶ Fit the drip tray.
‘Fill bean container’	The bean container is empty. You cannot prepare any specialty coffees, but you can prepare hot water and milk.	▶ Fill the bean container (see chapter 3 ‘Preparing and using for the first time – Filling the bean container’).
‘Not enough ground coffee’	There is insufficient ground coffee in the machine; the Z10 stops the operation.	▶ The next time you prepare a beverage, add more ground coffee (see chapter 4 ‘Preparation – Ground coffee’).
‘Spout is not fitted’	The cover of the dual spout has not been fitted.	▶ Correctly fit the cover of the dual spout.

Messages in the Cockpit

Message	Cause/Result	Action
The filter symbol  lights up red. 'Filter change'	The filter cartridge is used up.	▶ Replace the CLEARYL Smart+ filter cartridge (see chapter 7 'Maintenance – Inserting/ changing the filter').
'Cleaning'	The Z10 is prompting you to clean it.	▶ Perform cleaning (see chapter 7 'Maintenance – Cleaning the machine').
'Descaling'	The Z10 is prompting you to descale it.	▶ Perform descaling (see chapter 7 'Maintenance – Descaling the machine').
'Milk system cleaning'	The Z10 prompts you to clean the milk system.	▶ Perform milk system cleaning (see chapter 7 'Maintenance – Cleaning the milk system').

9 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed or milk sprays from the dual spout.	The dual spout is dirty.	<ul style="list-style-type: none"> ▶ Make sure the cover of the dual spout is correctly fitted. ▶ Clean the milk system in the dual spout (see chapter 7 'Maintenance – Cleaning the milk system'). ▶ Dismantle and rinse the dual spout (see chapter 7 'Maintenance – Dismantling and rinsing the dual spout').
	The milk and milk foam temperature is set too high.	▶ Set a lower milk and milk foam temperature for the product.
With specialty coffees with a finer grinder setting, the coffee only flows in drips.	The coffee has been ground too finely and is blocking the system.	▶ If possible, set the consistency of grind for the specialty coffee 1–2 levels coarser.
Coffee only comes out in drips when it is being prepared.	The coffee has been ground too finely and is blocking the system.	▶ Use more coarsely ground coffee (see chapter 4 'Preparation – Ground coffee').
	The water hardness may not have been correctly set.	▶ Perform descaling (see chapter 7 'Maintenance – Descaling the machine').

 Problem	Cause/Result	Action
There is dry ground coffee behind the coffee grounds container.	The beans used are resulting in an above-average volume of ground coffee.	▶ Reduce the coffee strength or choose a finer grinder setting (see chapter 4 'Preparation – Adjusting the product settings').
'Fill water tank' is not displayed although the water tank is empty.	There is a lot of limescale in the water tank.	▶ Descale the water tank (see chapter 7 'Maintenance – Descaling the water tank').
Grinder is making a very loud noise.	There are foreign objects in the grinder.	▶ Contact customer support in your country (see chapter 13 'JURA contact details / Legal information').
'ERROR 2' or 'ERROR 5' is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	▶ Warm the machine at room temperature.
Other 'ERROR' messages are displayed.	–	▶ Switch the Z10 off using the On/Off button  . Contact customer support in your country (see chapter 13 'JURA contact details / Legal information').
Little or no steam comes out of the dual spout. The pump is very quiet.	The connector of the milk system in the dual spout may be blocked by milk residues or limescale fragments loosened during descaling.	<ul style="list-style-type: none"> ▶ Press the releasing devices and pull the cover of the dual spout up and off. ▶ Remove the milk system from the dual spout. ▶ Unscrew the black connector with the aid of the hexagonal hole on the measuring spoon for ground coffee. ▶ Clean the connector thoroughly. ▶ Screw the connector back on by hand. ▶ Carefully tighten it using the hexagonal hole on the measuring spoon, turning by no more than a quarter of a rotation.

i If you were unable to solve the problem, contact customer support in your country (see chapter 13 'JURA contact details / Legal information').

10 Transport and environmentally friendly disposal

Transport / Emptying the system

 

Keep the packaging for your Z10. It should be used to protect the machine during transport.

In order to protect the Z10 from frost during transport, the system must be emptied.

Precondition: The start screen is displayed.

- ▶ Remove the milk pipe from the dual spout.
- ▶ Place a receptacle under the dual spout.




- ▶ Tap  at the top right or press the Rotary Switch to access the Cockpit.
- ▶ Tap the 'Machine settings' symbol .
- ▶ Tap '1/2' at the top right to open the second page of the settings.
- ▶ Tap 'Empty system'.
- ▶ Remove and empty the water tank.
- ▶ Touch 'Next'.
Steam will continue to be discharged from the dual spout and the hot-water nozzle until the system is empty.
Your Z10 is switched off.

Disposal

Please dispose of old machines in an environmentally neutral way.



11 Technical data

Voltage	120 V ~, 60 Hz
Power	1450 W
Conformity mark	
Pump pressure	static, max. 15 bar
Holding capacity of water tank	81 oz (2.4 l)
Holding capacity of bean container	10 oz (280 g)
Holding capacity of coffee grounds container	max. 20 portions
Cord length	47 in. (1.2 m)
Weight	26.5-27.1 lb (12.0-12.3 kg) (depending on machine version)
Dimensions (W × H × D)	12.6 × 14.3 × 18.5 in. (32 × 36.3 × 47 cm)
Milk system with connector	HP3
Interchangeable milk spout	CX3
CLEARYL Smart+ filter cartridge (RFID technology)	Frequency band 13.56 MHz Max. transmission power < 1 mW
JURA Wi-Fi Connect (Wi-Fi connection)	Frequency band 2.4 GHz Max. transmission power < 100 mW
JURA type	778

Directives

The machine complies with the following directives:

- Standard UL 1082
- Canadian Standard CSA C22.2 No. 60335-2-15

FCC Rules

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

12 Index**A**

- Addresses 36
- Adjusting the product settings 21
- Americano 20
- Aroma preservation cover
 - Bean container with aroma preservation cover 11

B

- Bean container
 - Bean container with aroma preservation cover 11
 - Cleaning 29
 - Filling 12
- Bus bar
 - Technical data 32
- Button
 - On/Off button 11

C

- Caffè latte 20
- Cappuccino 20
- Children 7
- Chocolate attachment 11, 19
- Chocolate foam 19
- Cleaning
 - Bean container 29
 - Machine 27
- CLEARLY Smart filter cartridge
 - Changing 27
 - Inserting 27
- Cockpit 14, 24, 25
- Coffee 17
- Coffee grounds container 11
- Cold Brew 18
- Contact details 36
- Cup platform 11
- Customer support 36

D

- Damage
 - Preventing damage 8
 - What to do in the event of damage 8
- Descaling
 - Machine 28
 - Water tank 28
- Display
 - Cockpit 14
 - Touch display 11
- Display messages 29
- Disposal 32
- Drip tray 11
- Dual spout
 - Dismantling and cleaning 26
 - Height- and width-adjustable dual spout 11

E

- Emptying the system 32
- Errors
 - Troubleshooting 30
- Espresso 17
- Espresso doppio 20

F

- Filling
 - Bean container 12
 - Water tank 22
- Filter
 - Changing 27
 - Inserting 27
- Filter casing 11
- First-time use 12
- Flat white 17, 20

G

- Ground coffee 20
 - Measuring spoon for ground coffee 11
 - Powder chute for ground coffee 11

H

- Hotline 36
- Hot water 21
- Hot-water spout 11

I

- Important safeguards
 - Safety 4

12 Index

- Instant coffee
 - Ground coffee 20
- Interchangeable milk spout 32

J

- JURA
 - Contact details 36

L

- Latte macchiato 20
- Long Black 20

M

- Macchiato 20
- Machine
 - Cleaning 27
 - Descaling 28
 - Setting up 12
- Machine settings 24
- Maintenance 25
- Maintenance actions 23
- Measuring spoon for ground coffee 11
- Messages, display 29
- Milk
 - Connecting milk 15
- Milk system 32
 - Chocolate attachment 19
 - Clean 25
 - Syrup attachment 11, 17

P

- Pot of coffee 20
- Powder chute
 - Powder chute for ground coffee 11
- Power cord 11
- Preparation 16, 20
 - Americano 20
 - Caffè latte 20
 - Cappuccino 20
 - Chocolate foam 19
 - Coffee 17
 - Cold Brew 18
 - Espresso 17
 - Espresso doppio 20
 - Flat white 17, 20
 - Ground coffee 20
 - Hot water 21
 - Latte macchiato 20

- Long Black 20
- Macchiato 20
- Mocaccino 19
- Pot of coffee 20
- Special coffee 20

- Problems
 - Troubleshooting 30
- Product settings
 - Adjusting 21
- Proper use 7

R

- RFID 32
- Rotary Switch 11

S

- Safety
 - Important safeguards 4
- Safety information 7
- Service socket 11
- Setting up
 - Setting up the machine 12
- Special coffee 20
- Spout
 - Height- and width-adjustable dual spout 11
 - Hot-water spout 11
- Switching off 22
- Switching on 22
- Symbol description 7
- Syrup attachment 11, 17

T

- Technical data 32
 - Interchangeable milk spout 32
 - Milk system 32
- Tel 36
- Touch display 11
- Transport 32
- Troubleshooting 30

U

- Use, first time 12
- Users 7

W

- Water hardness
 - Determining the water hardness 12
- Water tank 11
 - Descaling 28
 - Filling 22
- Wi-Fi 32
- Wi-Fi Connect 11, 15
- Wi-Fi connection 15
- Wireless connection 12, 15, 27, 32

13 JURA contact details / Legal information

13 JURA contact details / Legal information

JURA Elektroapparate AG, Kaffeeweltstrasse 10,
CH-4626 Niederbuchsiten, Switzerland

	USA: JURA Inc.	Canada: FAEMA
Customer Service		
Phone	1-800-220-5701	1-(855)-544-8600
Email	info@us.jura.com	info@juracanada.ca
Hours of Operation (EST)	Mon – Fri 8 am – 8 pm, Sat 9 am – 5 pm	
Distributor Address	20 Craig Road Montvale, NJ 07645	115 Matheson Boulevard East Mississauga, Ontario, L4Z 1X8
Phone	1 (201) 767-3999	1-(905)-501-8600
Fax	1 (201) 767-9684	
Internet	us.jura.com	ca.jura.com

i You will find additional contact details for your country at **jura.com**.

i If you need assistance with using your machine, you can find this at **jura.com/service**.

Technical changes

We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colors of the machine. Some details of your Z10 may vary.

Feedback

Your opinion is important to us! Use the contact details at **jura.com**.

Copyright

The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.